

# **HD32MT.1**

## **PROGRAMMABLE DATA LOGGER**

**ENGLISH**

Our instruments' quality level is the results of the product continuous development. This can bring about differences between the information written in this manual and the instrument that you have purchased. We cannot entirely exclude errors in the manual, for which we apologize.

Data, figures and descriptions contained in this manual cannot be legally asserted. We reserve the right to make changes and corrections without prior notice.

# TABLE OF CONTENTS

<b>1</b>	<b>INTRODUCTION .....</b>	<b>4</b>
1.1	GLOSSARY .....	6
<b>2</b>	<b>TECHNICAL CHARACTERISTICS .....</b>	<b>7</b>
<b>3</b>	<b>DESCRIPTION OF TERMINAL BOARD .....</b>	<b>8</b>
<b>4</b>	<b>INSTALLATION .....</b>	<b>10</b>
4.1	START-UP OF AN ALREADY CONFIGURED DATA LOGGER .....	10
4.2	START-UP BY MODIFYING THE DATA LOGGER CONFIGURATION .....	11
4.3	DATA LOGGER INSTALLATION WITH CREATION OF THE CONFIGURATION .....	12
<b>5</b>	<b>ELECTRICAL CONNECTIONS.....</b>	<b>13</b>
5.1	POWER SUPPLY INPUT.....	13
5.2	POWER SUPPLY OUTPUTS.....	15
5.3	ANALOG INPUTS .....	16
5.3.1	CONNECTION OF SENSORS AND TRANSMITTERS WITH OUTPUT VOLTAGE .....	17
5.3.2	CONNECTING SENSORS AND TRANSMITTERS WITH CURRENT OUTPUT .....	20
5.3.3	CONNECTION OF 2-WIRE RESISTIVE SENSORS .....	22
5.3.4	CONNECTION OF 3-WIRE POTENTIOMETRIC SENSORS .....	23
5.3.5	CONNECTION OF 4-WIRE RESISTIVE SENSORS .....	23
5.3.6	CONNECTION OF THERMOCOUPLES .....	24
5.4	DIGITAL INPUTS AND OUTPUTS .....	25
5.5	INPUTS FOR PULSE COUNTING .....	26
5.5.1	HIGH FREQUENCY PULSE COUNTING .....	26
5.5.2	COUNTING NUMBER OF OPENING/CLOSING OF VOLTAGE-FREE CONTACTS .....	26
5.6	RS485 CONNECTION.....	28
5.7	ALARM OUTPUTS.....	29
5.8	GROUNDING .....	29
5.9	HOW TO READ THE WIRING DIAGRAM .....	31
5.10	EXAMPLES OF METEOROLOGICAL STATIONS.....	32
<b>6</b>	<b>CONNECTION TO THE PC .....</b>	<b>36</b>
6.1	DIRECT CONNECTION VIA CABLE .....	36
6.2	CONNECTION VIA RADIO MODEM (ONLY FOR THE RADIO MODEM VERSION) .....	37
6.3	CONNECTION VIA LOCAL AREA NETWORK WITH TCP/IP PROTOCOL .....	38
<b>7</b>	<b>GSM CONNECTION .....</b>	<b>39</b>
<b>8</b>	<b>CHANGING THE CONFIGURATION.....</b>	<b>40</b>
8.1	CONNECTING TO THE PC AND READING THE PROGRAM INSTALLED .....	40
8.2	CHANGING THE INSTALLED PROGRAM .....	44
8.2.1	CHANGING THE MEASUREMENT RECORDING INTERVAL.....	44
8.2.2	CHANGING THE PARAMETERS OF A SENSOR .....	46

8.2.3	ADDING A SENSOR .....	48
8.2.4	REMOVING A SENSOR .....	51
8.3	INSTALLING THE CHANGED PROGRAM IN THE DATA LOGGER .....	53
<b>9</b>	<b>CREATION OF THE CONFIGURATION .....</b>	<b>54</b>
9.1	CREATING THE PROGRAM FILE .....	54
9.2	LIST OF SENSORS AND SETTING OF PARAMETERS .....	55
9.2.1	UNIPOLAR VOLTAGE AND BIPOLAR VOLTAGE CONFIGURATION .....	60
9.2.2	RESISTANCE DIVIDER CONFIGURATION .....	63
9.2.3	RESISTANCE DIVIDER 4-WIRE CONFIGURATION .....	67
9.2.4	ADDER PULSES → DIGITAL/ANALOG PULSES CONFIGURATION .....	69
9.2.5	ADDER PULSES → SWITCH CLOSURE CONFIGURATION .....	72
9.2.6	INPUT CURRENT 4-20 AND 0-20MA CONFIGURATION.....	74
9.2.7	DIGITAL INPUT CONFIGURATION .....	77
9.2.8	MODBUS RTU CONFIGURATION .....	78
9.2.9	U.S. ANEMOMETERS HD2003 AND U.S. ANEMOMETERS HD52.3D CONFIGURATIONS	80
9.2.10	RAIN GAUGE CONFIGURATION .....	82
9.2.11	RADIOMETRY CONFIGURATION .....	83
9.2.12	Pt100-Pt1000 THERMOMETERS CONFIGURATION.....	86
9.2.13	THERMOCOUPLES CONFIGURATION .....	88
9.2.14	NTC THERMISTOR CONFIGURATION .....	90
9.2.15	ERROR MESSAGES WHILE SETTING THE PARAMETERS .....	92
9.3	CREATING THE STORE TABLES .....	92
9.3.1	ALARMS TABLE .....	96
9.3.2	CAPACITY OF THE INTERNAL MEMORY .....	98
9.4	SAVING THE PROGRAM IN THE PC .....	100
9.5	INSTALLING THE PROGRAM IN THE DATA LOGGER .....	102
9.5.1	ERROR MESSAGES DURING CONNECTION .....	105
<b>10</b>	<b>MEMORY CARD.....</b>	<b>106</b>
<b>11</b>	<b>LED SIGNALS.....</b>	<b>107</b>
<b>12</b>	<b>HOUSING OPENING ALARM .....</b>	<b>108</b>
<b>13</b>	<b>DISPLAY .....</b>	<b>109</b>
13.1	DISPLAY FUNCTIONS .....	110
13.2	PC-DATA LOGGER CONNECTION IN PRESENCE OF THE DISPLAY .....	113
<b>14</b>	<b>LITHIUM BATTERY REPLACEMENT .....</b>	<b>114</b>
<b>15</b>	<b>MOUNTING THE DATA LOGGER .....</b>	<b>115</b>
<b>16</b>	<b>INSTRUMENT STORAGE .....</b>	<b>116</b>
<b>17</b>	<b>SAFETY INSTRUCTIONS.....</b>	<b>116</b>
<b>18</b>	<b>ORDER CODES .....</b>	<b>117</b>
<b>19</b>	<b>ELEMENTS FOR WEATHER STATION.....</b>	<b>120</b>

# 1 INTRODUCTION

The **HD32MT.1** is a data logger capable of capturing and logging the values measured by a series of sensors connected to its inputs.

The data logger is completely programmable by the user and is therefore very versatile. The supplied **HD32MTLogger** application software, supplied with the instrument, allows simple and intuitive programming by using graphic interfaces, without the need of learning any programming language, thus minimizing the time needed to make the system operational.

The values recorded by the instrument can be transferred to a PC by using the **HD32MTLogger** software. The data logger can be configured to memorize the instant value, the minimum value, the maximum value, the average value and the standard deviation of the measurements. For measurements that require the counting of pulses, the total counted pulses can be stored.

Different acquisition/recording intervals can be programmed per each input. Each recording includes acquisition date and time

The data logger has a "flash" internal memory arranged in circular mode: when the memory is full the new data overwrite the older ones. The number of storable measurements depends on the number of sensors employed on the type of measurement and the simultaneous acquisition by the sensors, or on the acquisition on different moments. For example, with 8 sensors capturing at the same instant you can store 100,000 records, each one composed of 8 instantaneous measurements.

Data can also be directly recorded to a removable **SD**-type memory card with a capacity of **2 GB**. The use of a memory card allows extending the memory capacity of the instrument, allowing not to lose the data when the memory is full.

We have two versions of the data logger, according to the possibility of communication with the PC:

- **Basic version:** the communication with the PC for data transfer or programming is done via cable connection.
- **Version with Radio Modem option:** in addition to the direct cable connection to your PC, you can transfer the data and programming by **VHF** radio using optional external radio modems.

Both versions can be equipped with an optional **GSM** module to be connected externally to the instrument, through which you can send **SMS** alarm messages to cell phones and send the recorded data by **e-mail** or to an **FTP** address.

The instrument can be connected to all common sensors used in industrial and environmental to the instrument, with both analog output and digital output.

The typical sensors that can be connected to the instrument are:

- sensors with analog voltage output, both unipolar and bipolar;
- sensors with analog current output (0...20 mA, 4...20 mA);
- temperature sensors thermocouple (type K, J, T, N, R, S, B, E);
- Pt100/Pt1000 and NTC temperature sensors;
- sensors with digital output TTL level pulse (ON/OFF);
- sensors with open/close contact output (e.g. rain gauges, cup anemometers);
- sensors with RS485 output and MODBUS-RTU protocol;
- anemometers Delta Ohm HD2003 and HD52.3D series.

There are potential-free contact alarm outputs and digital alarm outputs. The outputs are activated if the values measured by sensors connected to data loggers exceed the programmed threshold.



The instrument is particularly suitable for use in weather stations, for the detection and remote transmission of climatic variables. Delta Ohm manufactures a wide range of sensors for measuring environmental variables that can be connected to the data logger, including sensors for measuring temperature, humidity, barometric pressure, wind speed, solar radiation, amount of rainfall, etc.

The data logger can be supplied with a program of measures and stores pre-installed according to specifications of the customer, in order to be operational immediately after installation of the system. The program is installed directly from Delta Ohm to meet the required specifications when ordering.

The system can also be powered by a solar panel and battery of adequate capacity, allowing for installation in remote sites without electrical power.

An internal lithium battery keeps the date and time of the instrument in the absence of external power.


## 1.1 GLOSSARY

<b>Gain</b>	Gain of a device, or the change in output signal compared to the change of the input signal that has generated the output change.
<b>Ground loop</b>	Unwanted current flow caused by the difference in potential between two distinct points of land. It is the cause of noise signal superimposed on the relevant measure.
<b>GPS</b>	<i>Global Positioning System.</i> Navigation system based on a network of satellites capable of sending to a mobile device information on its location and time.
<b>GSM</b>	<i>Global System for Mobile Communication.</i> Digital mobile phone standard based on a capillary network of fixed reception/transmission structures (cellular network) that work as repeater stations for the signals of the mobile devices.
<b>Differential input</b>	Input of a device that can detect the difference between two signals. Requires a 2-wire connection (one wire per signal), and a common reference point for the signals and the device.
<b>Single-line input (single ended)</b>	Device input to detect the value of a signal with respect to a common reference point to the signal and the device. It is also referred to as "single-ended".
<b>Current loop</b>	Two-wire connection between a transmitter and a receiver device in which the signal information is the current value imposed by the transmitter on the line connecting.
<b>Memory Card</b>	Miniature, removable storage device to transfer data from one digital device to another.
<b>Modbus-RTU</b>	Serial communication protocol, widespread especially in industrial environment.
<b>Offset</b>	Fixed value that is added to or subtracted from the value of a signal or a measure.
<b>Radio Modem</b>	Modem device for transmitting radio frequency (wireless).
<b>RS485</b>	Standard two-wire serial transmission that allows the long distance connection of multiple devices in a multi point network. Usually used in industrial environment.
<b>Shunt</b>	Resistor inserted in series to a line, which allows to convert the current flowing along the line in a voltage signal.
<b>Common voltage</b>	Maximum voltage that can be applied to the input of a device, compared to the reference of its supply voltage, without causing saturation.

## 2 TECHNICAL CHARACTERISTICS

<b>Sizes</b>	222x140x63 mm
<b>Weight</b>	About 1 kg
<b>Case material</b>	Coated aluminium
<b>Operating conditions</b>	-20 ... 50 °C, 0 ... 85% RH no condensation
<b>Storage temperature</b>	-25 ... 65 °C
<b>Power Supply</b>	12 ... 30 Vdc
<b>Absorption</b>	40 mA @ 12 Vdc
<b>Data acquisition interval from sensors</b>	Programmable from 1 to 60 seconds
<b>Data logging interval</b>	Programmable from 2 seconds to 24 hours
<b>Storage capacity</b>	4 MB internal memory SD memory card reader up to 2 GB
<b>Number of samples that can be stored</b>	The storage of a record consisting of N values requires (4 x N) bytes of memory plus 8 bytes for the date and time.
<b>Analog inputs</b>	8 channels, each channel can be used as a differential input or alternatively as 2 single-ended inputs. Measurement ranges: ±25 mV, ±100 mV, ±1000 mV, ±2500 mV Resolution: 16 bit, Accuracy: 0.01% f.s. Input impedance: 100 Mohm
<b>Digital input/output ports (I/O)</b>	8 ports, each configurable as an input for connecting a sensor or alarm output. TTL logic levels (0⇒Vin<0.8 V, 1⇒Vin>3 V) Max. input voltage: 5.5 V
<b>Inputs for high frequency pulse counting</b>	2 inputs Frequency of pulses 50 kHz max. TTL logic levels (0⇒Vin<0.8 V, 1⇒Vin>3 V) Minimum pulse duration 10 µs
<b>Inputs for number of potential-free contact opening/closing counting</b>	2 insulated inputs Switch frequency 50 Hz max. Minimum opening or closing time 10 ms
<b>RS485 connection</b>	1 RS485 port for connection of anemometers HD2003 and HD52.3D... series, and sensors with MODBUS-RTU protocol
<b>RS232 connection</b>	2 RS232 ports, one for connection to PC or to <b>optional</b> Radio Modem and one for connection to <b>optional</b> GSM module. Sub-D 9-pole male connectors
<b>Alarm outputs</b>	2 insulated voltage-free contact outputs Contact: max. 1 A @ 30 Vdc resistive load You can configure the single digital I/O ports as alarm outputs
<b>Auxiliary supply outputs</b>	+5V regulated, max. 500 mA +Vsw (switched): with same value of the power input, <b>it is active only during acquisition of measurements</b>

### 3 DESCRIPTION OF TERMINAL BOARD

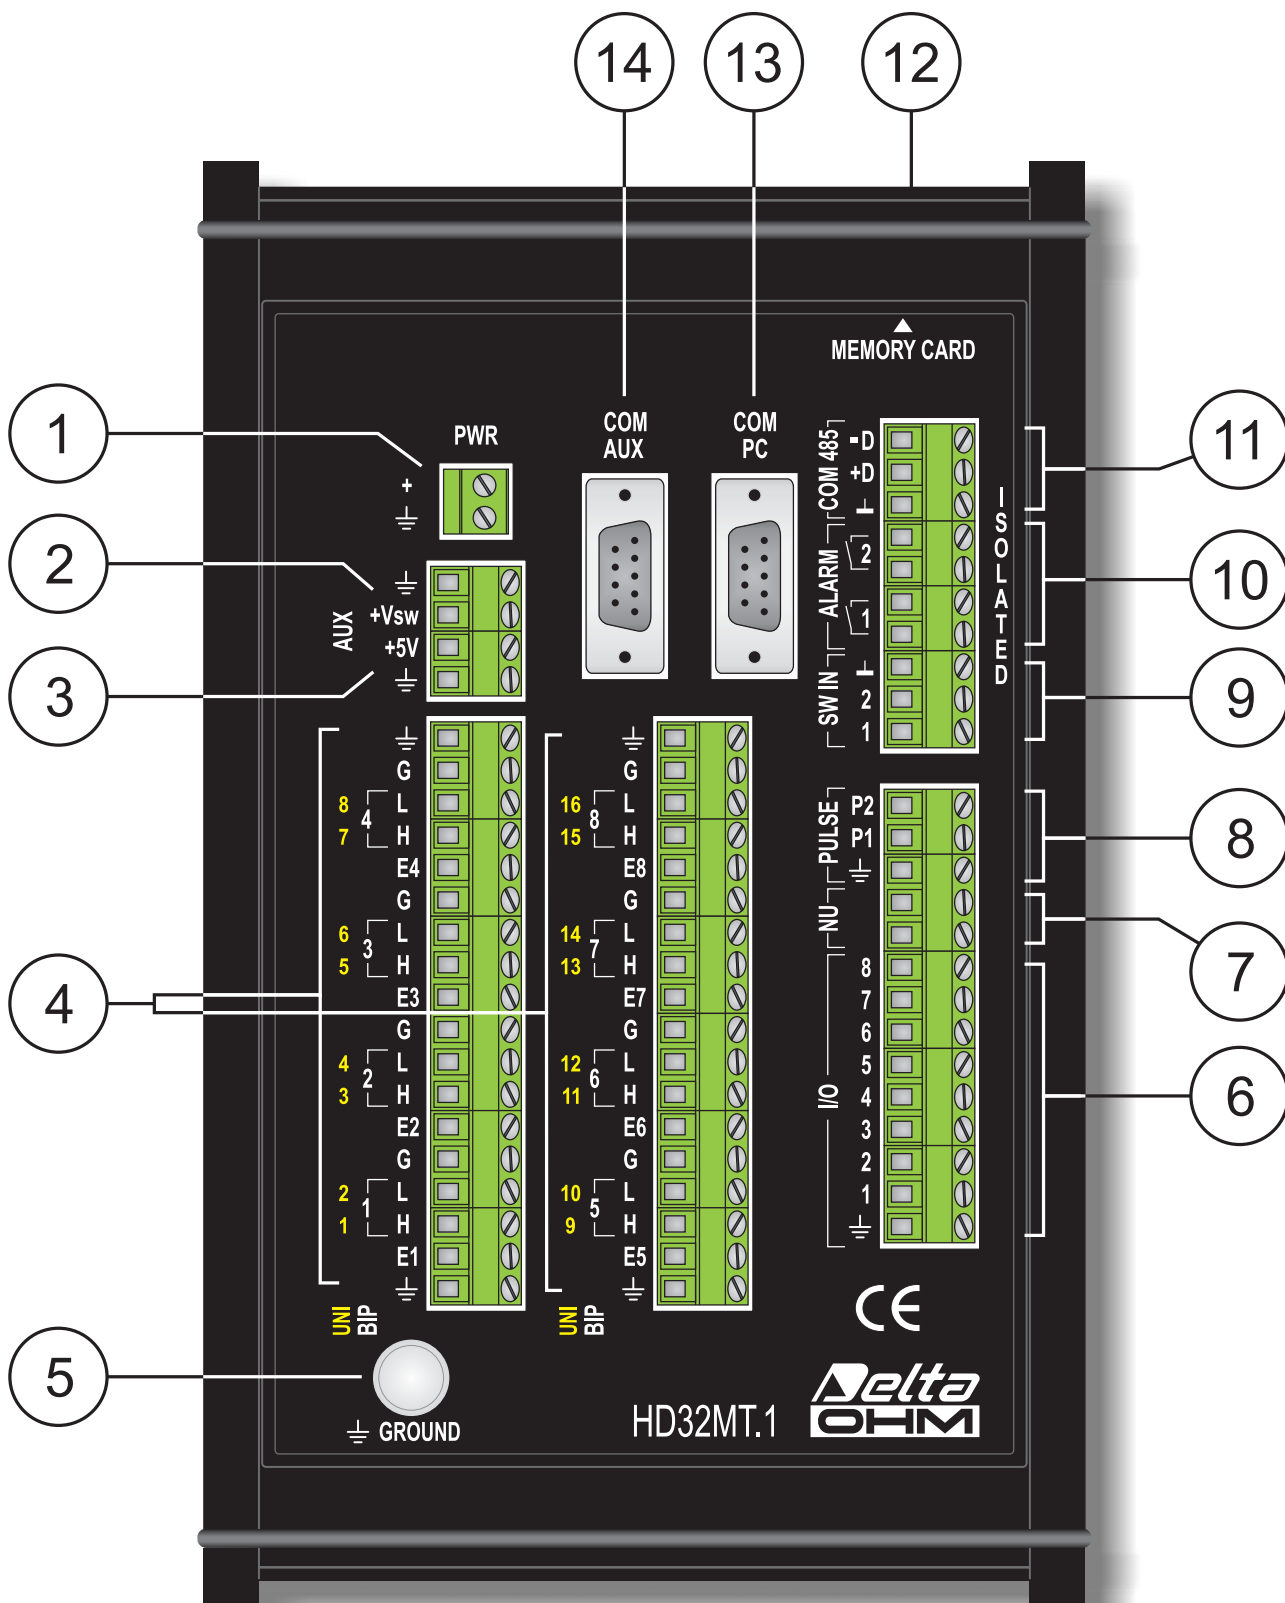

1. Power input **PWR** 12...30 Vdc.
2. Switched power supply output **+Vsw**. With the same value of the power input, but **active only during acquisition of measurements**.
3. Regulated power supply output **+5V**.
4. Inputs for analogue signals. Divided into 8 channels corresponding to 8 differential inputs (**BIP** channels) or 16 single-ended inputs (**UNI** channels). The differential input number is shown in white to the left of the terminals.

Each channel is composed of four terminals:

Terminal **E<sup>(\*)</sup>**: Excitation voltage. Used only in certain measurement configurations.

Terminal **H**: If the channel is used as a differential input, it corresponds to the "+" connection of the input signal.  
If the channel is used for single-ended inputs, it corresponds to the "+" connection of the input signal of the single-ended channel with the number indicated in yellow to the left of the terminal.

Terminal **L**: If the channel is used as a differential input, it corresponds to the "—" connection of the input signal.  
If the channel is used for single-ended inputs, it corresponds to the "+" connection of the input signal of the single-ended channel with the number indicated in yellow to the left of the terminal.

Terminal **G**: Analog ground. It has the same potential of the power supply ground.  
If the channel is used for single-ended inputs, it corresponds to the "-" connection of the input signal.

5. Terminal for ground protection.
6. Digital input/output channels. 8 channels are available, each one usable as input for connection of sensors with ON/OFF digital output, or as alarm outputs.
7. Not used.
8. **PULSE** inputs for high frequency pulse counting Two inputs are available, marked with P1 and P2.
9. Insulated inputs **SW IN** for number of voltage-free contacts opening/closing count. Two inputs are available, marked with 1 and 2.
10. Voltage-free contact alarm outputs. Two outputs are available, marked with 1 and 2.
11. RS485 serial port for the connection of anemometers series HD2003 and HD52.3D..., and sensors with MODBUS-RTU protocol.  
**The connection to the RS485 port of sensors other than those indicated may not work properly due to a different communication protocol.**
12. Memory card reader.
13. RS232 serial port **COM PC**, for direct connection to the PC or for connection of the **optional** Radio Modem (only for the Radio Modem version).
14. RS232 serial port **COM AUX** for connection of the **optional** GSM module.

<sup>(\*)</sup> The letter **E** is followed by the channel number (E1, E2, E3, etc.). For simplicity, in this manual we are only using the letter **E** to indicate the excitation of a generic terminal channel. The actual number of the terminal to be used will be indicated by the wiring diagram depending on the required connection.

## 4 INSTALLATION

The commissioning of the data logger differs according to the following cases:

1. The instrument is supplied pre-configured by Delta OHM according to customer specifications;
2. The instrument is supplied pre-configured by Delta OHM, but you need to make configuration changes;
3. The instrument is not configured, you must create and install the program of measures and stores.

The following are the operations that must be performed directly by the customer in the three cases to make the instrument operational.

### 4.1 START-UP OF AN ALREADY CONFIGURED DATA LOGGER

If the data logger is supplied with a program of measures and recordings already installed, it comes with the wiring diagram for the program installed in the instrument.

In the wiring diagram are indicated which sensors should be used and to which numbers of instrument terminals must be connected.

The instrument does not require any further configuration and it is not necessary to connect it to the PC to make it work.

The steps to setup the system are:

- **Mechanical installation**

- In case of supply of a complete system, with an already wired box, you only need to proceed with the connection to the terminals of the external sensors and the power supply.
- If the various elements and the housing box are supplied separately, you need to install the various elements inside the box:
  - Mounting of the data logger.
  - Mounting of the possible optional devices: GSM module, Radio Modem, antennas, alarm devices.
  - Mounting of the power devices: adequate backup battery, charge regulator, power supply (if mains is available), etc.

Then proceed to connect the terminals of the various elements and of the power supply.

*Note:* in order to mount the external sensors please refer to the sensors documentation.

- **Electrical connection of sensors and optional devices**

- For the electric connection of sensors and optional devices, please see the wiring diagram supplied with the instrument. See paragraph 5.9 on page 31 on how to read the diagram.  
If in doubt, please refer to chapter 5 for more detailed information about the features of the various inputs.
- For the connection of the Radio Modem, please refer to paragraph 6.2 on page 37.
- For the connection of the GSM module, please refer to paragraph 7 on page 39.

- **Electrical connection of power:** please refer to paragraph 5.1.

## 4.2 START-UP BY MODIFYING THE DATA LOGGER CONFIGURATION

If the data logger is supplied with a program of measures and recordings already installed, the instrument comes with the wiring diagram for the program installed in the instrument. In the wiring diagram are indicated which sensors should be used and to which instrument terminals must be connected.

If you want to make changes to the program installed, for example to add another sensor, or to replace one of the sensors with a sensor of another type, you must connect the data logger to the PC to change its configuration. **You can change the program of measures and recordings even if the instrument is already installed and connected electrically, but it is advisable to reprogram the data logger before connecting the sensors, because the programming software automatically assigns the terminals to which sensors must be connected, and does not allow the user to arbitrary assign sensors to certain inputs.**

The system setup is performed through the following steps:

- **Connecting the instrument to a PC** for editing and storing the program of measures installed. The modification is performed with the help of application software **HD32MTLogger**. When you finish editing, print the new wiring diagram.

See chapter 6 on page. 36 for how to connect to the PC and the chapter 8 on page 40 for how to change the program installed, for printing the wiring diagram and examples of practical changes.

Modifying the program requires an understanding of how to connect the sensors to the terminal of the instrument, it is suggested, therefore, to consult chapter 5 "Electrical connections" to know which sensors and inputs may be used.

- **Mechanical installation**

- In the case of delivery of a complete system, with an already wired box, you just proceed with the terminal connection of external sensors and power supply only.
- If the various elements and the housing box are supplied separately, you need to install the various elements inside the box:
  - Securing of the data logger.
  - Fixing any optional equipment: GSM, radio modems, antennas, alarm.
  - Fixing the power devices: battery of adequate capacity, charge controller, power supply (if the mains is available), etc.

Then proceed with the terminal connection of the various elements and of the power supply.

*Note:* For mounting sensors refer to the documentation of external sensors.

- **Electrical connection of sensors and optional devices**

- For the electrical connection of the sensors follow the new wiring diagram printed by the software HD32MTLogger. Please see paragraph 5.9 on page 31 for how to read the diagram.  
If in doubt please refer to Chapter 5 for more detailed information about features of the various inputs.
- To connect the radio modems, see paragraph 6.2 on page 37.
- To connect the GSM module, please see paragraph 7 on page 39.

- **Electrical connection of the power supply:** please see paragraph 5.1.

### 4.3 DATA LOGGER INSTALLATION WITH CREATION OF THE CONFIGURATION

If the logger is supplied without a program of measures and loggings installed, you must prepare a program and install it by connecting the logger to the PC, all with the help of application software **HD32MTLogger**.

**It is advisable to program the data logger prior to electrically connect the sensors, because the programming software automatically assigns the terminals to which sensors must be connected, and does not allow an arbitrary assignment of sensors to certain inputs.**

The steps for the preparation of the system are:

- **Creation of the program of measures and stores for the data logger**, using the software HD32MTLogger. During this stage it is not necessary that the logger is physically connected to the PC. At the end of the phase of creation, print the wiring diagram of the sensors.

See chapter 9 on page 53 for how to create the program, printing of the wiring diagram and practical examples.

The preparation of the program requires an understanding of how to connect the sensors to the terminal of the instrument, therefore it is suggested to consult the chapter 5 on page 13 for information about the sensors and inputs that can be used.

- **Connecting the Instrument to the PC to install the program of measures and stores**, always using the software HD32MTLogger. See chapter 6 on page 36 for how to connect to PC and paragraph 9.5 on page 98 for the installation of the program in the data logger.
- **Mechanical installation**
  - In case of supply of a complete system, with an already wired box, you just proceed with terminal connection of the external sensors and of the power supply.
  - If the various elements and the housing are delivered separately, you need to install the various elements inside the box:
    - Securing the data logger.
    - Securing any optional equipment: GSM, Radio Modem, antennas, alarm devices.
    - Securing power devices: battery of adequate capacity, charge controller, power supply (if the mains is available), etc.

Then proceed with the terminal connection of the various elements and of the power supply.

*Note:* For fixing of external sensors refer to the documentation of the sensors.

- **Electrical connection of sensors and optional equipments**
  - For the electrical connection of the sensors follow the wiring diagram generated by the software HD32MTLogger. Please see paragraph 5.9 on page 31 for how to read the diagram.  
If in doubt please refer to Chapter 5 for more detailed information about features of the various inputs.
  - To connect the Radio Modem, please see paragraph 6.2 on page 37.
  - To connect the GSM module, please see paragraph 7 on page 39.
- **Electrical connection of the power supply:** please see paragraph 5.1.



## 5 ELECTRICAL CONNECTIONS

The following describes the types of inputs and outputs available in the terminal board of the instrument. For each type of input or output, the details of the connection of the various sensors are shown.

The connections to the terminals can be divided into::

- Power supply input (paragraph 5.1 on page 13);
- Power supply output (paragraph 5.2 on page 15);
- Differential or single-ended analog inputs (paragraph 5.3 on page 16);
- ON/OFF digital inputs/outputs (paragraph 5.4 on page 25);
- Inputs for counting pulses or opening/closing of contacts (paragraph 5.5 on page 26);
- RS485 interface for connection of Delta OHM anemometers HD2003 and HD52.3D... series, and sensors with MODBUS-RTU protocol (paragraph 5.6 on page 28);
- Alarm outputs (paragraph 5.7 on page 29).

The chapter includes a paragraph that explains how to read the wiring diagram generated by the software program (paragraph 5.9 on page 31). The diagram should be provided by the data logger programmer or by supplier of the system in case of program pre-installed.

They are also given examples that show the connections of a complete system, in the case of a meteorological station (at paragraph 5.10 on page 32).


It is not reported in this chapter the RS232 connection, illustrated in chapter 6 on page 36.

**Warning:** connecting the power supply of the various sensors used, make sure not to exceed the maximum power supply voltage specified in the data sheets of sensors.

### 5.1 POWER SUPPLY INPUT

The instrument requires a supply voltage of 12...30 VDC.

The power supply input is located at point **1** of the terminal board figure on page 8.

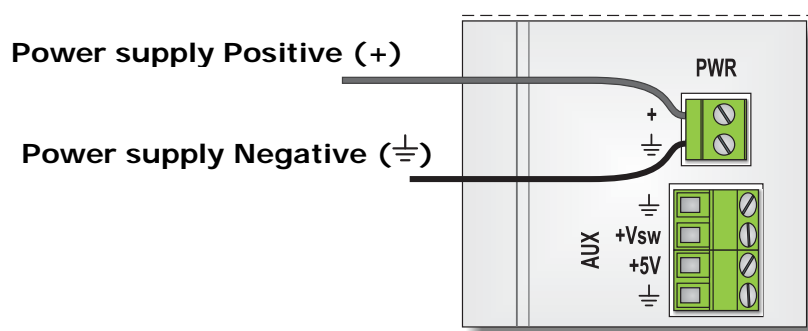

It is advisable to first connect the positive to the data logger and then the negative. By connecting the negative first is more likely to cause accidental short circuits if the free positive wire comes in contact with the many ground points on the panel.


If you use a power supply connected to the mains, in the choice of the power supply you should consider not only the internal consumption of the data logger, but also the consumption of the sensors connected to the excitation terminals of the analog inputs (terminals E) and consumption of the devices directly connected to the power supply.

If the system is installed in places where there is no mains voltage to connect a power supply, the instrument can be powered by a rechargeable standard 12 V or 24 V battery.

If the supply voltage drops below **11.7 V**, the logger goes into low power mode, interrupting the acquisition of the sensors. Normal operation will restart only when the supply voltage will rise above **12.5 V**.

*Note:* the supply voltage below which the logger goes into low power mode can be changed by connecting the **COM PC** port of the logger to the PC (see the paragraphs relating to the connection to the PC), and by sending, through a standard serial communication program (for example Hyperterminal), the command \$Dennn, where nnn is the power supply value without the point. For example, \$D112 sets the value 11.2 V. The value has to be between 8.7 V and 12.7 V. Normal operation will restart only when the supply voltage will rise above the set value plus 0.8 V. The command \$E reads the set value.

In the case of battery power, it is usually also used a solar panel that keeps the battery charge. A typical power connection is as follows:

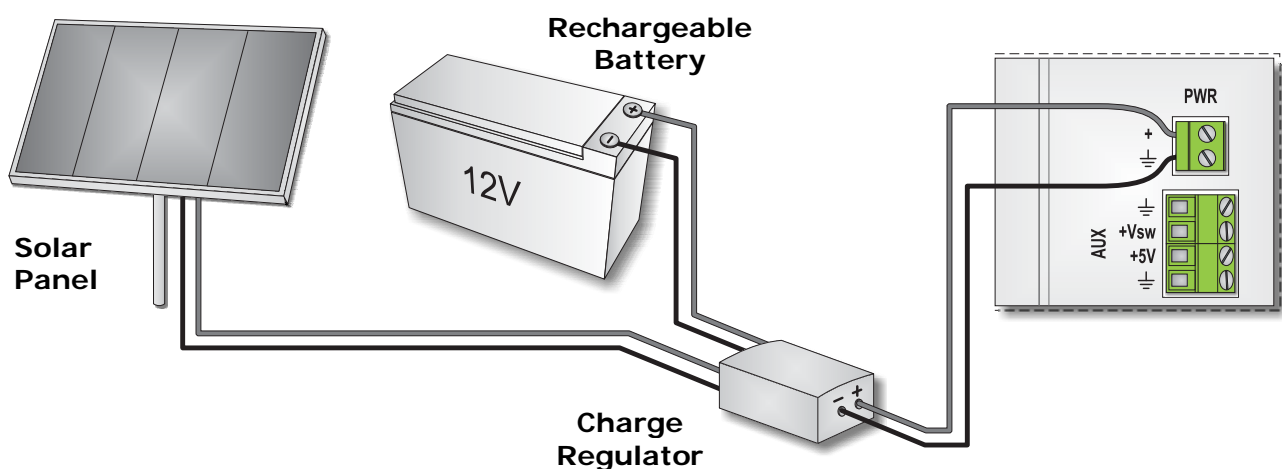

The charge regulator is essential to prevent the solar panel overcharges the battery and damages it.

The battery must have sufficient capacity to maintain power to the data logger in the periods when the solar panel can not act as a charge due to lack of sunlight. The required capacity depends on the number and type of devices connected to data logger or directly to the battery. It is recommended to provide sufficient capacity to allow the regular operation of all devices for at least a week without the solar panel generating energy.

---

### Example

Consider a battery-powered installation in which three Delta OHM sensors are connected: an HD2003 ultrasonic anemometer, a rain detector HD2013.2 and a photometric probe LPPHOT03BLAC.

You must first consult the data sheets of the various sensors to verify the consumption:

- 110 mA for the anemometer HD2003
- 130 mA for the rain gauge HD2013.2
- 25 mA max. for the LPPHOT03BLAC photometric probe

It is assumed that the sensors are always powered.

Suppose that the system has also a Radio Modem whose consumption is 350 mA in transmission and 5 mA in stand-by mode. The average consumption of the device depends on how frequently the data transmission is requested by the remote PC. Assuming that the modem transmit for 0.5 hours a day, the average consumption during a day is:

$$\frac{0,5 \text{ h} \times 350 \text{ mA} + (24 \text{ h} - 0,5 \text{ h}) \times 5 \text{ mA}}{24 \text{ h}} = 12,2 \text{ mA}$$

In fact, the influence of the modem on the battery life is different depending on whether the transfer occurs when the solar panel is active or when the panel is not able to efficiently charge the battery (eg. particularly in cloudy days or in the evening). Assuming that the battery should last at least a day without being charged, for simplicity we can consider the average daily consumption calculated above.

Finally, we must add the consumption of the logger itself: 40 mA.

The average total consumption of the system is:  $110 + 130 + 25 + 12.2 + 40 = 317.2 \text{ mA} = 0,317 \text{ A}$

The minimum capacity of the battery is obtained by multiplying the average consumption calculated by the number of desired hours of battery life, e.g. 24 h:

$$0.317 \text{ A} \times 24 \text{ h} = 7.6 \text{ Ah approx.}$$

You should not get to fully discharge the battery, and the supplied voltage must always remain above the minimum operating value. To obtain a sufficient safety margin, be sure to use a higher capacity battery than the minimum calculated (e.g. A 10Ah battery in the case referred to a day).

## 5.2 POWER SUPPLY OUTPUTS

The data logger provides two auxiliary outputs (AUX) through which you can power external sensors and devices. The two outputs are located under the power supply input terminals (points [2](#) and [3](#) of the terminal board figure on page 8).



Output **+Vsw** is activated only when the logger has to acquire the measurements. During the acquisition phase, the output assumes a value equal to the power supply input. Devices connected to this output are not fed during periods of non-acquisition, thus allowing a lower average consumption of the system and a longer battery duration. The output is defined as switched type to indicate that is alternately turned on and off.

The use of the **+Vsw** output to supply a sensor must be carefully evaluated in terms of response time of the sensor. If the programmed acquisition interval of the data logger is less than the response time of a sensor, it is necessary to keep the sensor always powered by connecting it to the main power supply.

The **+5V** output is always active and is used for devices that require 5 V regulated. Output current is 500 mA max.

### 5.3 ANALOG INPUTS

The inputs for analog signal are shown at point **4** of the terminal board figure on page 8. They can be considered as divided into 8 channels. Each channel can be used to measure a differential mode signal or to measure two signals with a common ground. The signals referred to the common ground are also known as “single-ended”.

You can select four measurement ranges:

- $\pm 25$  mV
- $\pm 100$  mV
- $\pm 1000$  mV
- $\pm 2500$  mV

To different inputs can be associated different ranges. The choice of the measurement range is made while programming the data logger and depends on the type of sensors that are connected.

The analog channels are provided with a voltage output (terminal **E**<sup>(\*)</sup>) used as an excitation voltage for passive sensors. The use of the terminal and the value of the output voltage depends on the type of sensor connected to the input (see the wiring diagrams of the various types of sensors illustrated in the following paragraphs). The voltage at terminal **E**<sup>(\*)</sup> is present only during the acquisition phase of the measure, to minimize the consumption of the system.

The analog ground is available to terminal **G**. The analog ground has the same potential of the power supply ground.


At the ends of the two rows of terminals of the analog inputs, there are two terminals connected to the power supply ground ( $\perp$ ), useful to connect the shield of the sensors cables.

The input terminals **H** and **L** of a channel take on a different meaning on whether the channel is programmed to operate in differential or single ended mode.

(\*) The letter **E** is followed by the channel number (E1, E2, E3, etc.). For simplicity, in this manual we are only using the letter **E** to indicate the excitation terminal of a generic terminal channel. The actual number of terminals to be used will be indicated by the wiring diagram depending on the required connection.

#### Differential connection:


The instrument measures the difference between the voltage at terminal **H** (input +) and the voltage at terminal **L** (input —).

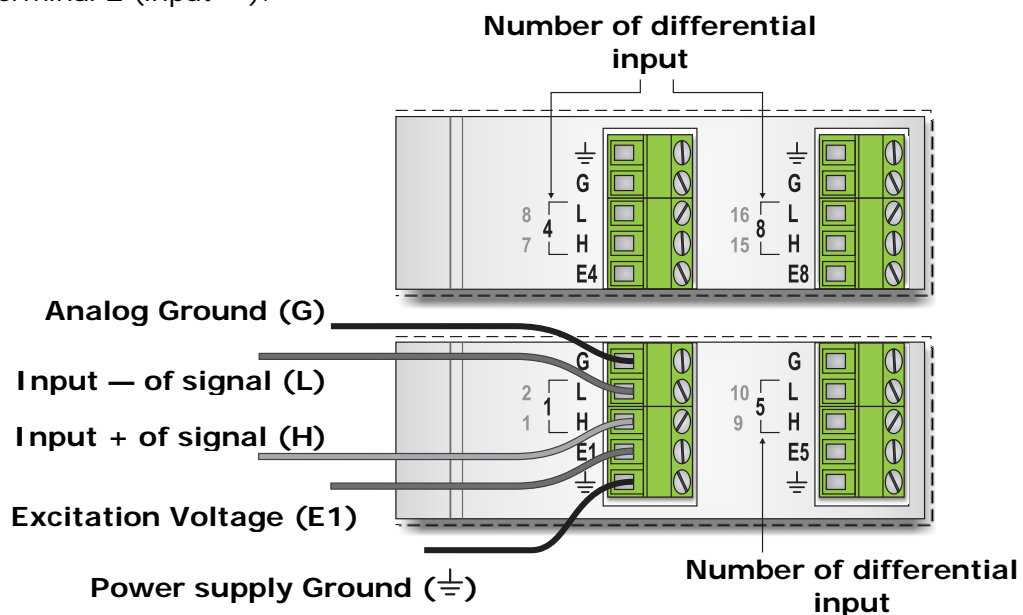

The number of the differential input is indicated by the white number that appears to the left of the terminals H and L (channels **BIP** from 1 to 8).

### Single-ended connection:


The instrument measures the voltage between the terminal **H** and the analog ground **G**, and the voltage between the terminal **L** and the analog ground **G**. You can then measure two signals both relating to the common ground. The positive of one signal is connected to terminal H, the positive of the second signal is connected to terminal L.

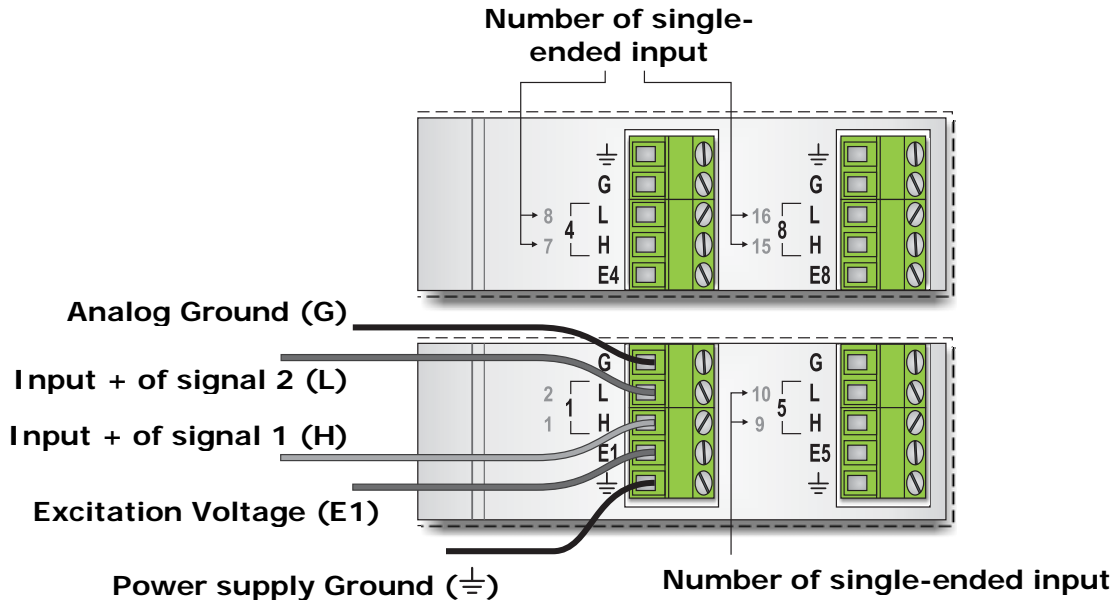

The numbers of the two single-ended inputs are indicated by the yellow numbers that appear to the left of the terminals H and L (channels **UNI** from 1 to 16).


#### 5.3.1 CONNECTION OF SENSORS AND TRANSMITTERS WITH OUTPUT VOLTAGE

The following figure shows the connection of a generic sensor or transmitter with output voltage. The device is connected according to the differential scheme. The shield of the connection cable, if present, can be connected only on the data logger side to any terminal connected to the power supply ground ( $\perp$ ).

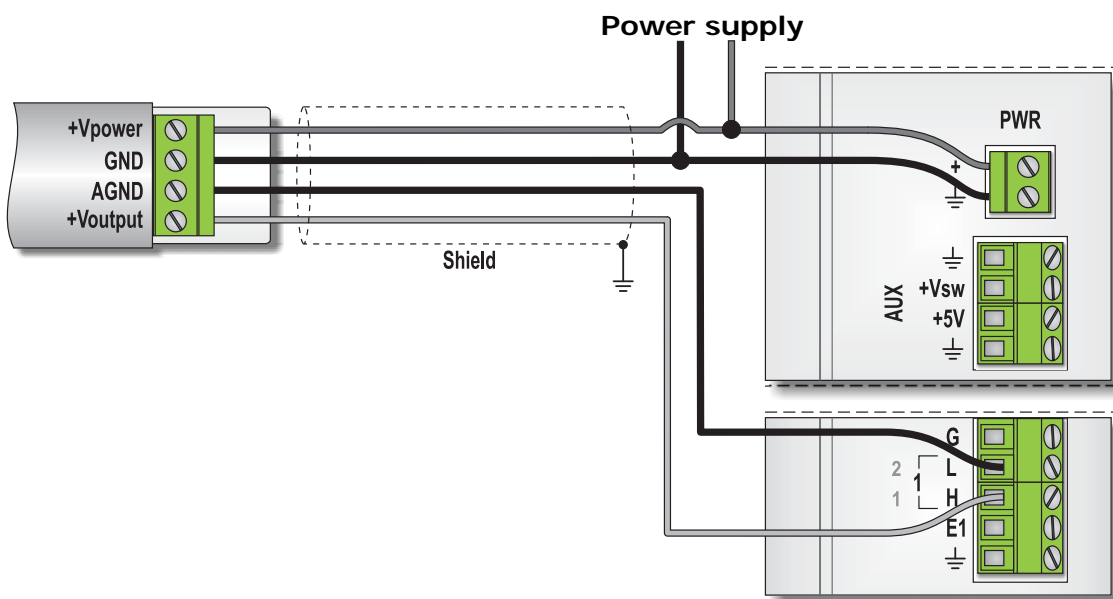


*Note:* the number of the input to which a sensor should be connected depends on the program installed in the data logger; for connecting the sensors follow the wiring diagram generated by the programming software, or the diagram supplied if the program is preinstalled.

If the transmitter has only one reference terminal (power supply ground coincides with the analog output signal reference), the connection scheme becomes the single-ended type as follows:

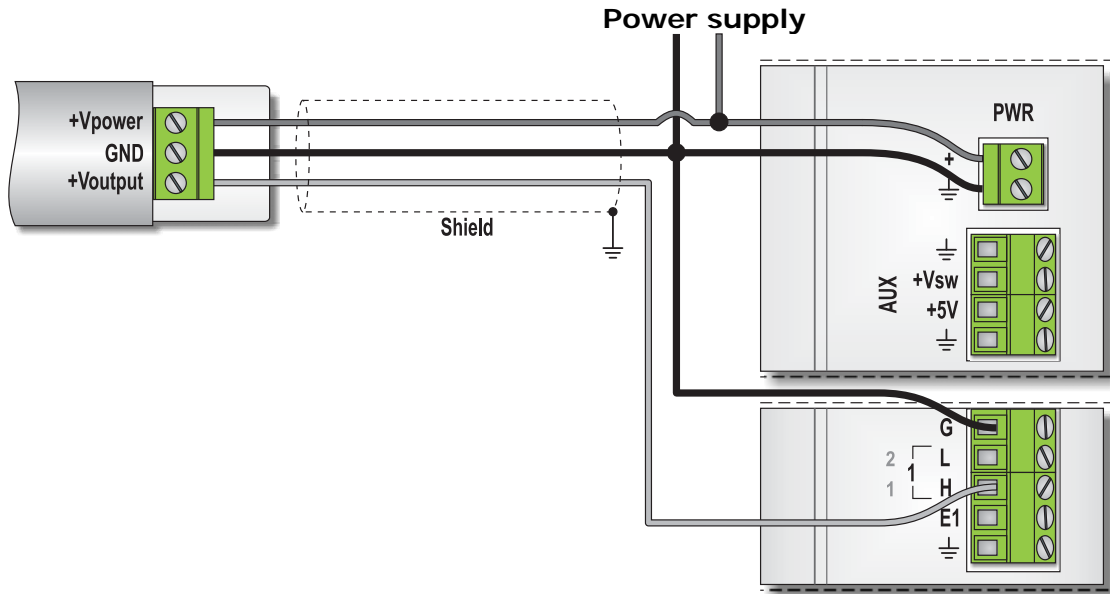


The illustration below shows, as an example, the connection of the Delta OHM HD9009TRR temperature and relative humidity double transmitter:

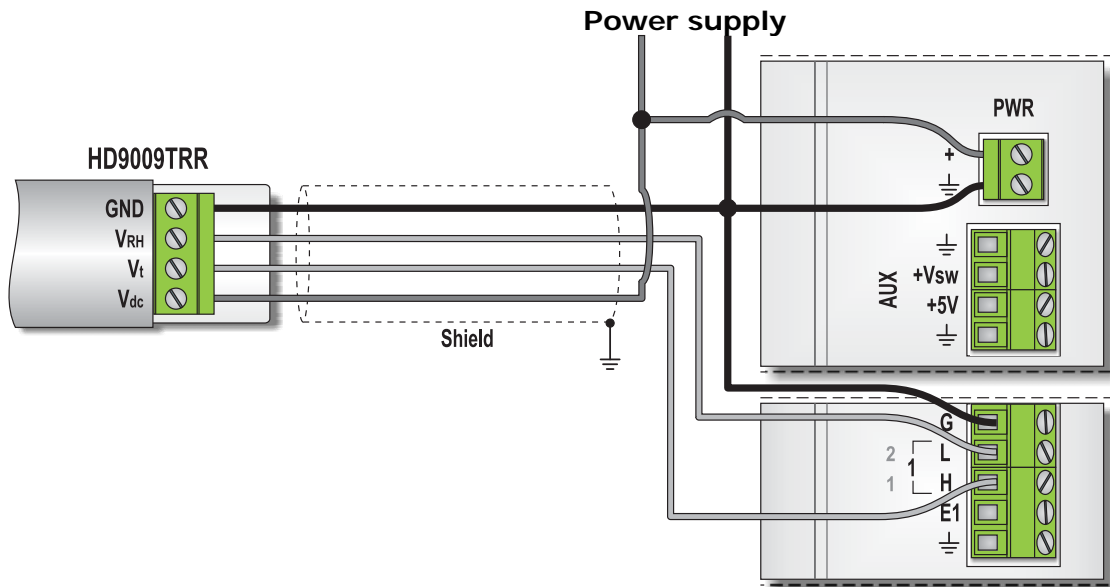

The connection scheme shown in the figures above can be used if the output device does not exceed the acceptable measurement range of the data logger. The data logger can measure signals up to 2500 mV (2.5 V).

If a transmitter provides an output signal greater than 2.5 V, it is necessary to reduce the signal by inserting a resistive divider at the input of the logger, as shown in the diagram below:

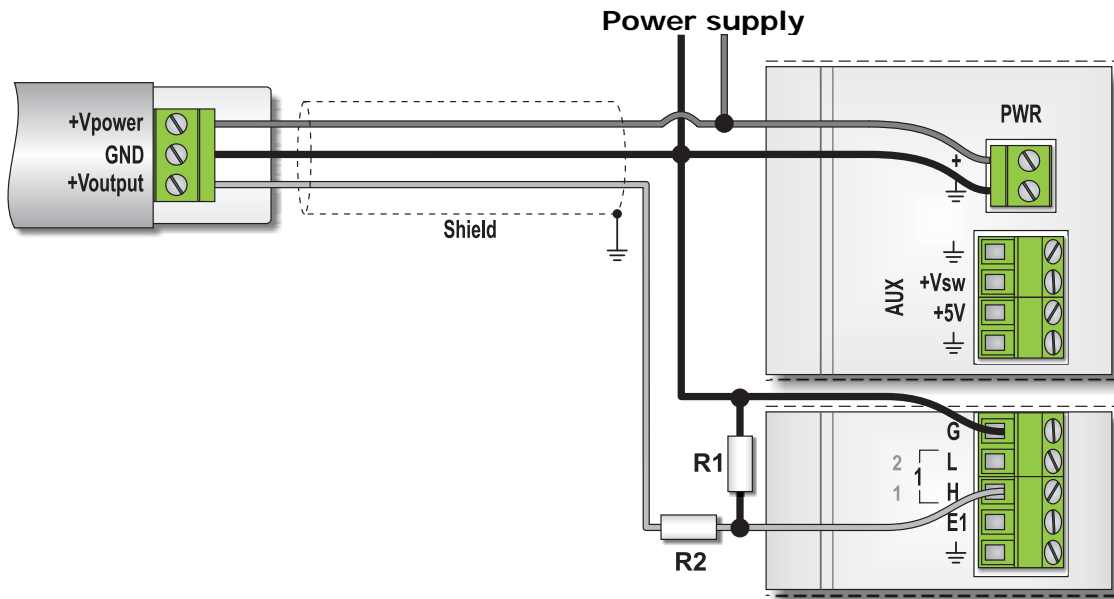

The values of R1 and R2 should satisfy the following:

$$V_{\text{transmitter full scale}} \times \frac{R1}{R1 + R2} \leq V_{\text{max datalogger}}$$

The sum of the values of R1 and R2 should be greater than the minimum value of load resistance required by the transmitter. To reduce the consumption of the system, it is still convenient to choose resistance values that are large enough. The values of the resistors should be provided by the data logger programmer, as they depend on the set measurement range.

### Example

Consider a sensor with a 0...10V output and with a minimum load resistance of 10 kohm. You want to connect the transmitter to an input of the data logger with a measurement range of  $\pm 2500$  mV ( $\pm 2.5$  V).

Therefore it should be:  $10V \times \frac{R1}{R1 + R2} \leq 2,5V \Rightarrow \frac{R1}{R1 + R2} \leq 0,25$


Assuming you choose  $R1 + R2 = 100$  kohm, the result is:  $R1 = 25$  kohm and  $R2 = 75$  kohm.

### CONNECTION OF PROBES FOR MEASURING SOLAR IRRADIANCE WITH mV OUTPUT


An analog input can be configured specifically for the connection, both in single-ended and differential mode, of solar irradiance probes with mV output.

The probes with mV output do not require power.

If the input is programmed for single-ended connection, the connection of the probe is realized as follows:

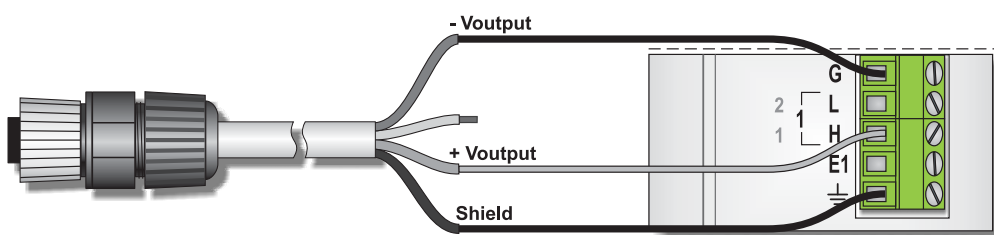

If the input is programmed for differential connection, the probe connection becomes:

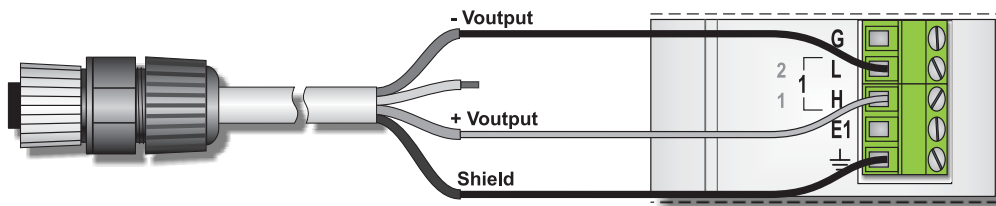

If using the differential connection, during the measurement the terminal L is internally shorted to analog ground, to ensure that the voltage inputs is within the range measured by the data logger (common mode voltage). **It is therefore advisable to use probes with a sensing element electrically isolated, to avoid reading errors due to potential differences between the ground connection point of the probe and the analog ground of the logger (grounded).** If using sensors with sensing element not isolated, to avoid reading errors it is important that the probe and data logger are grounded in the same point. If there are multiple probes connected, the terminals L of the various probes are short-circuited one at a time.


If using probes with sensing element non-isolated and occur malfunction due to the ground connection, interpose between the probe and the logger a converter / transmitter with isolated input and output. You can use the Delta OHM transmitters HD978TR3, HD978TR4, HD978TR5 and HD978TR6.

### 5.3.2 CONNECTING SENSORS AND TRANSMITTERS WITH CURRENT OUTPUT

To measure current signals you must first convert them into voltage through a shunt resistor.

The shunt must be a **precision resistor**, because the tolerance and temperature drift of the resistance value affects the accuracy of the measure.

The following figure shows the connection of a transmitter with generic 0...20 mA or 4...20 mA 2-wire current output ("current loop"). The data logger measures the voltage drop across the shunt resistor in differential mode.

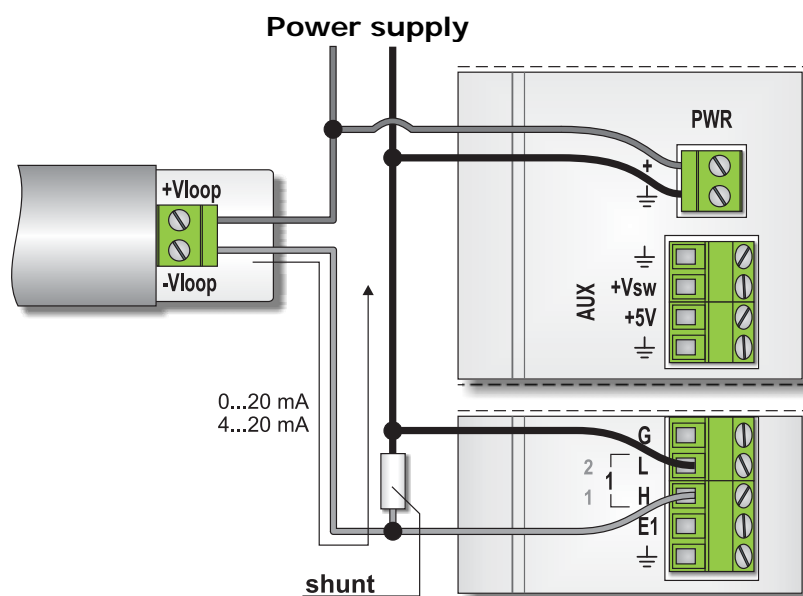




If the input of the logger is configured to measure a signal from a transmitter with current output 0...20 or 4...20 mA, connect the shunt between terminals **H** and **L**, and use a **100 ohm** shunt resistor.


If you want to use shunt resistors of different values from 100 ohm, you must program the input for the measurement of generic voltage signals, indicating the correspondence between the voltage drop on the shunt and the value of the measured quantity (see the chapter on the programming for setting mode). The shunt resistor value must be less than the maximum load resistance of the transmitter, and must be such that the voltage drop across it does not exceed the measurement range of the data logger input.

*Note:* the number of the input to which a sensor should be connected depends on the program installed in the data logger; for connecting the sensors follow the wiring diagram generated by the programming software, or the diagram supplied if the program is preinstalled.

When using sensors with separate connection for power supply and output signal, the connection scheme for a transmitter with active output, becomes:

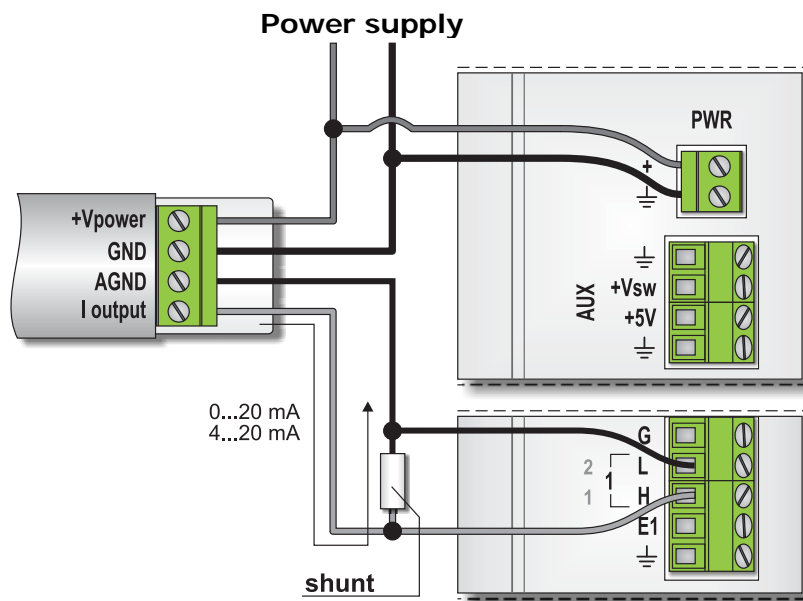


If the transmitter has only one reference terminal (ground of power supply coincides with the reference of the analog output signal), the connection scheme changes into the following:

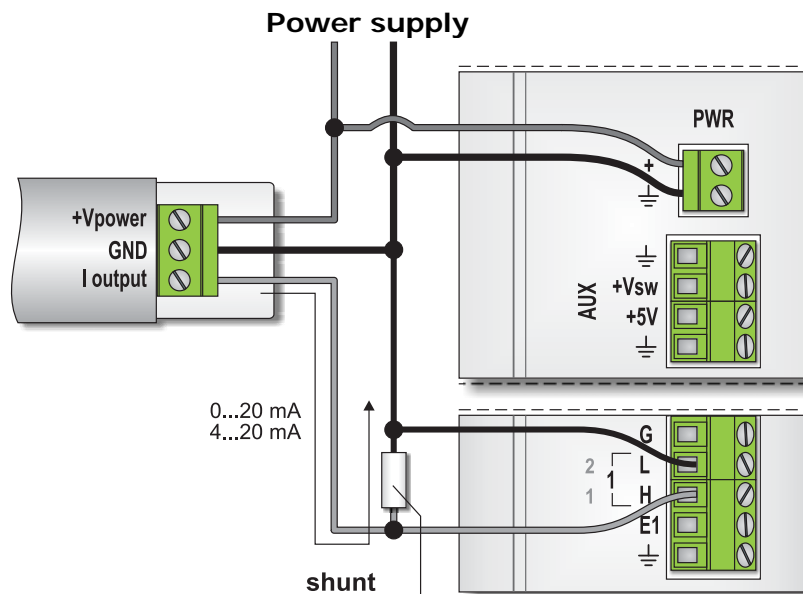

### 5.3.3 CONNECTION OF 2-WIRE RESISTIVE SENSORS

You can connect to the data logger resistive sensors, typically thermistor temperature probes or photoresistor, placing them in a resistive divider and measuring the voltage drop across the sensor. The wiring diagram of a probe with a resistive sensing element is as follows:

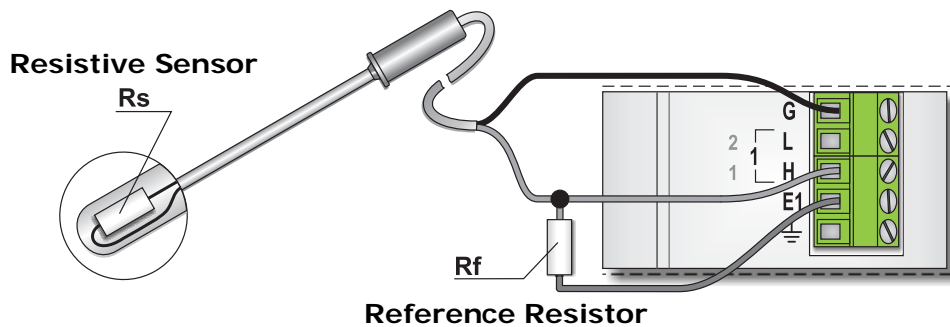

The data logger applies a voltage of 2500 mV to terminal **E<sup>(\*)</sup>**, and measures the voltage drop across the sensor. The voltage measurement is the single-ended type (the voltage is related to the analog ground).

(\*) The letter **E** is followed by channel number (E1, E2, E3, etc..). For simplicity, in this manual we are only using the letter **E** to indicate the excitation terminal of a generic channel. The actual number of terminals to be used will be indicated by the wiring diagram depending on the required connection.

Any cable shield should be connected to the terminal  $\perp$  (only connect the shield on the side of the logger).

**The programmable inputs for this type of measurement are only single-ended inputs UNI 1, UNI 2, UNI 3 and UNI 4.**

The choice of the reference resistor  $R_f$  depends on the type of sensor connected and the type of programming of the input.

If the input is programmed specifically for the measurement of **NTC** thermistors, the resistor  $R_f$  must be equal to the value of the sensor at 25 °C. The data logger calculates the temperature according to the value of the coefficient BETA ( $\beta$ ) entered during programming.

If the input is programmed to measure a general resistive divider, the data logger calculates the value of the physical quantity measured by the sensor according to the parameters written in the program, according to a linear relationship with the sensor value  $R_s$ . In this case you can choose any value for  $R_f$ , providing to respect the programming parameters. In practice it is recommended that  $R_f$  is neither too small nor too large compared to the values assumed by the sensor, otherwise the voltage change across the sensor is too small and the resolution is poor. The  $R_f$  values should be between the minimum ( $R_{s \text{ min}}$ ) and maximum ( $\text{max } R_s$ ) values assumed by the sensor in the measuring range of interest.

As a rule of thumb, for the thermistors can be connected a  $R_f$  value close to the resistance of the sensor at the average temperature of the range of interest.

*Note:* If the data logger is already programmed, connect the  $R_f$  values provided by the programmer.

---

#### Example

Consider a NTC thermistor probe used to measure the temperature in the range 20 ... +50 °C. Suppose that the probe takes the following values:


- $R_s$  at -20 °C = 79440 ohm
- $R_s$  at 15 °C = 15150 ohm (medium point of the measurement range)
- $R_s$  at 50 °C = 3893 ohm

With good approximation, for  $R_f$  you can use the standard value closer to the value of  $R_s$  at 15 °C.

### 5.3.4 CONNECTION OF 3-WIRE POTENTIOMETRIC SENSORS

The potentiometric output sensors are potentiometers where the cursor is mechanically connected to a mobile element. They are generally used in the detection of the position and motion of an object. Typical devices with potentiometric output are the vane sensors for wind direction (gonioanemometers).

The connection of this type of sensor is realized as follows:

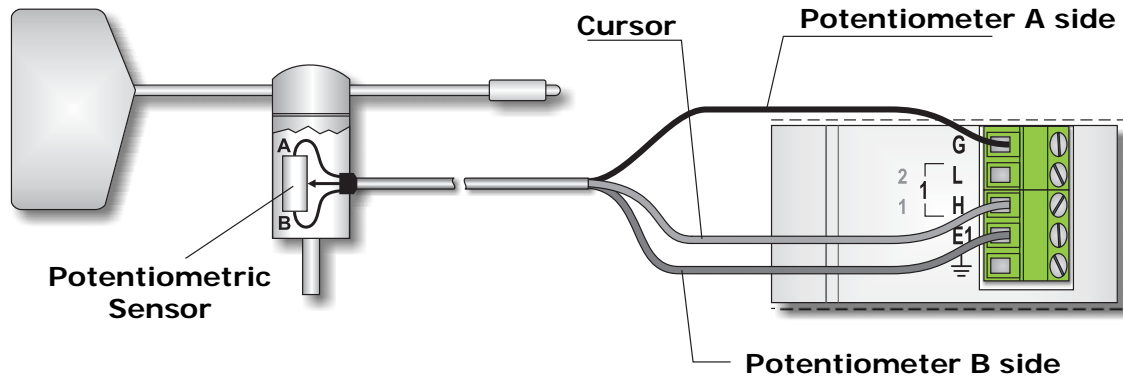

The ends of the potentiometer are connected to terminals **E<sup>(\*)</sup>** and **G**, while the cursor is connected to a single-ended input (the number depends on the program). The data logger applies the voltage of 2500 mV across the potentiometer, and measures the voltage on the slider with respect to the analog ground.

(\*) The letter **E** is followed by the channel number (E1, E2, E3, etc.). For simplicity, in this manual we are only using the letter **E** to indicate the excitation terminal of a generic channel. The actual number of terminals to be used will be indicated by the wiring diagram depending on the required connection.


With the connection shown in the figure, the measured voltage increases when the cursor moves to the end B of the potentiometer. If you want to reverse the behaviour, just exchange the connections of the two extremes of the potentiometer.

**The programmable inputs for this type of measurement are only single-ended inputs UNI 1, UNI 2, UNI 3 and UNI 4.**

### 5.3.5 CONNECTION OF 4-WIRE RESISTIVE SENSORS

The resistive sensors having low values of resistance, such as **Pt100** temperature sensors, are also available in 4-wire version to allow connection to circuits that compensate for the resistance of the wires to get a more accurate measure.

The figure below shows the connection of a 4-wire resistive sensor:

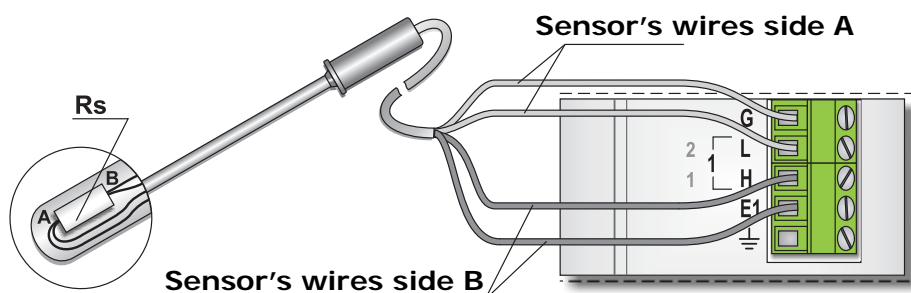

To **G** and **L** terminals are connected the two wires coming from the same side of the sensor, to terminals **H** and **E<sup>(\*)</sup>** are connected the two wires from the other side. The measurement of

voltage drop on the sensor is in differential mode (the channel number depends on the program).

Any cable shield should be connected to the terminal  $\perp$  (only connect the shield on the side of the logger).

In this type of measurement, to terminal **E**<sup>(\*)</sup> there is not a fixed voltage, but the measuring circuit is automatically adjusted for the correct compensation of the connecting cables. For details of the measure see the section on programming.


(\*) The letter **E** is followed by the channel number (E1, E2, E3, etc.). For simplicity, in this manual are only using the letter **E** to indicate the excitation terminal of a generic channel. The actual number of terminals to be used will be indicated by the wiring diagram depending on the required connection.

If the input is programmed specifically for the measurement of Pt100 or Pt1000 sensors with coefficient  $\alpha=0.00385$ , the data logger provides directly the measured temperature.

If the input is programmed to measure a general resistive sensor, the data logger calculates the value of the physical quantity measured by the sensor according to a linear relationship with Rs, depending on the parameters entered in programming.

### 5.3.6 CONNECTION OF THERMOCOUPLES

The following figure shows the connection of a thermocouple probe:

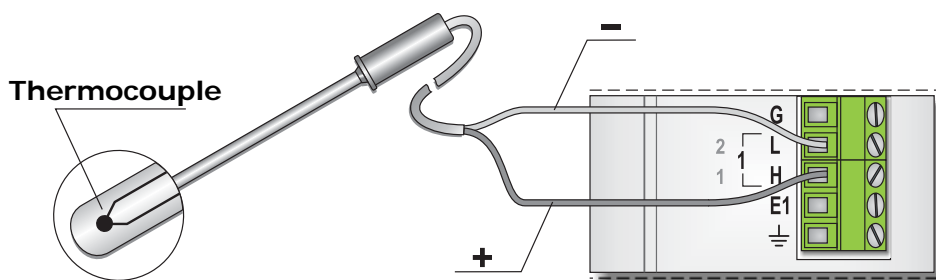


The wire correspondent to the positive of the thermocouple is connected to terminal **H**, the negative wire connects to terminal **L** (the channel number depends on the program).

The instrument automatically compensates for cold junction temperature, using an internal temperature sensor.

The input can be programmed to read thermocouple types K, J, T, N, R, S, B, E.

During the measurement, the terminal **L** is internally shorted to analog ground, to ensure that the voltage at the inputs is within the range measured by the instrument (common mode voltage). **It is therefore advisable to use electrically insulated thermocouples, to avoid reading errors due to potential differences between the measurement point and the instrument analog ground (grounded).** If the thermocouple is not isolated, to avoid reading errors it is important that the measuring point and the analog ground of the instrument have the same potential. If there are multiple thermocouples connected, the terminals L of the various thermocouples are short-circuited one at a time.

If you use non-insulated thermocouples and malfunctions occur due to the ground connection, place a converter/transmitter with isolated input and output between each probe and the data logger. In that case, input of data logger must be programmed as a current or voltage input depending on the output of the converter/transmitter, and not as a thermocouple input. You can use the Delta OHM transmitters HD978TR series. The following illustration exemplifies the use of the converter/transmitter HD978TR1 with output 4...20 mA.

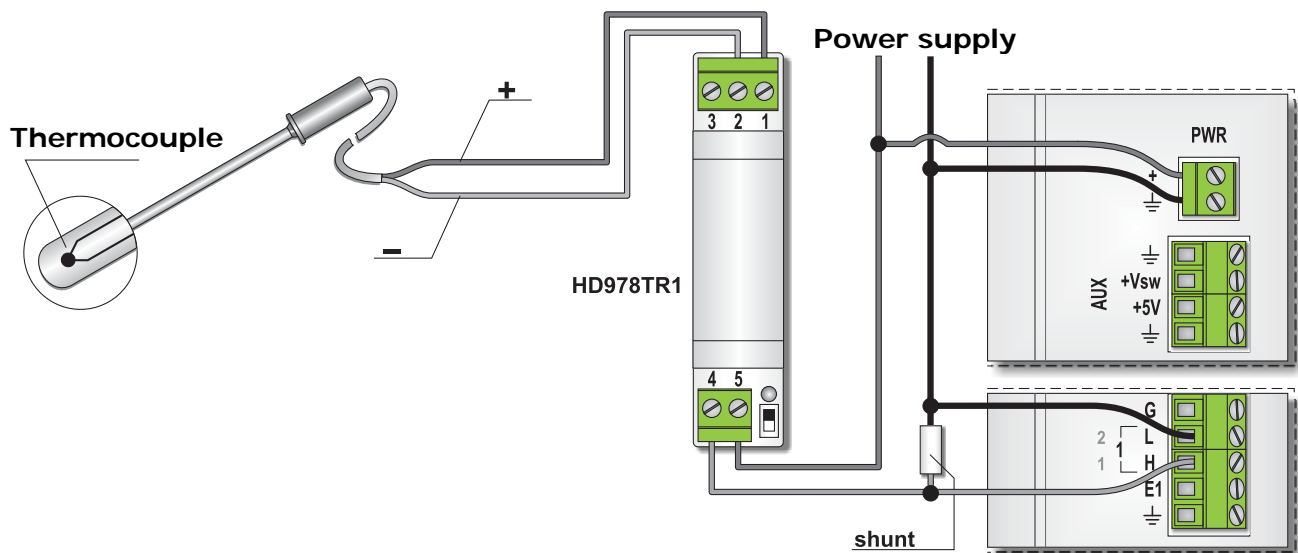

## 5.4 DIGITAL INPUTS AND OUTPUTS

The instrument is equipped with 8 digital input and output ports, located at point **6** of the terminal board figure on page 8.


Each port can be configured to be used as input to read the state in which the output of a digital device is in the moment of capture, or as output, to signal the occurrence of alarm conditions when the measured values exceed the thresholds programmed into the data logger.

The digital ports operate at TTL levels. Voltages values below 0.8 V are recognized as a logic 0. Voltages above 3 V are recognized as a logic 1. Digital signals are referred to the power supply ground  $\text{GND}$ . Each input has a 100 k $\Omega$  pull-up resistor: the input is at logic level 1 when it is not controlled.

**Do not apply to the inputs voltage above 5.5V to not damage them.**

The inputs are not suitable for counting of pulse, for which the Pulse inputs are provided.

The following figure shows, as an example, the connection to the port 1 (configured as an input) of a sensor with a digital output, and the connection to the port 2 (configured as an alarm output) of a device with digital input to process the alarm signal.

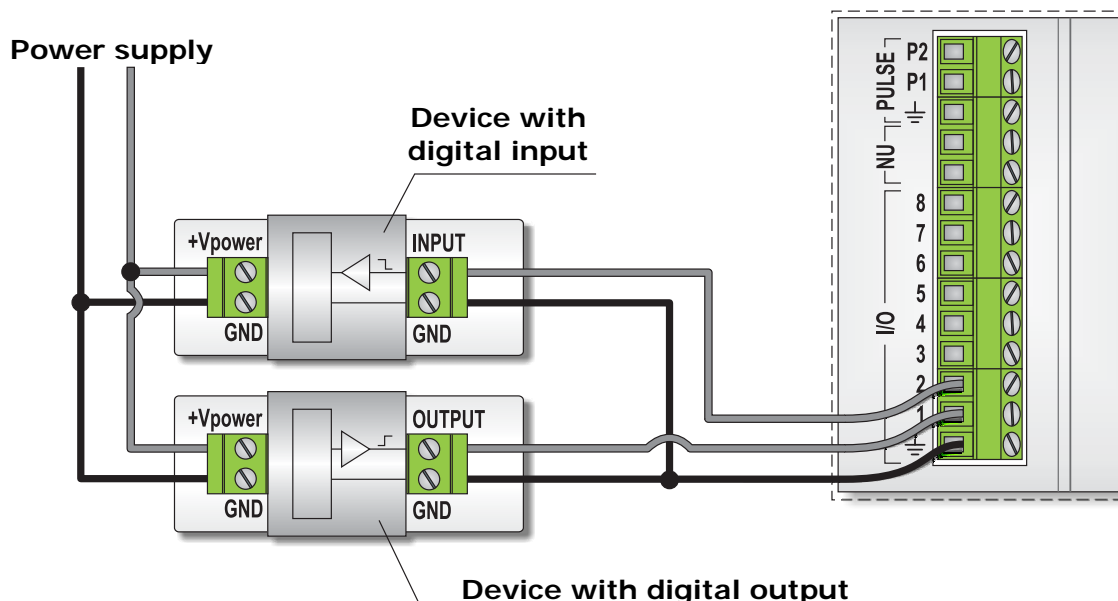

## 5.5 INPUTS FOR PULSE COUNTING

For the detection of pulse signals there are two types of inputs:

- Inputs for counting high frequency pulses
- Inputs for counting the number of opening/closing of voltage-free contacts.


### 5.5.1 HIGH FREQUENCY PULSE COUNTING

To count digital pulses up to 50 KHz are used **PULSE** inputs, located at point **8** of the terminal board figure on page 8.

There are two inputs: **P1** and **P2**. The signals are referred to the power supply ground  $\perp$ .

Typical sensors that can be connected to this type of input are cup anemometers with frequency digital output.

The connection is realized according to the following scheme:

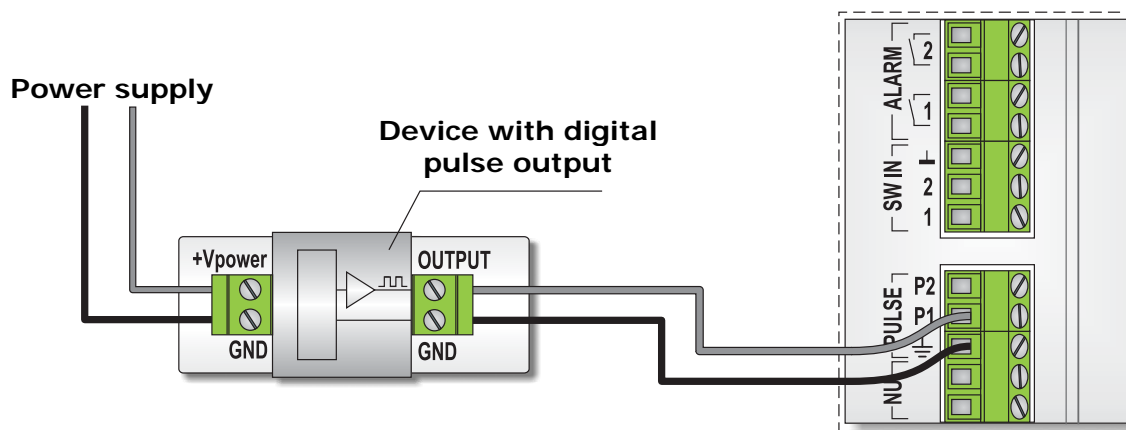

The inputs work at TTL levels. Voltage values lower than 0.8 V are recognized as logical values 0. Voltage values higher than 3 V are recognized as logical values 1.

**Do not apply to the inputs voltage above 5.5 V to prevent damage the inputs themselves.**

To be detectable, the pulses must have a minimum duration of 10  $\mu$ s.


### 5.5.2 COUNTING NUMBER OF OPENING/CLOSING OF VOLTAGE-FREE CONTACTS

To count the number of openings and closings of a voltage-free contact, for example the contact of a relay, there are two **SW IN** inputs, located at point **9** of the terminal board figure on page 8.

The inputs are **insulated** and identify the switching of a contact to the maximum frequency of 50 Hz. In order for the contact switching to be detected, the contact must be closed or open for at least 10 ms.

Typical sensors that can be connected to this type of input are the cup anemometers with contact output and the tipping bucket rain gauges.


The following shows the connection of a device with contact output:

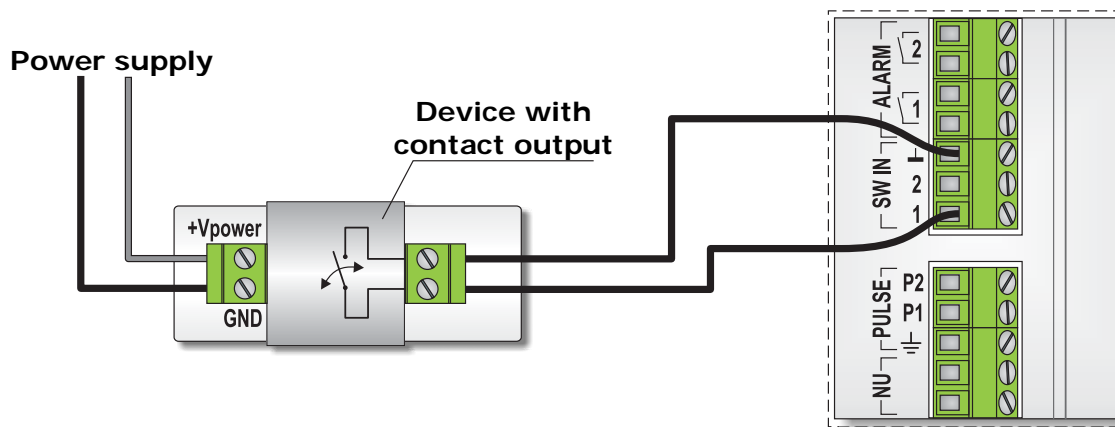

The following example describes the use of the Delta OHM sensor HD2013 connected to the input 1 and of a cup anemometer connected to input 2. It is assumed that the two sensors are completely mechanical and does not need power.

**HD2013 Rain Gauge**

**Anemometer**

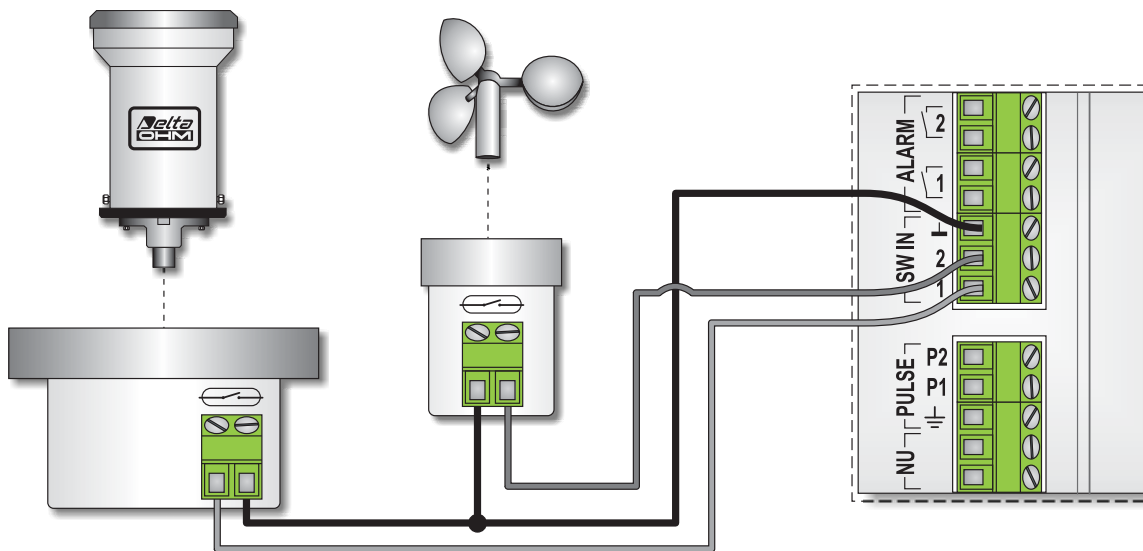


## 5.6 RS485 CONNECTION

The RS485 communications port (**COM 485**) of the logger is set to work with ultrasonic anemometers Delta Ohm HD2003 and HD52.3D... series, and with sensors with MODBUS-RTU protocol.

**Sensors with RS485 output different from those mentioned may not work correctly when connected to the RS485 port, due to a different communication protocol.**

The **COM 485** port is located at point **11** of the terminal board figure on page. 8. The connection of the anemometer or sensor is as follows:

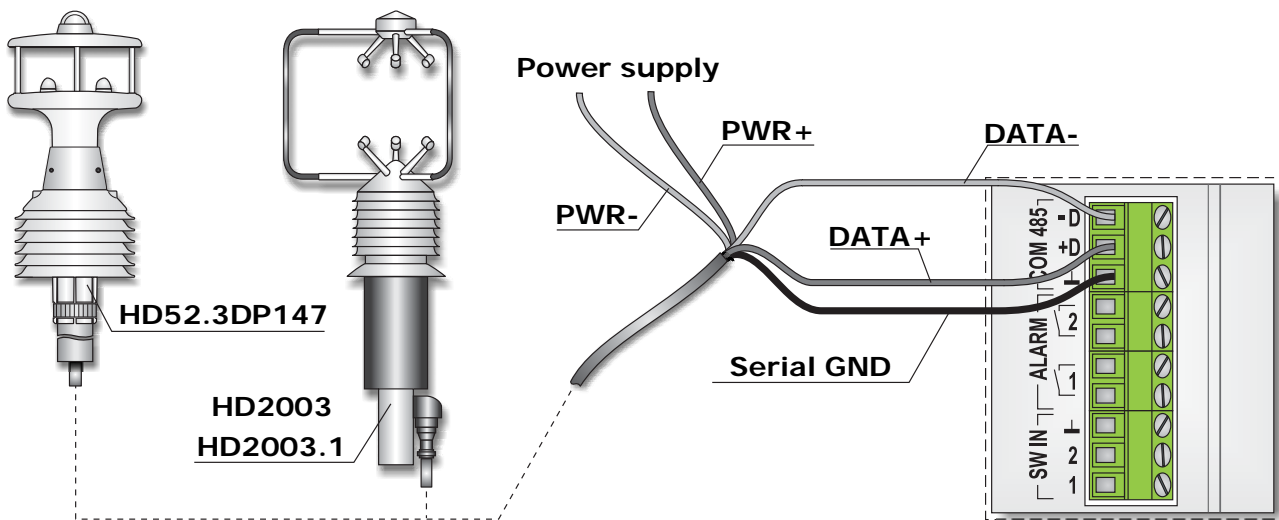

The **DATA+** terminal of the anemometer or sensor is connected to the **+D** input of the data logger. The **DATA-** terminal of the anemometer or sensor is connected to the **-D** input of the data logger. The anemometer or sensor serial ground is connected to the terminal indicated by the symbol  $\perp$ , corresponding to the insulated ground of the RS485 circuit.

If you use an anemometer with heating option, it is suggested to connect the anemometer power supply to the main power supply of the system, so as to keep always on the heating function.

*Note:* if the cable is very long, you should put on the RS485 data lines DATA+ and DATA- a surge protection device.

For the proper functioning of the system, the anemometers and the sensors must be pre-configured with the following settings:

1. The order in which the anemometer or the sensor sends the measured values to the output must match the one programmed into the data logger.
2. The unit of measurement of air velocity set in the anemometer must match the one programmed in the data logger. The units of measurement set in the sensor with MODBUS-RTU protocol should match the ones programmed in the datalogger.
3. Averaging period of the measures = 1 second (for Delta OHM anemometers only).
4. Communication mode RS485 (with MODBUS-RTU protocol for sensors other than the Delta OHM anemometers).
5. The RS485 Address must match the one programmed into the data logger.
6. Baud Rate = 115200 for the Delta OHM anemometers. For the other sensors, the communication speed must match the one programmed into the data logger.

In case of supply of a complete system with anemometer and data logger with program pre-installed, the anemometer is already configured as required by the program and you do not need to perform any preset. Otherwise, please refer to the chapter of the manual on programming of the logger and anemometer manual for how to set parameters.




## 5.7 ALARM OUTPUTS

The data logger has alarm outputs that are activated when the acquired values exceed the programmed thresholds.

You can configure one or more ports of I/O to work as alarm outputs (see section 5.4 on page 25 for the connection of such ports), or you can use the two outputs with potential-free contact indicated at point **10** of the terminal board figure on page 8.

If a I/O port is configured as alarm output, the output changes to logic level 1 when the alarm condition occurs. The output returns to logic 0 if the measure falls within the programmed thresholds.

If you use an output with potential-free contact, contact is normally open and closes when the alarm condition occurs. The contact remains closed until the alarm condition persists.

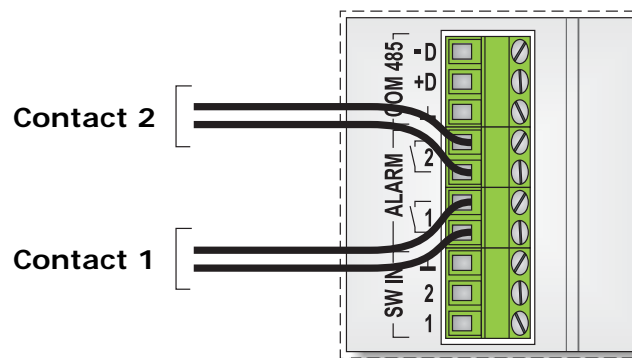


**While connecting the outputs to external devices, make sure not to exceed the specifications of the electrical contact (1 A – 30 Vdc resistive load).**

## 5.8 GROUNDING

The instrument is provided with a terminal for connection to protective earth. The terminal is indicated by point **5** of the figure of the terminal on page 8.

To connect the cable, unscrew the knob of the clamp, insert the lug of the cable and then replace the knob ensuring secure clamping of the cable.

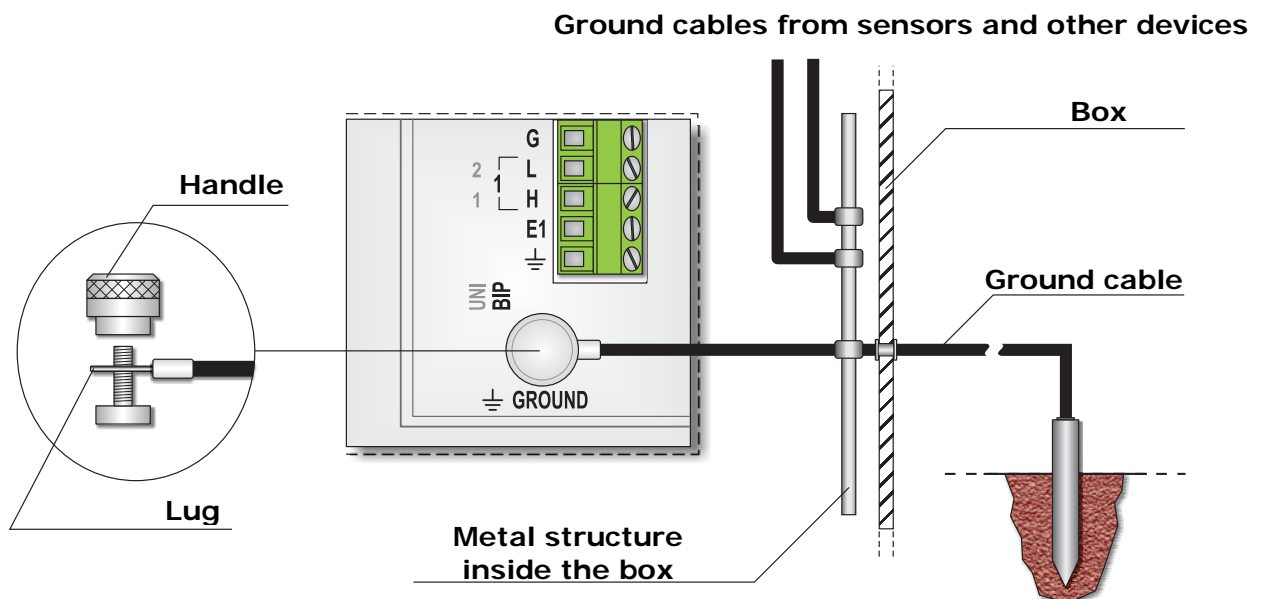


For the ground connection use a cable size of at least 12 AWG ( $\approx 3.31 \text{ mm}^2$ ).

The ground terminal is at the same potential of the power supply ground and of the analog ground reference.

It is recommended that in the system there is only one connection point to the ground, to avoid currents generated by several points at different potentials (ground loop) that may cause measurement errors. If the sensors connected to instrument shall provide its own ground connection, connect to a common metal bar inside the system container and then connect the bar to the ground. If the container is metal, the bar must also be connected to the container.

### **THE PROBLEM OF DIFFERENT GROUND POTENTIALS (GROUND LOOP)**

Different ground points could not be exactly at the same potential. If the housing of a sensor is connected to the ground and the sensing element is not electrically insulated from the housing, it can generate unwanted currents flowing in the cables of the signal when the sensor is connected to a receiver (ex. a data logger) also grounded in a different place.

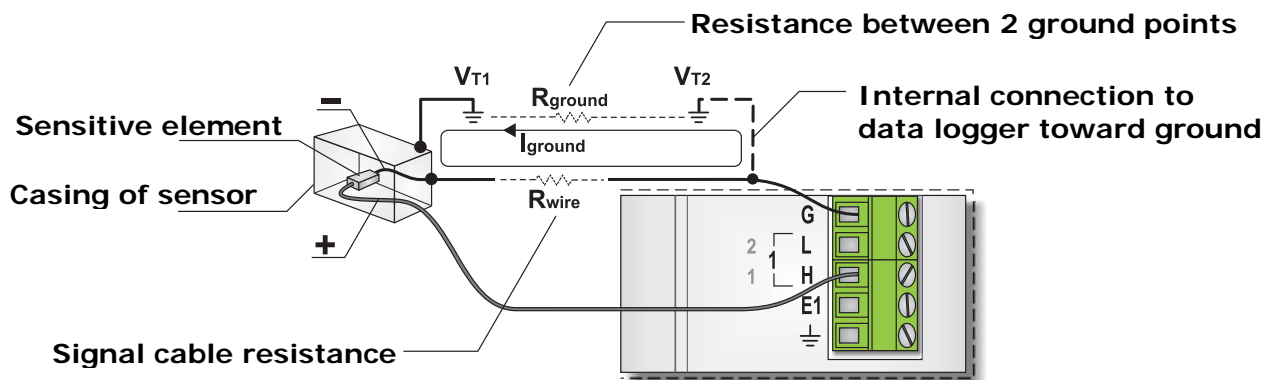

In this situation there is a measurement error due to the fact that the logger detects the output signal of the sensor summed with the difference of the two ground potentials.

The problem is particularly relevant in the case of sensors that have a very small output signal, for example, thermocouple probes (if the hot junction is connected to the outer sheath) or solar probes with output in mV (if the negative signal is connected to the metallic housing).

In the case of inputs configured for the measurement of thermocouples and solar radiation sensors with mV output, the problem occurs even if the measure is in differential mode (the negative signal is connected to L instead of G) because the data logger internally connects the input L to ground during the measurement.

In general, you can avoid the drawbacks due to the "ground loop" effect by observing the following rules:

- Connect all the sensors and data logger to a single ground point.
- Connect the cable shield only by the data logger and leave it free on the probe side.
- Placed between the sensors and data logger converters / transmitters with isolation between input and output
- Do, when possible, truly differential measurements, in which the negative is high impedance and therefore has no physical connection to analog ground.

## 5.9 HOW TO READ THE WIRING DIAGRAM

The connection of the sensors must be made in accordance with the program installed in the data logger. The **HD32MTLogger** programming software is designed to generate a list of connections required by the program. It is the responsibility of the data logger programmer to create a wiring diagram of the data logger connections required to be provided to the installer.

The wiring diagram generated by the programming software has the following form:

HD32MT.1 Wiring Diagram							
				Scan Period: 2 sec		Program: My_System	
	Measure Data	#	Name	Unit	Channel	Wiring	Info
1	NTC beta=3579.0	b	Sensor_01	deg C	UNI1	[NTC-> closest by H to G] [Reference Rf-> closest by H to E]	1/3/333.333/0.12/0/0
2	Ratio of Voltages Vs/VExc	c	Sensor_02	degrees	UNI2	[+Vs-> L] [-VExc-> E] [-Vs and -VExc-> G]	2/3/0.0/0.1/0/0
3	Thermocouples K	f	Sensor_03	deg C	BIP2	[+Signal-> H+E] [-Signal-> L]	3/4/0.0/0.144/1/0
4	Resistance Divider 4Wire	g	Sensor_04	deg F	BIP3	[wire #1-> E wire #2->H] [wire #3-> L wire #4-> G]	4/3/2666.666/0.3/0/0
5	Unipolar Voltage	h	Sensor_05	%RH	UNI7	[Signal-> H] [Ground-> G]	3/0/0.0/100.0/10.0/0
6	Bipolar Voltage	i	Sensor_06	mbar	BIP5	[+Signal-> H] [-Signal-> L]	4/0/0.0/100.0/10.0/0
7	Current Loop 4-20mA	j	Sensor_07	ppm	BIP6	[Shunt closest by H to L] [-mA-> H] [+mA-> +PWR] [L-> GROUND]	1/0/0.0/0.2/2/0.200
8	Digital Pulses	k	Sensor_08	mm	PULSE 1	[Signal-> PULSE P1] [Ground-> GROUND]	2/0/0.0/1.0/2/0
9	Switch Closure	l	Sensor_09	m/s	SW IN 1	[Signal-> SW IN 1] [Ground-> ISOLTED ground]	1/0/0.0/0.2/2/0.200
10	Radiometry	m	Sensor_10	W/m2	BIP7	[+Signal-> H] [-Signal-> L]	2/0/0.0/1.0/2/0
11	HD2003 SpeedWind	n	Air_Speed	m/s	COM 485	[DATA+ -> D+] [DATA- -> D-] [Ground-> ISOLATED ground]	2/5/0.0/1.0/M1xx/1
12	HD2003 Direction	o	Direction	degrees			
13	HD2003 Pressure	p	Pressure	mbar			
14	HD2003 Temperature	q	Temperature	deg C			
15	HD2003 R. Humidity	r	RH	%			
16	free	---	---	---			
17	free	---	---	---			
18	free	---	---	---			
19	free	---	---	---			
20	free	---	---	---			

The diagram consists of a head which shows the name of the program and the acquisition interval, and a series of columns describing the sensors provided:

1. Sequential number of the sensor.
2. Description of the sensor output.
3. Letter designating the sensor: the information is assigned automatically by the program and can be neglected with regard to the connection.
4. Sensor name: identifies the sensor to be connected.
5. The unit of measurement of the quantity measured by the sensor.
6. Input of the logger to which the sensor must be connected.
7. Details of the connection to be made. Information on the connection described in detail in the previous paragraphs are reported in mnemonic form.
8. Summary information about programming parameters. In some cases, the column can not be present if there is not enough space to print.
9. Name of the program.
10. Acquisition interval (Scan Period).

The columns to be considered for installation are the **4** (which sensor must be installed), **6** (which input should be connected to the sensor) and **7** (connection details).

*Note:* The connection diagram does not include the values of possible resistors to be connected externally to the data logger, such as shunt resistors, the resistors of the divider to attenuate the signals or the reference resistors of NTC. Values must be supplied separately by the programmer.

## 5.10 EXAMPLES OF METEOROLOGICAL STATIONS

Here are two examples that illustrate the connection of several sensors that are used routinely in a weather station.

The examples show two possible solutions to measure the following parameters: temperature, humidity, barometric pressure, wind speed and direction, amount of rainfall, global and net solar radiation.

It is assumed that the stations are powered by a battery connected to a solar panel.

In the figures the choice of inputs to which sensors are connected is only an example. In a real installation adhere to the wiring diagram supplied by the programming software of the data logger.

### Example 1

Consider a weather station that requires the installation of the following sensors:

- **HD9009TRR temperature and relative humidity transmitter with output 0-1 V**  
temperature output connected to the single-ended analog input number 1  
relative humidity output connected to the single-ended analog input number 2
- **Vane sensor for wind direction with potentiometer output**  
cursor of the potentiometer connected to the single-ended analog input number 3  
potentiometer extremes connected to terminals E2 (excitation) and G (analog ground)
- **HD9408TR BARO barometric transmitter with output 0-1 V**  
pressure output connected to the single-ended analog input number 4
- **LP NET 07 Net radiometer with mV output**  
connected to the differential analog input number 3
- **LP PYRA 02 Pyranometer with mV output**  
connected to the differential analog input number 4
- **HD2013 tipping bucket rain gauge**  
connected to the SW IN number 1 input
- **Cup anemometer with contact output**  
connected to the SW IN number 2 input

The sensors that require power (HD9009TRR and HD9408TR BARO) are connected to the main power supply of the system.

The connection diagram provided by the software program takes the following form:

Sensors to be connected


Inputs of data logger

Connections to be performed

HD32MT.1 Wiring Diagram

	Measure Data	#	Name	Unit	Channel	Wiring
1	Unipolar Voltage	a	HD9009TRR_T	Degree C	UNI1	[Signal-> H] [Ground-> G]
2	Unipolar Voltage	b	HD9009TRR_RH	%RH	UNI2	[Signal-> H] [Ground-> G]
3	Ratio of Voltages Vs/VExc	c	Wind_Dir	Degrees	UNI3	[+Vs-> H] [+VExc-> E] [-Vs and -VExc-> G]
4	Unipolar Voltage	d	HD9408TRBARO	mbar	UNI4	[Signal-> H] [Ground-> G]
5	Radiometry	e	LP_NET_07	W/m2	BIP3	[+Signal-> H] [-Signal-> L]
6	Radiometry	f	LP_PYRA_02	W/m2	BIP4	[+Signal-> H] [-Signal-> L]
7	Rain Gauges	g	HD2013	mm	SW IN 1	[Signal-> SW IN 1] [Ground-> ISOLTED ground]
8	Switch Closure	h	Cup_Anemom.	m/s	SW IN 2	[Signal-> SW IN 2] [Ground-> ISOLTED ground]

The physical connection of the sensors is shown below:

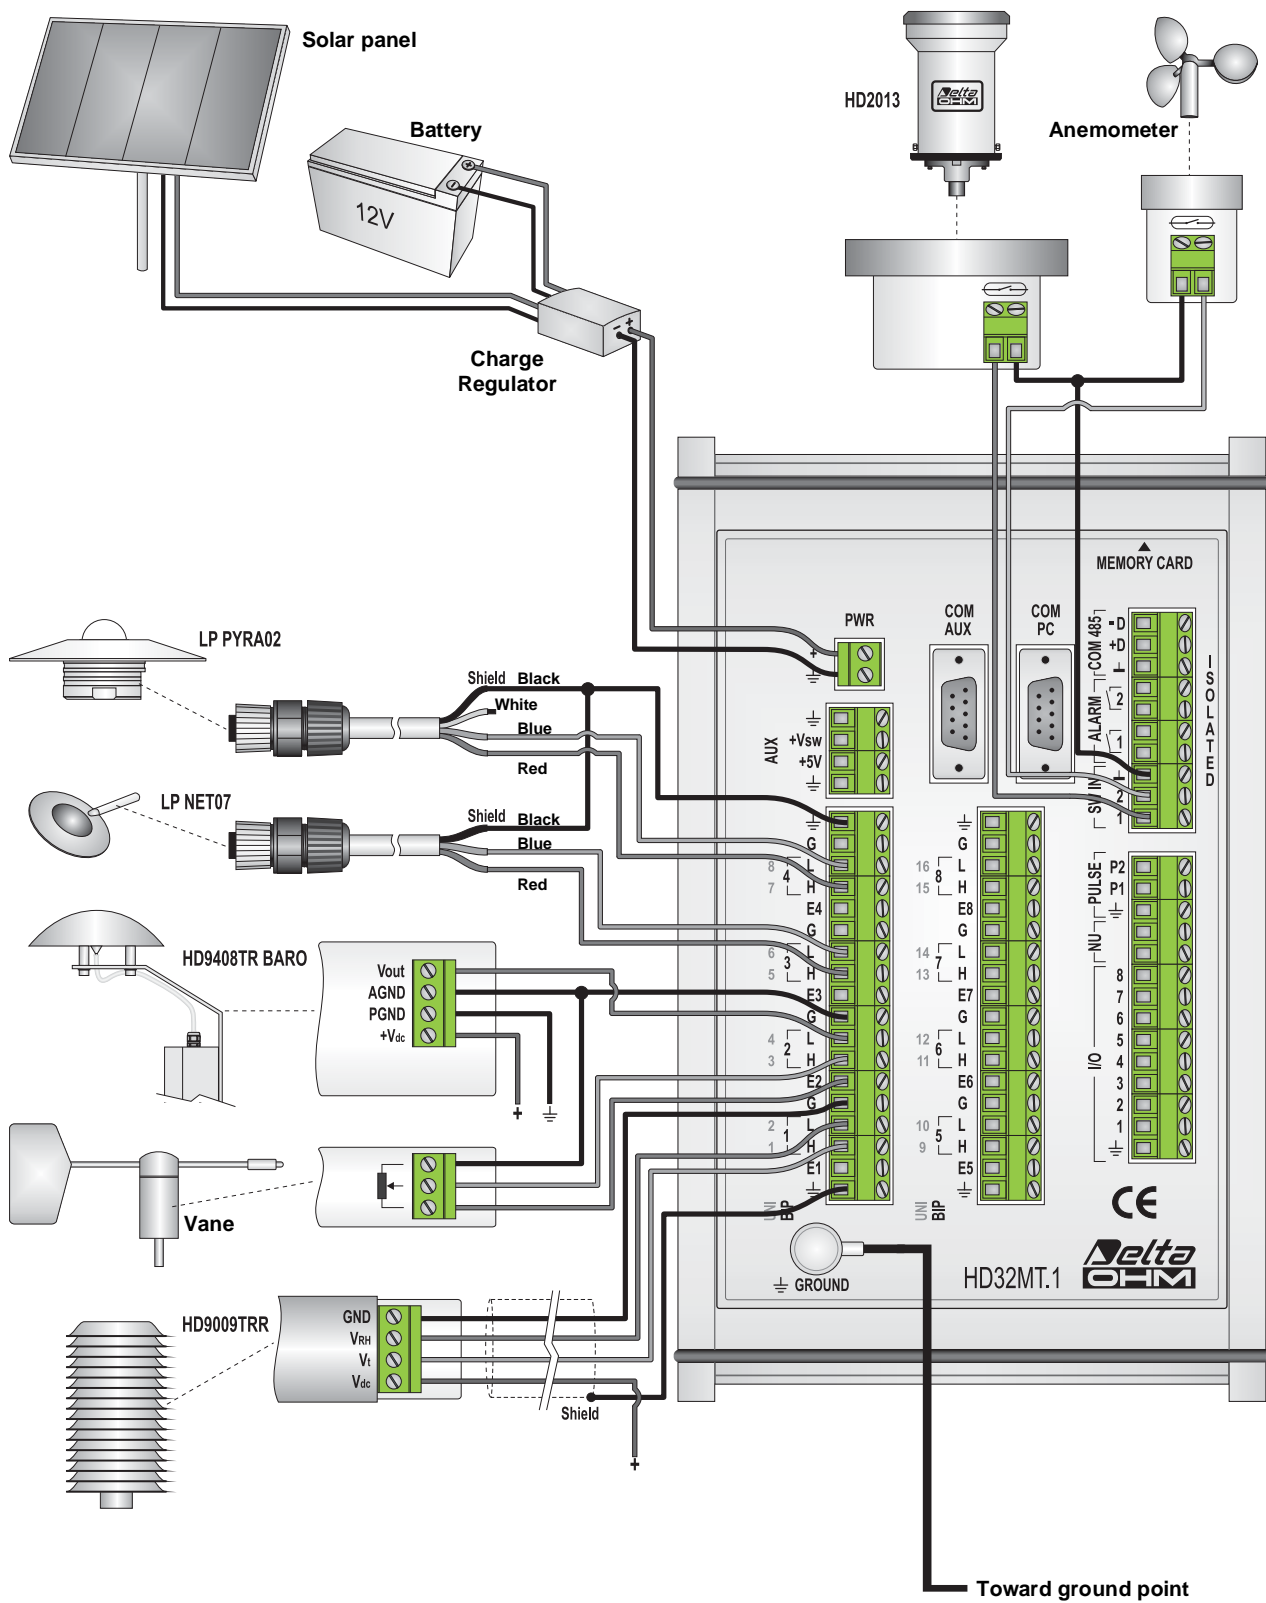

*Note:* for simplicity, in the figure have been omitted the ground connections of the individual sensors.

## Example 2

In this example, measurements of temperature, relative humidity, pressure, wind speed and direction are made by the ultrasonic anemometer HD52.3D147. The sensors installed in the weather station thus becomes:

- **HD52.3D147 Ultrasonic anemometer**  
connected to the logger via the RS485 port (**COM 485**)
- **LP NET 07 Net radiometer with mV output**  
connected to the analog differential input number 1
- **LP PYRA 02 Pyranometer with mV output**  
connected to the analog differential input number 2
- **HD2013 tipping bucket rain gauge**  
connected to the SW IN input number 1


The HD52.3 D147 is connected to the main power supply of the system.

The connection diagram provided by the software program takes the following form:

HD32MT.1 Wiring Diagram						
	Measure Data	#	Name	Unit	Channel	Wiring
1	HD52.3D SpeedWind	a	W_Speed	m/s	COM 485	[DATA+ -> D+] [DATA- -> D-] [Ground-> ISOLATED ground]
2	HD52.3D Direction	b	W_Dir	degrees		
3	HD52.3D Pressure	c	Pressure	mbar		
4	HD52.3D Temperature	d	Temperature	deg C		
5	HD52.3D R. Humidity	e	Rel_Humidity	%		
6	free	---	---	---	BIP1	[+Signal-> H] [-Signal-> L]
7	free	---	---	---		
8	free	---	---	---		
9	free	---	---	---		
10	free	---	---	---		
11	Radiometry	f	LP_NET_07	W/m2	BIP2	[+Signal-> H] [-Signal-> L]
12	Radiometry	g	LP_PYRA_02	W/m2	BIP2	
13	Rain Gauges	h	HD2013	mm	SW IN 1	[Signal-> SW IN 1] [Ground-> ISOLATED ground]

Note that for ultrasonic anemometers there are always 10 quantities reported, although the quantities actually measured could be less. At unused quantities, dashed lines appear.

The physical connection of the sensors is shown below:

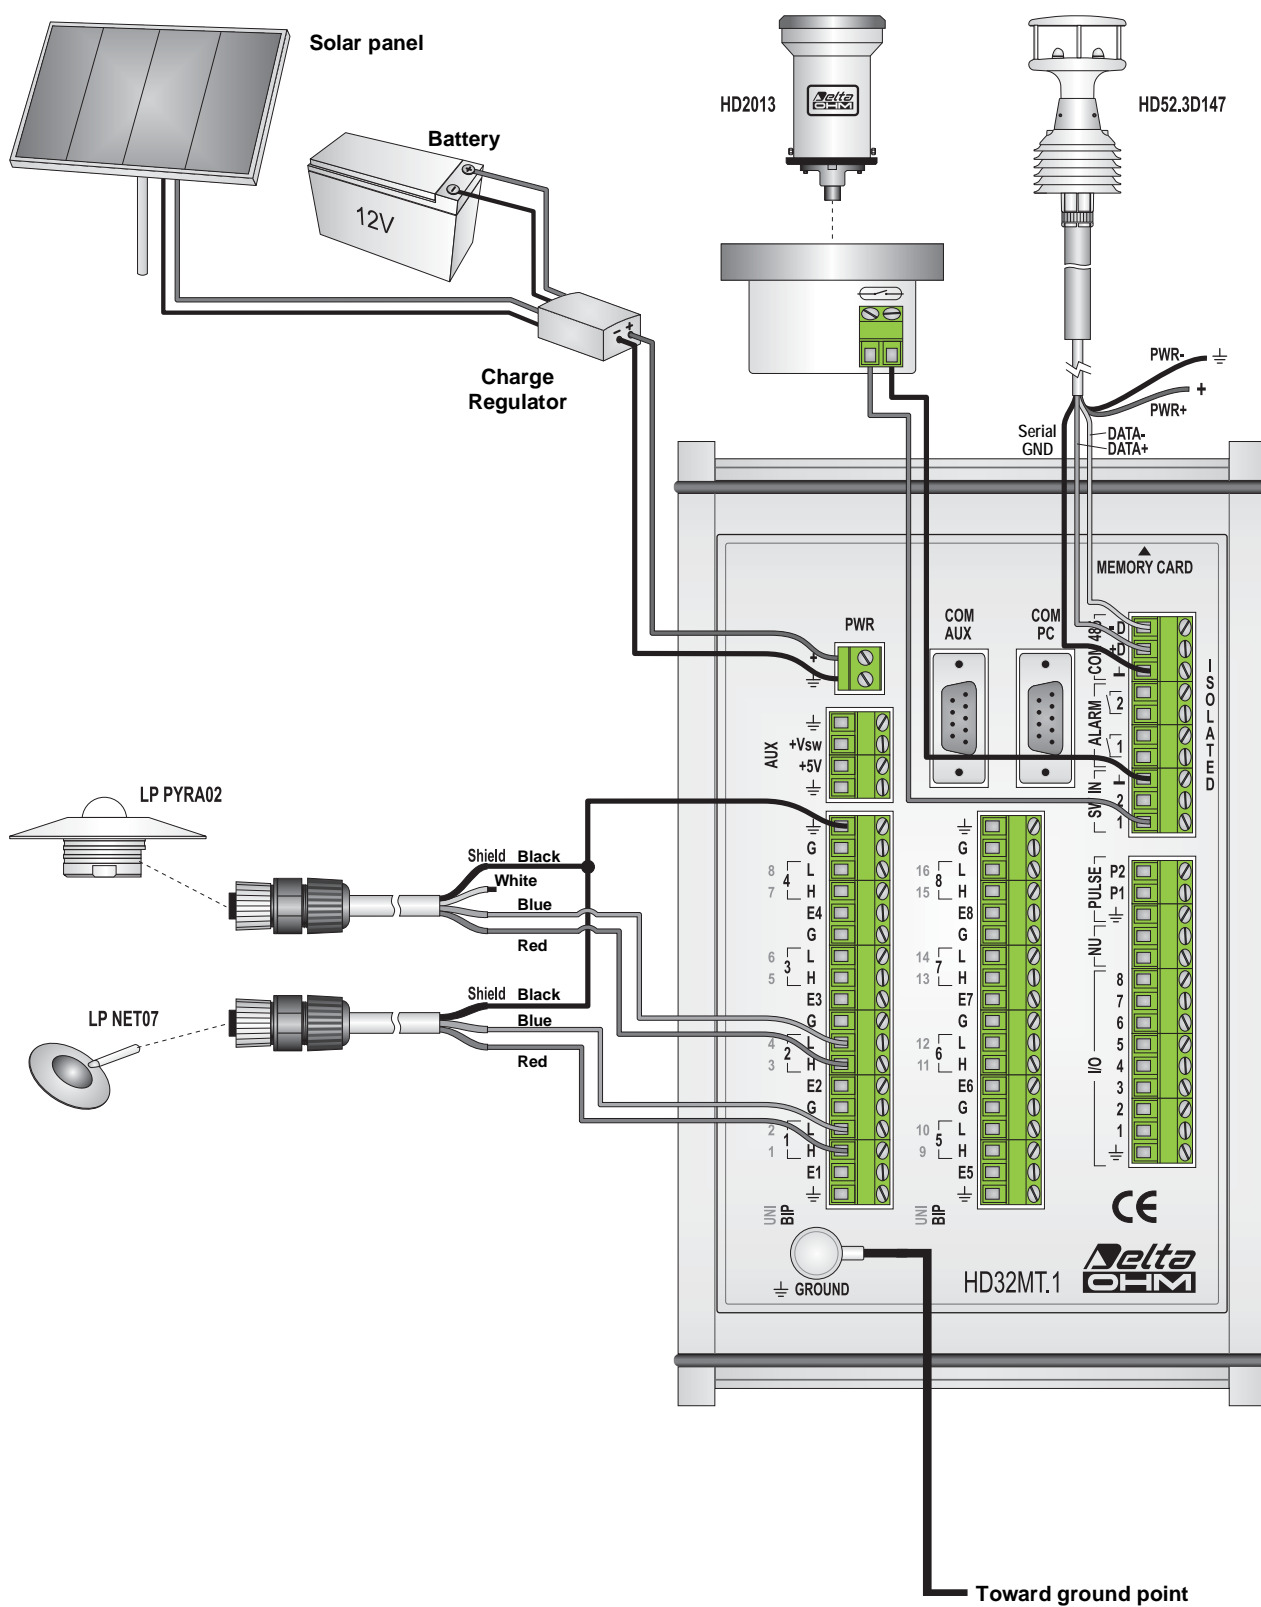

*Note:* for simplicity, in the figure have been omitted ground connections of the individual sensors.

## 6 CONNECTION TO THE PC

The data logger can be connected to a PC to do the programming, view real-time measurements or to download stored data.

There are three ways to connect the instrument to the PC:

- direct cable connection
- connection via a radio modem (radio modem version only)
- connection via a Local Area Network (LAN) with TCP/IP protocol

The operations that can be done with the PC are independent of the type of connection. The radio connection has the advantage of allowing the management of the instrument at a distance, especially for installations in remote unattended areas.

To connect to the PC use the **COM PC** RS232 serial port, with type D-sub 9-pin male connector.


*Note:* Communication with the PC is established even in the absence of a program installed in the data logger. In the absence of an operating program, the instrument does not make measurements or recordings, then will not be available monitor and data downloading functions, but will only be available the programming function.

Here are the wiring diagrams for the three modes.

### 6.1 DIRECT CONNECTION VIA CABLE

Connect the serial cable between the data logger **COM PC** port the and the PC. Depending on the data logger that connects to a serial port RS232 or USB port, use the following cables:

- the cable code **9CPRS232** "null modem" to connect to a RS232 serial port.
- the cable code **C205** for connection to a USB port, installing the drivers for the PC (the cable has a built-in RS232/USB converter).

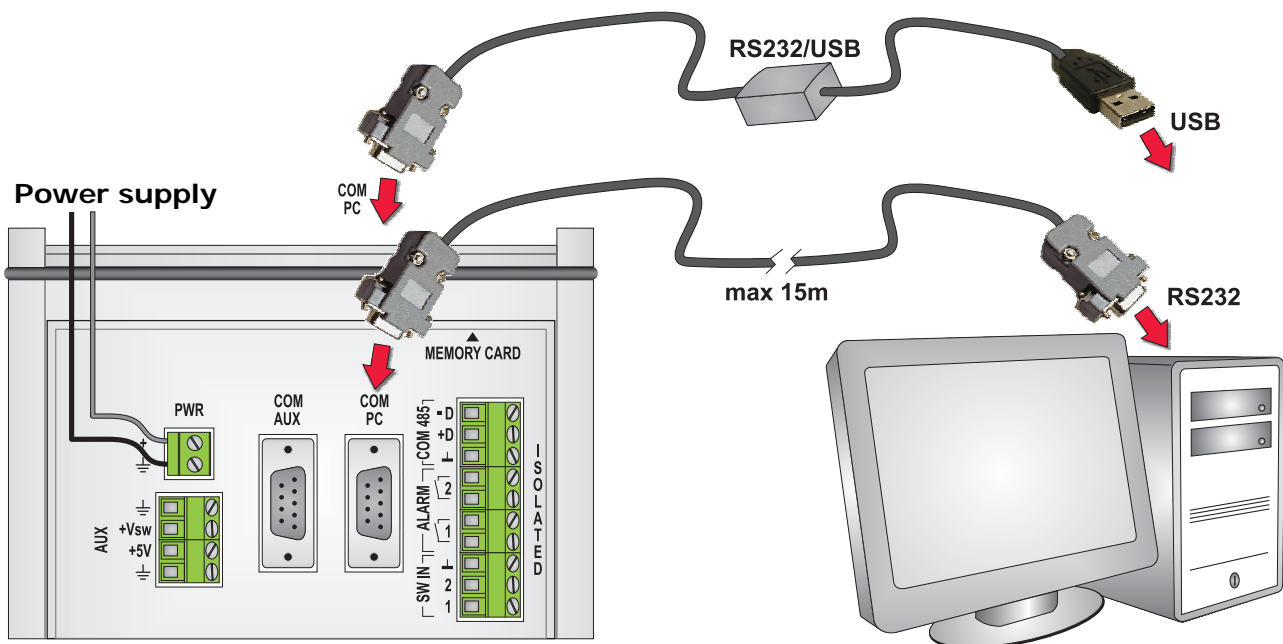


For connection to an RS232 serial port you can use a standard RS232 "**null modem**" cable. The cable should have female connectors on both sides, and the instrument end of the connector must be 9-pin Sub-D type. The cable must not exceed a length of 15 meters.



## 6.2 CONNECTION VIA RADIO MODEM (ONLY FOR THE RADIO MODEM VERSION)

In the model with radio modem option, a radio communication between instrument and PC can be established through the use of the external optional VHF radio modems.

You need two radio modems: one connected to the **COM PC** port of the instrument and one connected to your PC. The two radio modems must be connected to the respective antennas, through the coaxial cables with BNC connector, the cables are fixed length.

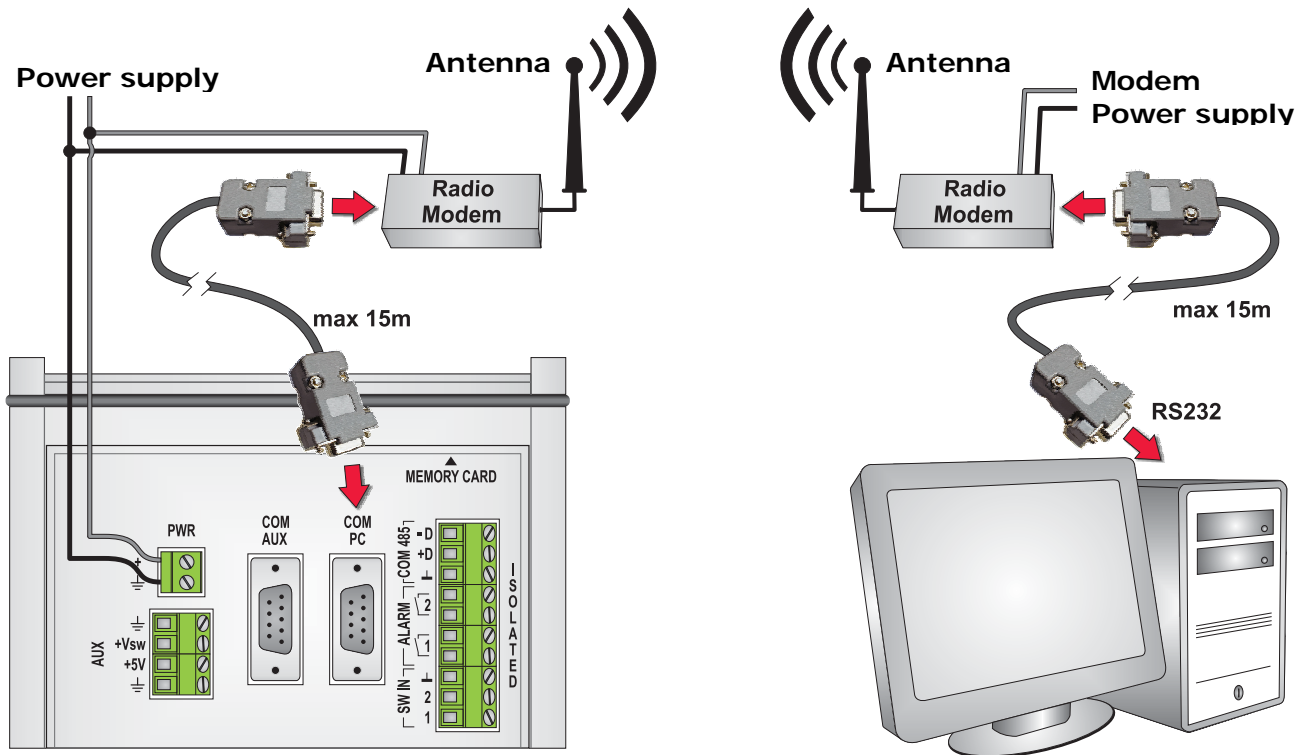

If your PC has no RS232 port but only USB ports, it can be placed between the modem and the PC the cable **C205M** with built-in RS232/USB converter, in which case make sure you install the drivers in the PC.

The radio modem must be configured with a serial communication speed of 38400 bits/s and should be able to handle the RTS and CTS signals.

The two cables that connect the radio modem to the instrument and the PC are the same. They are standard RS232 serial cables with female connector on the side of the instrument and male connector on the side of the modem. The connectors are 9-pin Sub-D type. The length of each cable must not exceed 15 meters.

The maximum distance between the two radio modems depends on various factors, including the power output of the radio transmitter, the sensitivity of the radio receiver, the antenna type used and the presence of obstacles between the two antennas.

For VHF Radio Modems with a power output of 500 mW (effective radiated power), operating at 169MHz with a whip antenna, the distance can vary from 12 to 15 km in the open air and from 2 to 3 km inside buildings.

Upon request, Delta OHM provides VHF Radio Modem with 169 MHz frequency, pre-configured and ready for use, including a whip antenna and RS232 serial port.

Warning:

**1) The two Radio Modems provided by Delta OHM are configured differently and therefore are not interchangeable between PC and data logger, connect the two modems according to the instructions given on the modems.**


2) It is guaranteed the functioning of the instrument with the Radio Modems provided by Delta OHM. We can not guarantee the compatibility of radio modems other than those supplied.

*Note:* Even if the radio modems communicate with the instrument and the PC at 38400 bit/s, the total communication speed of the system depends on the speed of data transfer between the two radio frequency modems. For example, if the communication speed between the two radio modems is 3600 baud, also the total communication speed of the system is limited to 3600 baud.

### 6.3 CONNECTION VIA LOCAL AREA NETWORK WITH TCP/IP PROTOCOL

For the connection via Local Area Network (LAN), a RS232 to Ethernet adapter (for example the B&B electronics adapter model ESR901) must be placed between the data logger and the local network.

Connect the **9CPRS232** "null-modem" serial cable between the data logger **COM PC** port and the adapter RS232 serial port. Connect a standard Ethernet cable between the adapter and the local network.

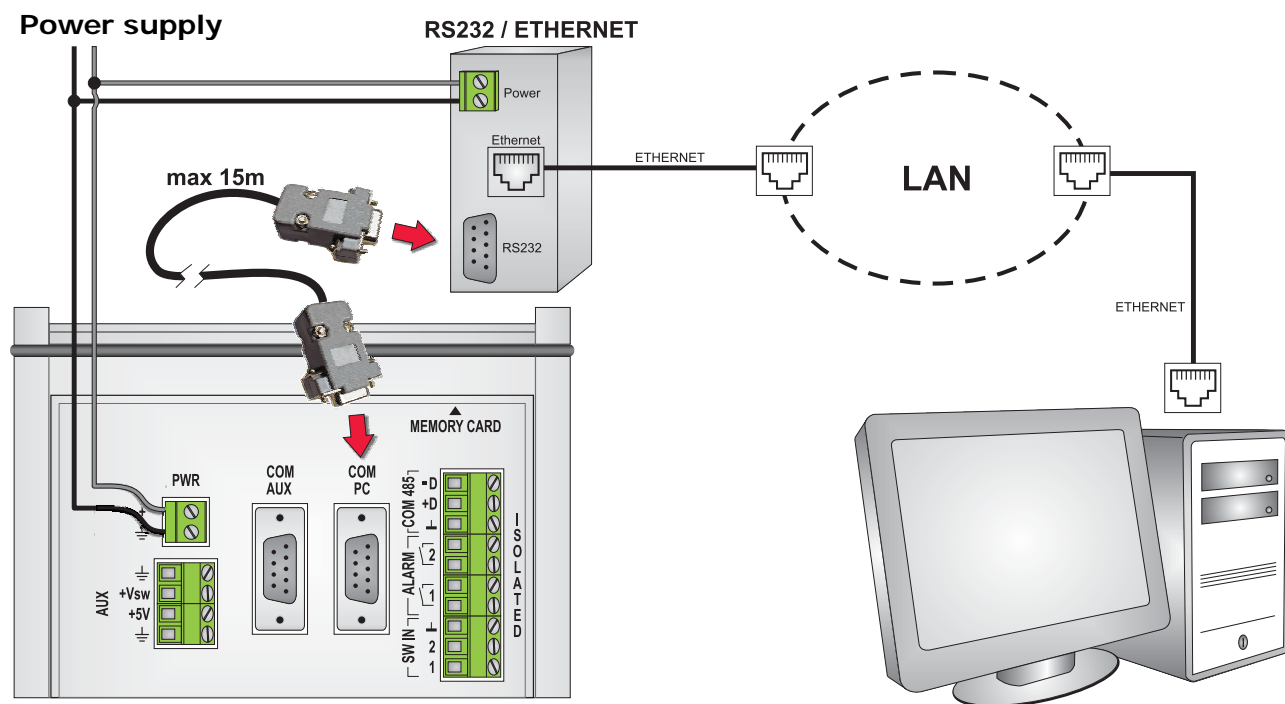

The adapter must be configured with the following RS232 serial communication parameters:


	Basic Datalogger	Datalogger with Radio Modem option
Baud Rate	115200	38400
Data bits	8	8
Parity	N	N
Stop bits	1	1
Flow control	None	None

## 7 GSM CONNECTION

In both the basic and Radio Modem versions of the data logger, an optional external GSM module can be connected. By connecting the GSM module, the data logger is capable of sending alarm messages via **SMS** to mobile phones, and information about the data stored via Internet to **e-mail** and **FTP** addresses.

The GSM module is connected to the data logger **COM AUX** port. To the module must be connected its antenna.

The cable connecting the logger to the GSM module is a standard RS232 serial cable with female connector on the side of the instrument and male connector on the side of the module. The connectors are 9-pin Sub-D type. The cable length must not exceed 15 meters.

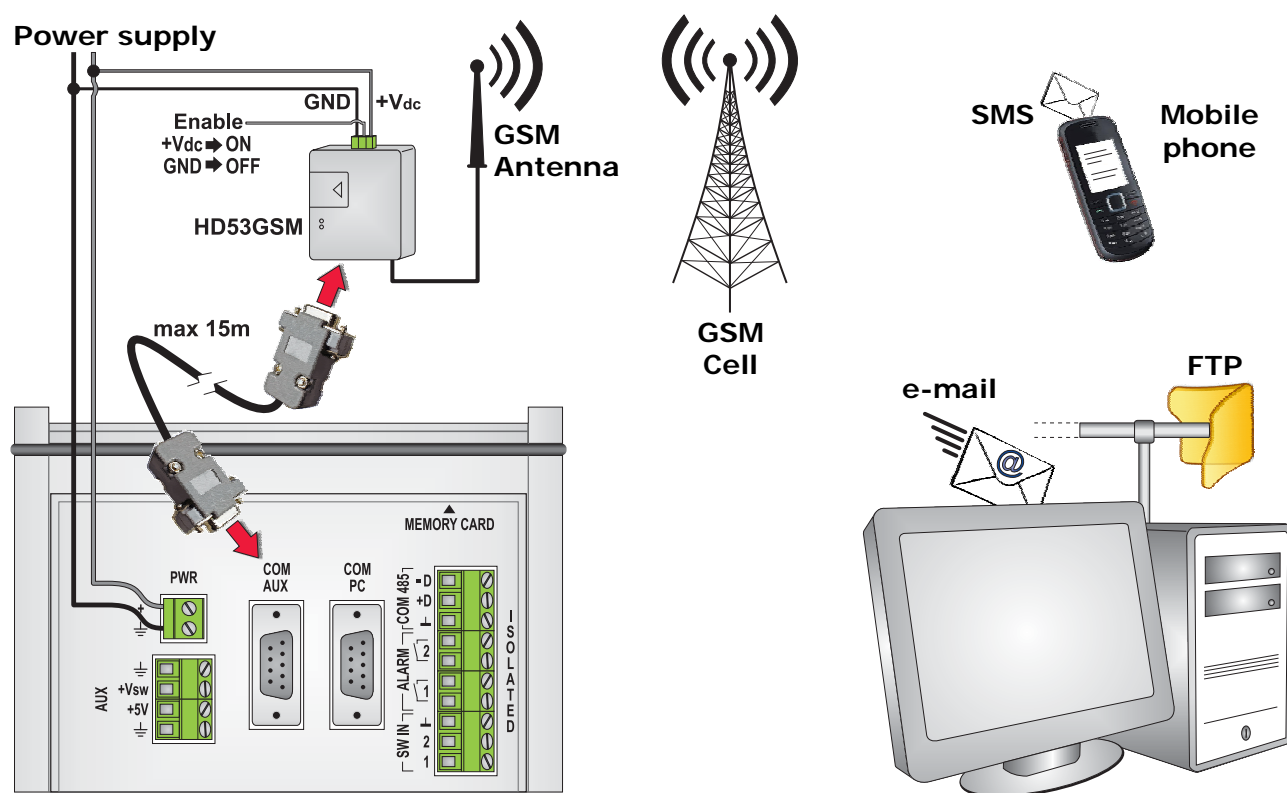

The GSM module must be configured with a serial communication speed of 115200 bits/s.

In the GSM module must be inserted a **SIM** card enabled for data transmission. The card must be obtained from a telephone operator that has a suitable GSM network coverage in the place where you will install the system. For the insertion mode of the card refer to the documentation of the module.

Information on telephone numbers and e-mail and FTP addresses are stored in the data logger using the HD32MTLogger software (see software manual).

Upon request, Delta OHM provides the GSM module (**HD53GSM**) already configured, including a whip antenna and RS232 serial port.

**Warning: it is guaranteed the functioning of the instrument only with the GSM module provided by Delta OHM. We can not guarantee the compatibility of modules other than the one provided.**

For the transmission of data via e-mail and FTP, you must have an SD card inserted in the data logger, since the data logger transmits data stored on the card and not in internal memory. The memory card is not needed for sending the alarm SMS.

## 8 CHANGING THE CONFIGURATION

The chapter is dedicated to those who have a data logger with a measures and stores program installed and need to quickly make small changes in the program, for example to change the acquisition interval or replace a sensor, without having a thorough knowledge of the programming mode.

The possibility of modifying the program are illustrated by typical examples of changes that may be required. This chapter is not intended as a substitute for a complete discussion of programming; if you are unsure about the changes to be made you should refer to chapter 9 which shows in detail the programming mode and chapter 5 for details on the possibilities for sensor connection.

The program of measures and recordings can be changed even if the data logger is already installed and running in a system.

The program change is divided into the following steps:

- Connecting to a PC and reading the program installed in the data logger.
- Changing the configuration of sensors or acquisition/storage intervals.
- Installing the modified program in the data logger


### 8.1 CONNECTING TO THE PC AND READING THE PROGRAM INSTALLED

Changing the installed program requires that the instrument is powered on and connected (directly, via radio modem or via local network) to a PC where the **HD32MTLogger** software is installed. If the instrument is not already connected, connect the instrument by one of the methods described in chapter 6 on page 36.


Proceed with the following points:

- 1 On the PC, run the **HD32MTLogger** software via the icon on the desktop or selecting the program in the *Delta OHM* folder of *Programs* menu.
- 2 If the datalogger is connected directly to a RS232 or USB port of the PC, or it is connected through a Radio Modem, select the *Serial Connection* item in the *Tools* menu to configure the connection.

If the datalogger is connected through a Local Area Network with TCP/IP protocol, select the *TCP/IP connection setup* item in the *Tools* menu to configure the connection.

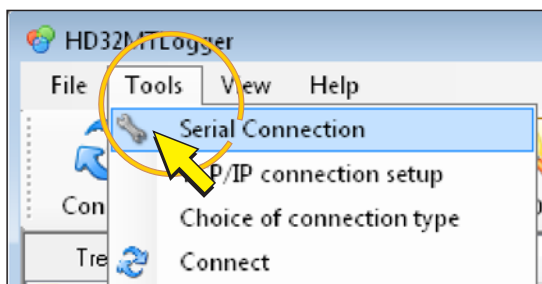

Direct or Radio Modem connection

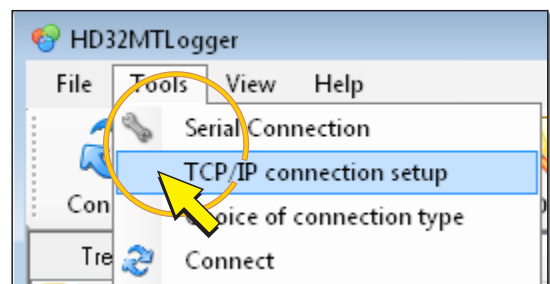


Local network connection

- 3 Configure the connection as follows:
  - 3.1 Direct or Radio Modem connection configuration:

In the *Connection Properties* window, apply the check mark next to the *Radio Modem* indication for the model with Radio Modem option. For the base model, make sure the check mark is not present; if the check mark is present, click on the box next to the indication to deselect.


### Model with Radio Modem option

Check

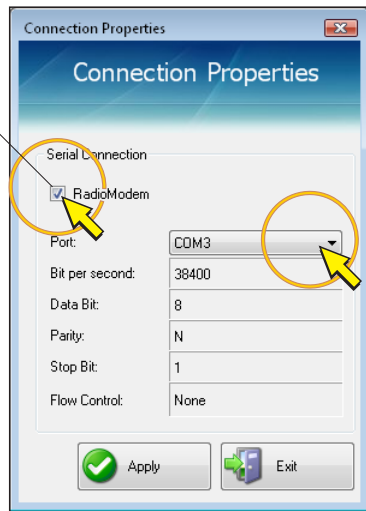

### Basic Model

No check

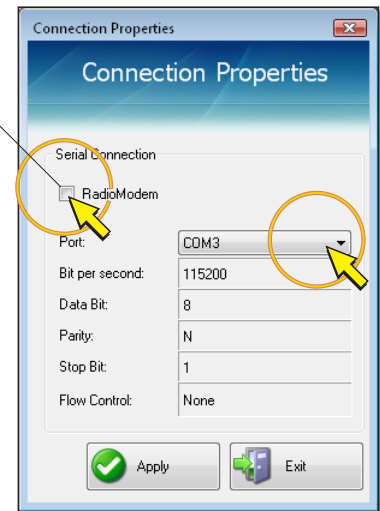


Select the COM port number of the PC which is connected to the instrument or radio modem, then click *Apply* to return to the main window.

If the COM port number is not known, leave the setting unchanged and press *Apply* to exit, the program will automatically search for an instrument connected to the available ports on your PC, starting from the set.

*Note:* the remaining communication parameters are fixed, the difference between the two models of data loggers is the data transfer rate (bits per second): 38400 for the model with radio modems and 115200 for the base model.


### 3.2 Configuration of network connection with TCP/IP protocol:

In the *TCP/IP connection setup* window, set the *IP address* and *Port* fields as required by the used RS232/Ethernet adapter (please see the adapter documentation).

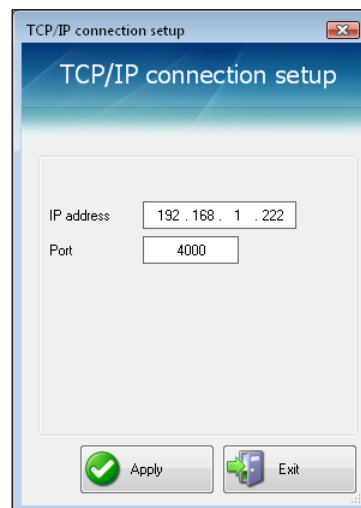


Press *Apply* to store the configuration. Press *Exit* to return to the main window.

- 4 Select the *Choice of instrument model and connection type* item in the *Tools* menu.

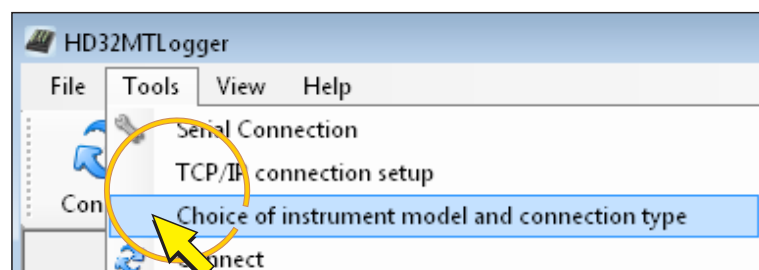


- 5 Select the model **HD32MT.1**. Select *Serial connection* if the datalogger is connected directly to a RS232 or USB port of the PC, or it is connected through a Radio Modem. Select *TCP/IP connection* if the datalogger is connected through a Local Area Network with TCP/IP protocol.

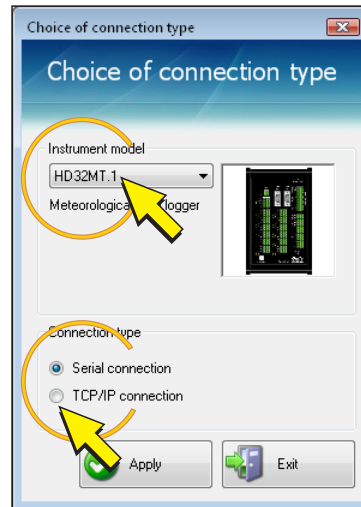


Press *Apply* to store the choice. Press *Exit* to return to the main window.

- 6 Select the *Connect* icon in the toolbar.

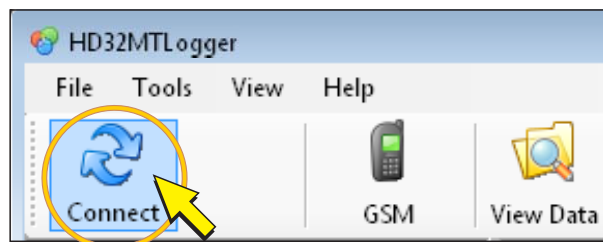

- 7 If the connection is successfully established, the software reads the data logger program installed and then displays the *DataLogger Information*, which are listed in the order: the data logger model, serial number, firmware version, the name of the program installed in the data logger, the acquisition interval and the number of store tables (a store table is a list of measures that are stored together).

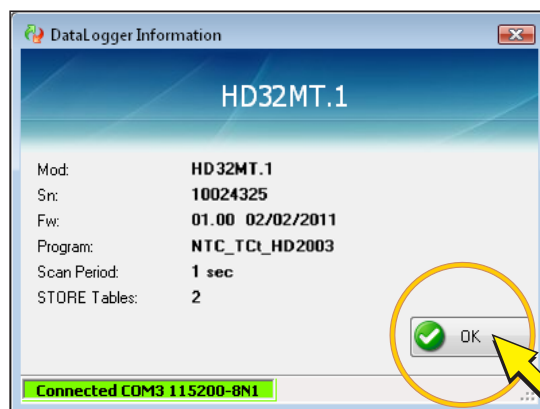


Press *OK* to access the software main window.

*Note:* when the logger is connected to your PC, capture and storage measures continue normally in accordance with the requirements of the program installed.


*Note:* If you attempt a connection while the logger is recording data in the SD memory card, you receive a warning message (*SD Card Running*). In this case, wait a few minutes and try to press the *Connect* icon again.

If you experience connection errors, follow the instructions of paragraph 9.5.1 on page. 100


- 8 Select the *Program Setup* icon in the command bar.

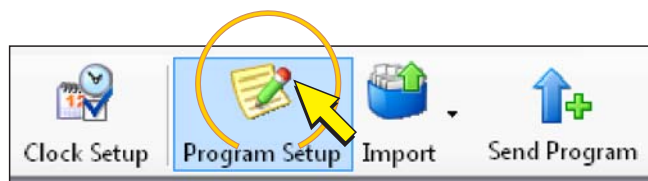

- 9 In the window that appears, select *RUNNING Program*.

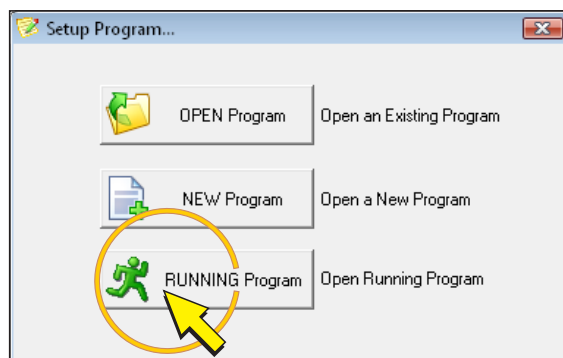

- 10 The window of the program installed appears and it is now possible to make the desired changes.

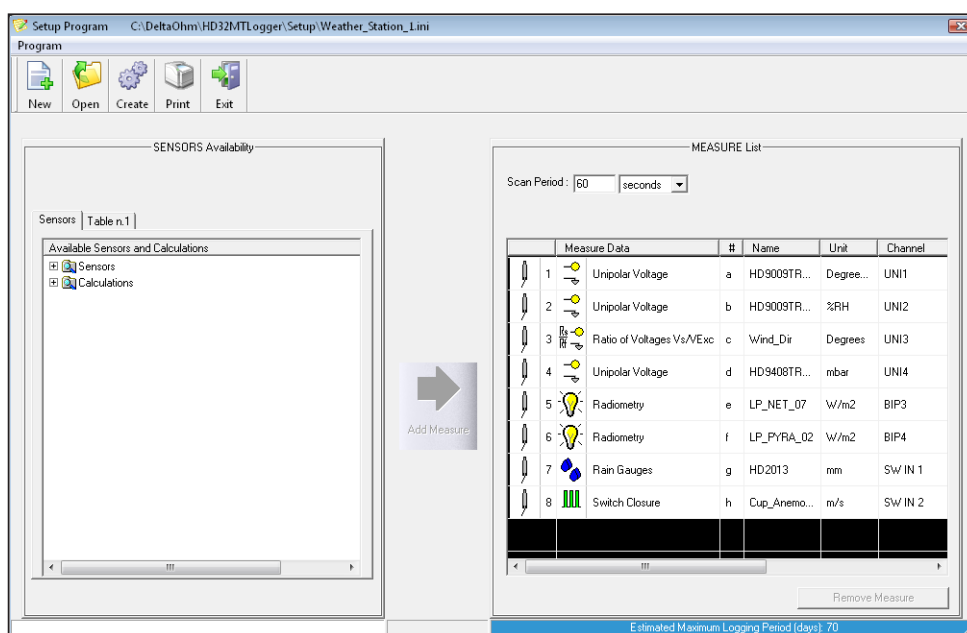


## 8.2 CHANGING THE INSTALLED PROGRAM

The possibilities of modifying the installed measures and recordings program are illustrated by the following four examples:

1. Changing the measures recording interval.
2. Changing the parameters of a sensor.
3. Adding a sensor.
4. Removing a sensor.

### 8.2.1 CHANGING THE MEASUREMENT RECORDING INTERVAL


The measurements stored by the data logger are listed in the tables called *Table n.* that appear on the left of the installed program window.

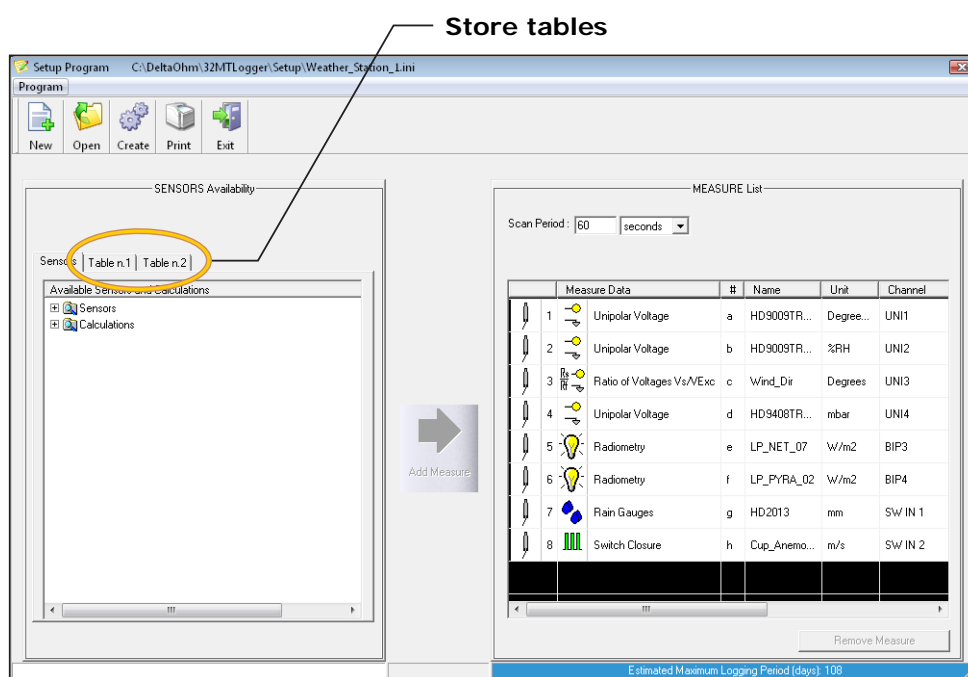

Measurements can be listed all in a single table (*Table n.1*) or can be divided into multiple tables numbered in sequence (*Table n.1*, *Table n.2*, etc.). Different tables may have different recording intervals.


To change the recording interval proceed as follows:

1. Select the table where you want to change the recording interval, by clicking the corresponding tab.

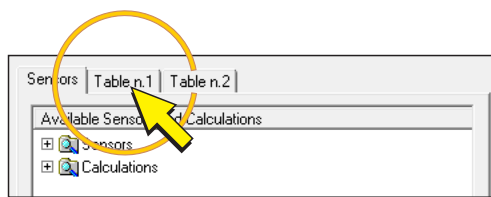

2. Write the new interval value in the field to the right of the indication *Store Period*. If necessary, select *minutes* or *seconds* for the interval unit of measurement.




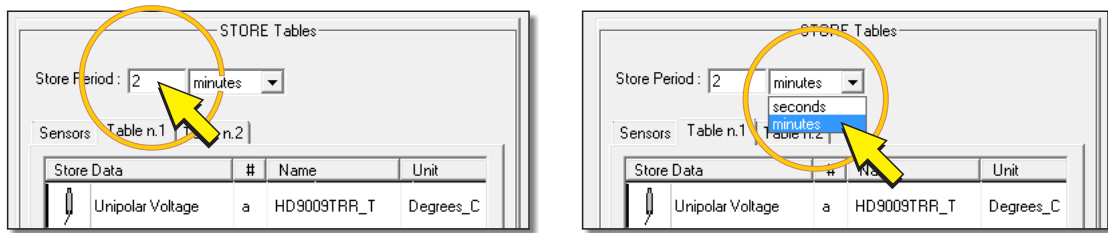


*Note: the recording interval (Store Period) must be equal or multiple of the acquisition interval (Scan Period) which appears on the right side of the window.*




3. Press *Create* to save the changes and generate the file necessary for the data logger.

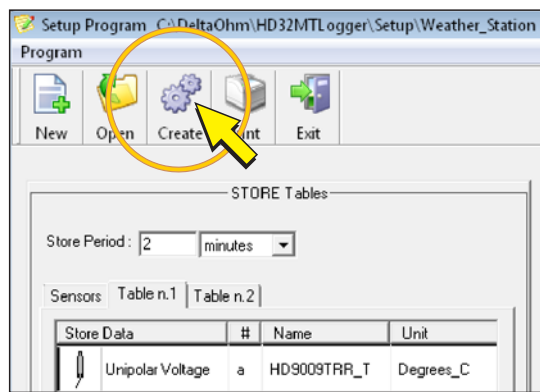

The window that allows you to specify the file name and path where to save it to your PC appears. After saving, a summary report is displayed, press *OK* to return to the program window.

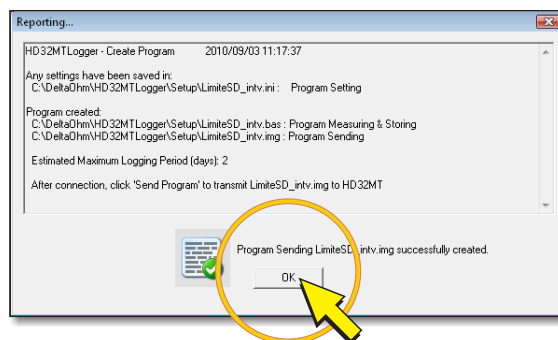

4. In the program window appears, on the lower right, the estimated number of days needed to fill the internal memory of the data logger with the new recording interval (*Estimated Maximum Logging Period*)

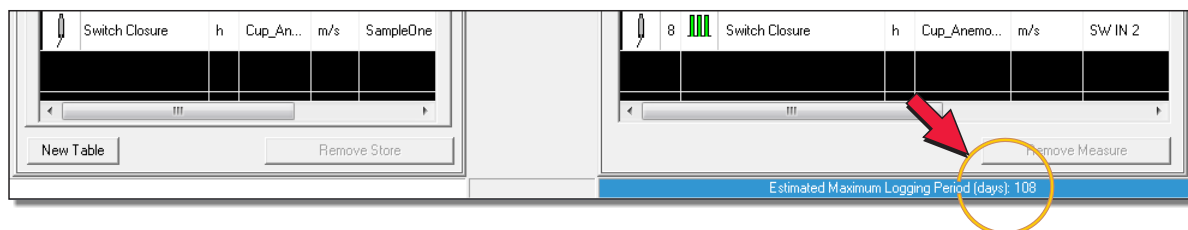

5. Press *Exit* to close the program window.

The program is ready to be installed in the data logger. Please see section 8.3 on page 53 for how to install it.


## 8.2.2 CHANGING THE PARAMETERS OF A SENSOR

The sensors used are listed in the right part of the program window, in the section entitled *MEASURE List*.


Changing the parameters of a sensor may be necessary, for example, when a sensor is replaced with another of the same type, and should therefore enter the configuration values of the new sensor.

To change the parameters of a sensor, proceed as follows:


1. Make sure that in the left side of the window of the program is selected the panel *Sensors* (the panel is selected by default when opening the program).

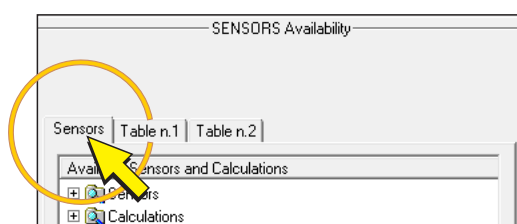

2. In the list of sensors (*MEASURE List*) that appears in the right side of the window, double click on the row of the sensor which you want to change the parameters.

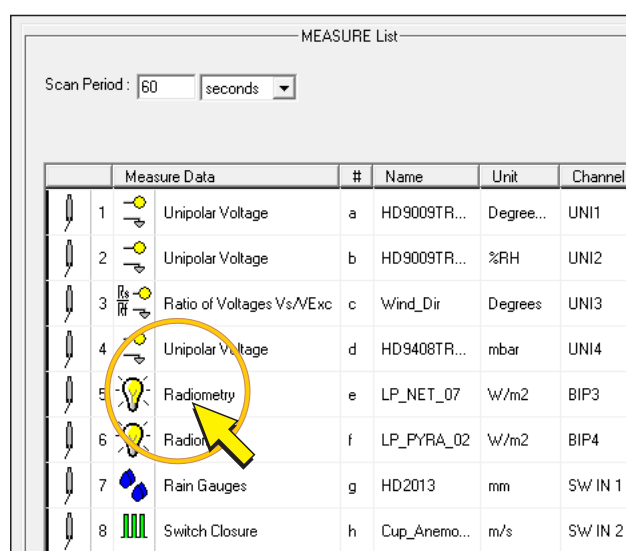


3. This opens the configuration window that displays all the available parameters for the desired sensor. Write or select a new value at the required parameter, then press OK to close the window.

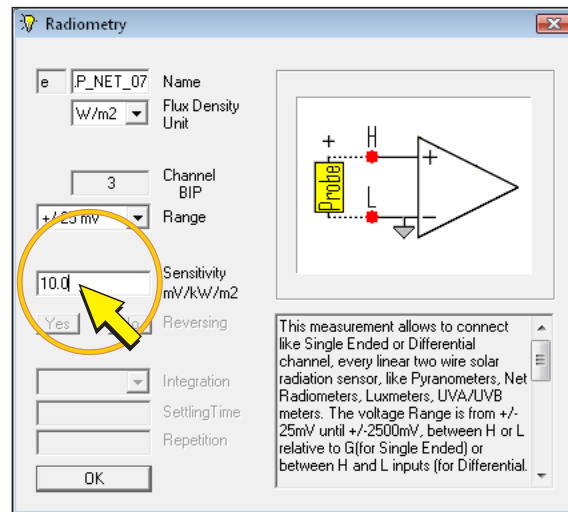


*Note:* only the fields with a white background can be changed.

4. Press *Create* to save the changes and generate the file necessary for the logger.

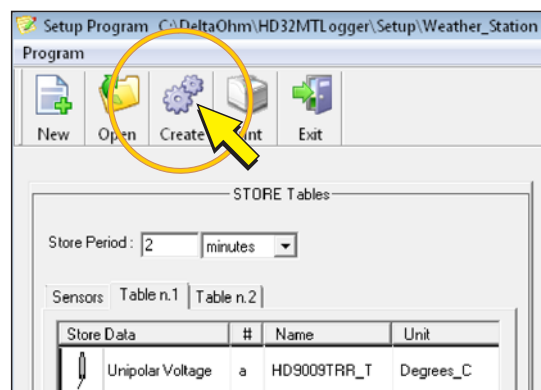

The window that allows you to specify the file name and path where to save it to your PC appears. After saving, a summary report is displayed, press *OK* to return to the program window.

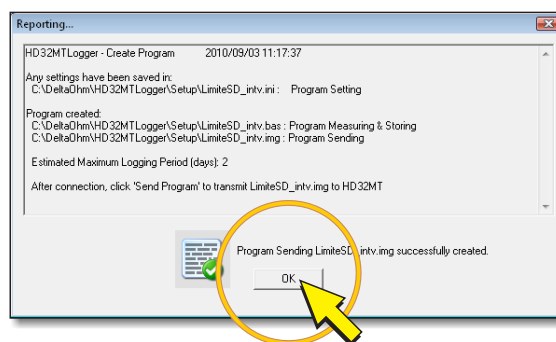


5. Press *Exit* to close the program window.

The program is ready to be installed in the data logger. Please see paragraph 8.3 on page 53 on how to install it.


### 8.2.3 ADDING A SENSOR

It is described below how to add an additional sensor to the list of those already in the program.


1. Make sure that the *Sensors* panel is selected in the left side of the window of the program (the panel is selected by default when opening the program).

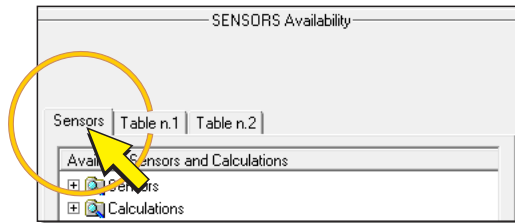

2. Expand the *Sensors* folder and then the folder containing the type of sensor to add (e.g. *Industry*). Then select the type of sensor and make a click on the *Add Measure* button with the green arrow at the center of the window (or alternatively perform a double click on the desired sensor).

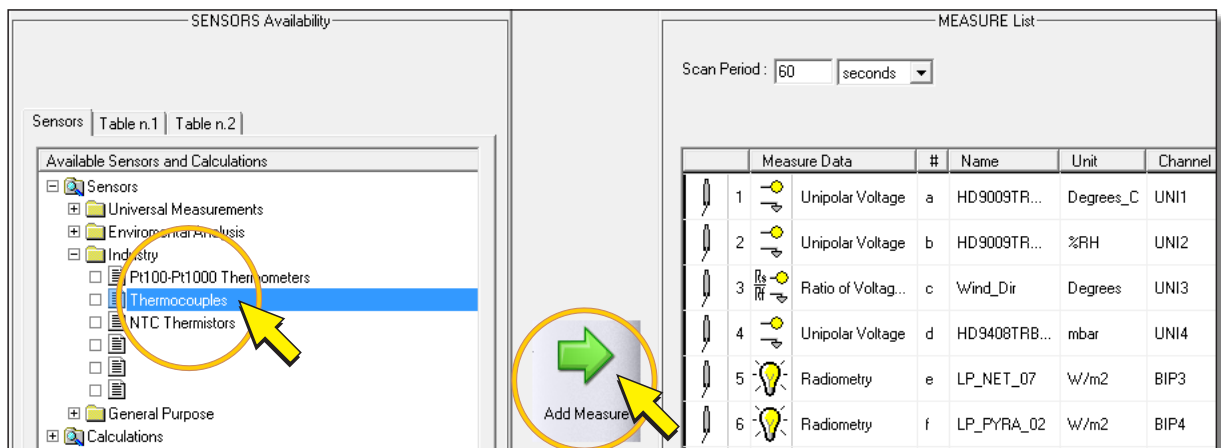


3. The configuration window appears, where you can enter all the required parameters.

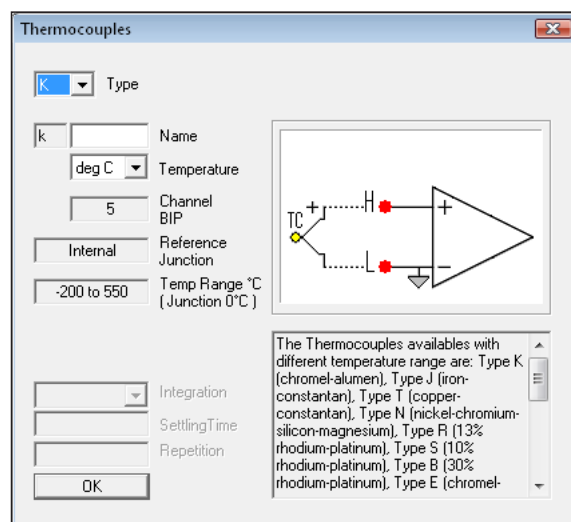


Define the sensor name in the *Name* field (for example, you can enter the model of the sensor). Then fill in all editable fields (only the ones with white background) depending on the characteristics of the new sensor.

*Note:* for a full description of the parameters relating to each type of sensor used, see paragraph 9.2 on page 55.


- Press *OK* to return to the program window. In the bottom of the list of measures (*MEASURE List*) the added sensor is displayed.

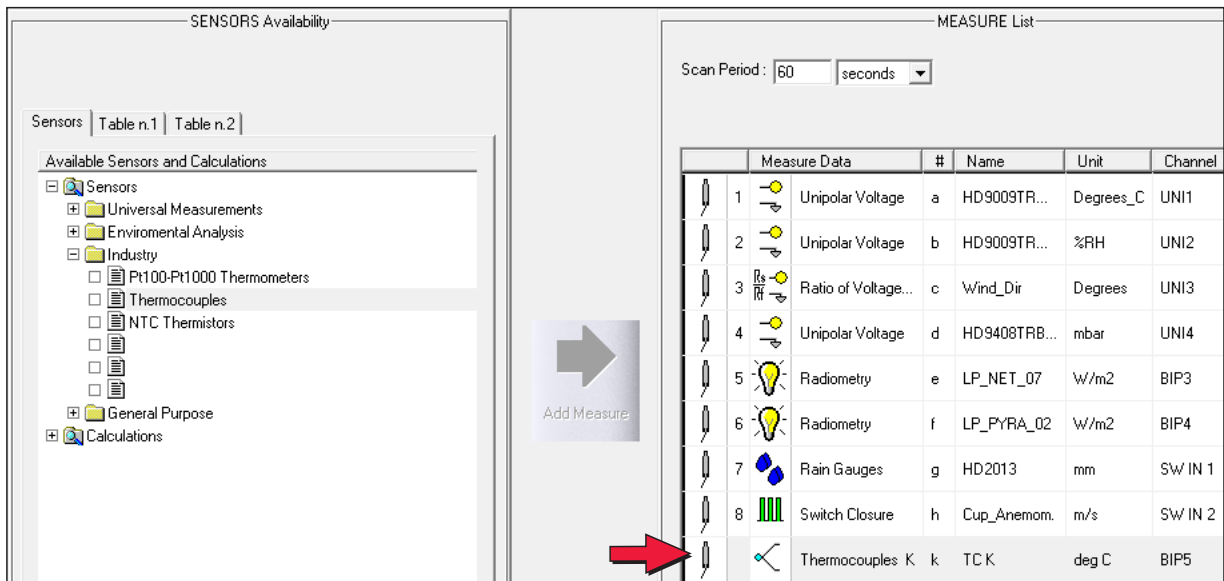

- For storing the measure of the sensor in the data logger, you must insert the measure into a store table. In the left panel, select the store table in which you want to insert the new measure.

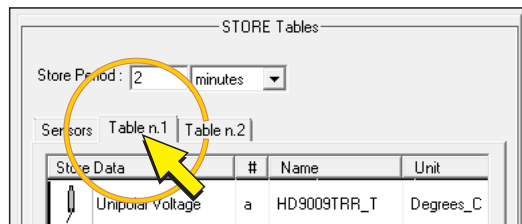


- In the right panel select the added sensor and click on the *Add Store* button with the blue arrow at the center of the window.

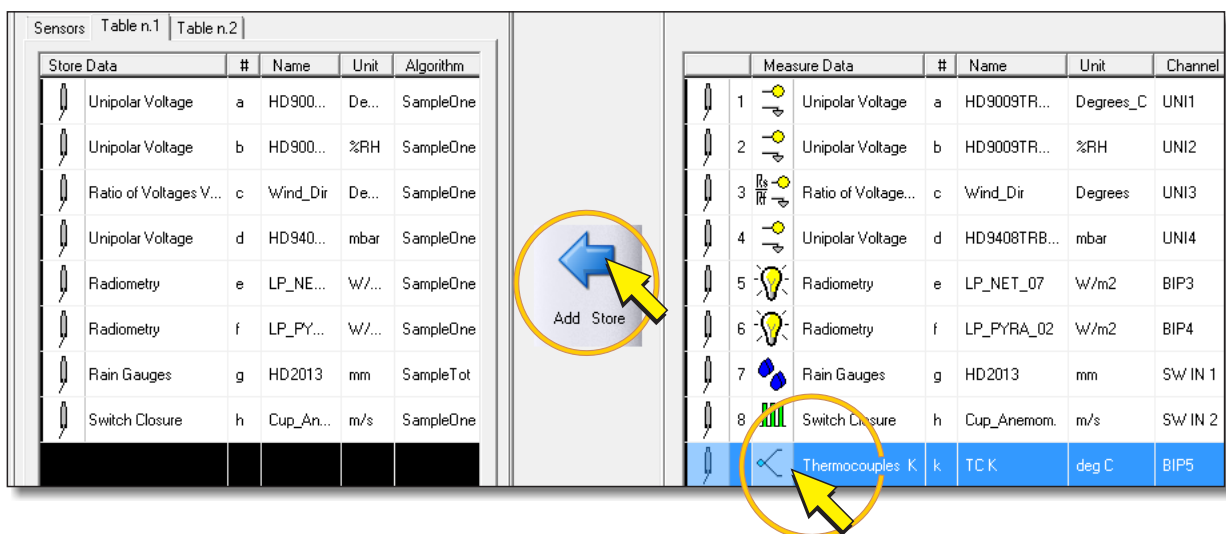


7. In the window that opens (*Algorithm*), select the type of value that you want to store between: the instant value (*OneSample*), mean (*Average*), maximum (*Max*), minimum (*Min*) or standard deviation (*StDeviation*).

*Note:* for pulse counting it is also active total count function (*Total*).


*Note:* *Alarms* button is only active if you select the alarm table or if the table is empty (see section *Creating the store tables*).

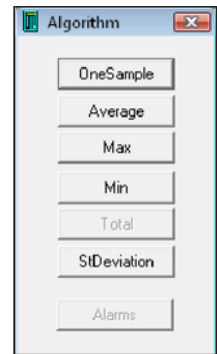


8. The new measurement will appear in the left panel of the program window.

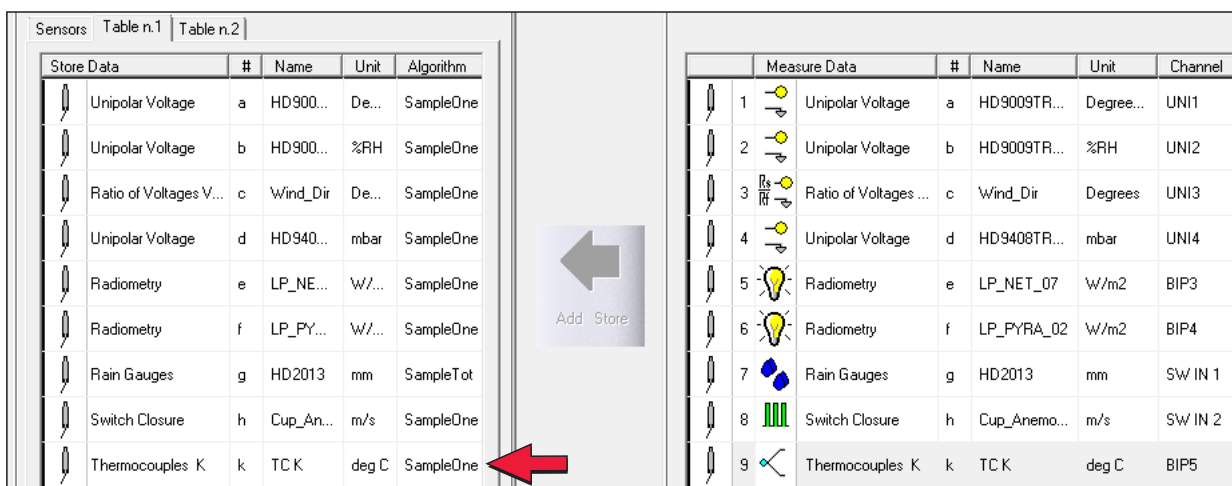


9. Press *Create* to save the changes and generate the file needed by the data logger.

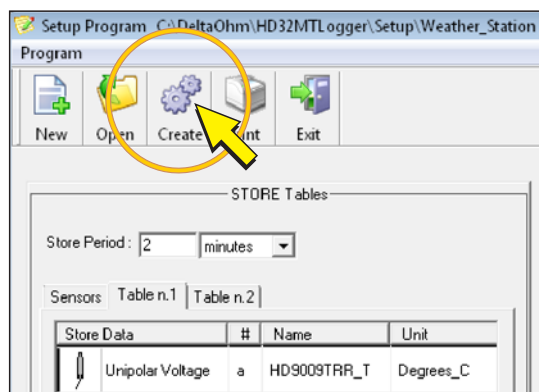


It appears the window that allows you to specify the file name and path where to save it to your PC. After saving, a summary report is displayed, press *OK* to return to the program window.

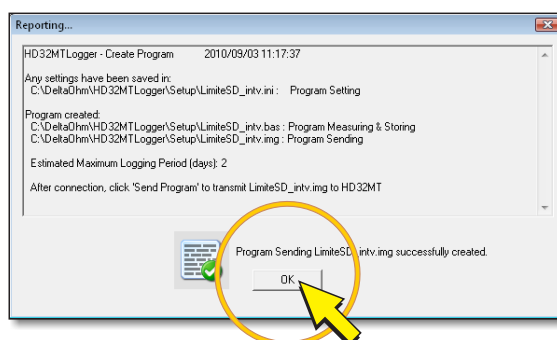

10. If you want to print the updated wiring diagram, press *Print*.

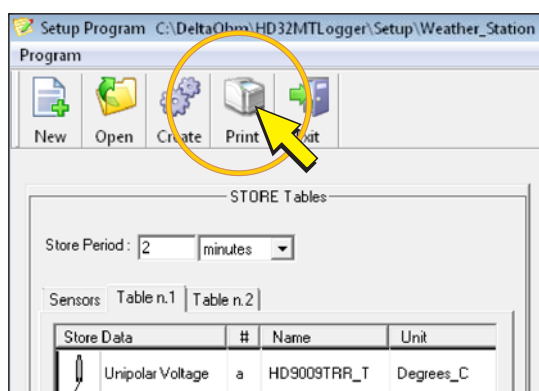

Then select *Print Wiring Diagram* and press *OK*.

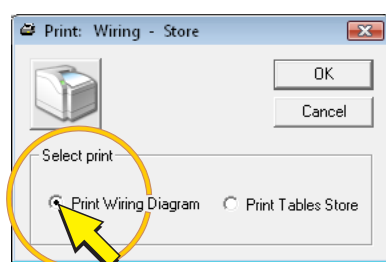

11. Press *Exit* to close the program window.


The program is ready to be installed in the data logger. Please see paragraph 8.3 on page 53 on how to install it.

#### 8.2.4 REMOVING A SENSOR


The operation to remove a sensor is generally required when you replace one sensor with another one having a different type of output (for example if you replace a sensor with voltage output with another one with current output). In this case, you must first remove the sensor to be replaced from the program, in order to free the input of data logger and make it available for a new connection, and then add the new sensor as shown in the previous paragraph.

To remove a sensor, proceed as follows:

1. In the list of sensors that appears on the right side of the window, select the sensor you want to remove.

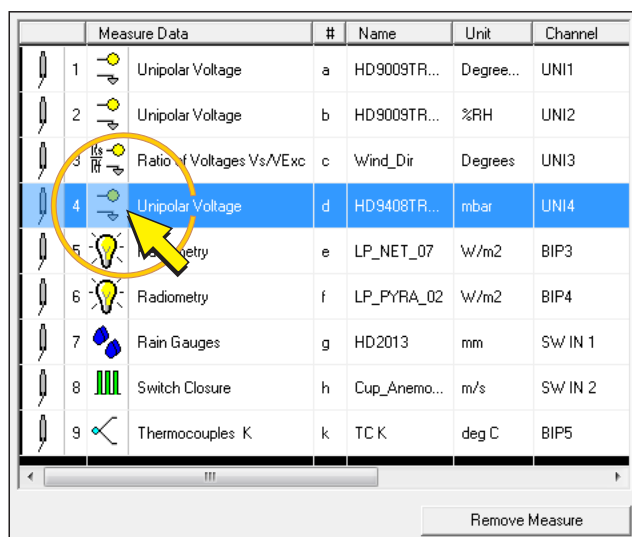


- At the bottom of the panel, press *Remove Measure*.

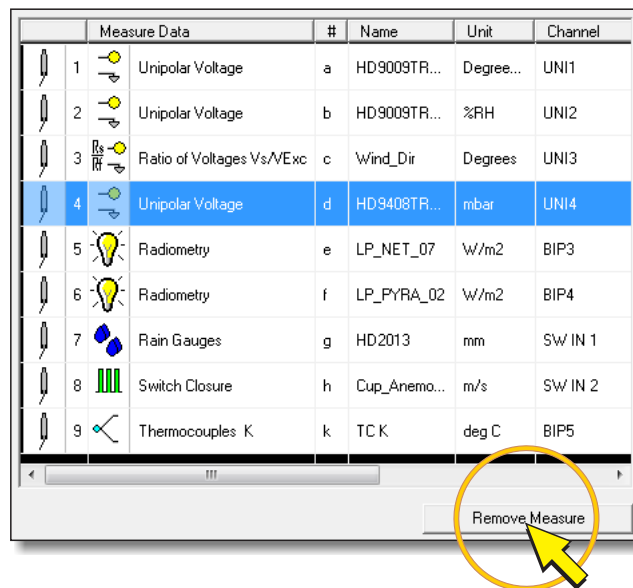


A message appears asking you to confirm the removal, press *Yes*, the sensor is also automatically removed from the storage tables.

At this point you can add a new sensor proceeding as indicated in paragraph 8.2.3, or save the changes by going on with the following points.

- Press *Create* to save the changes and generate the file necessary for the logger.

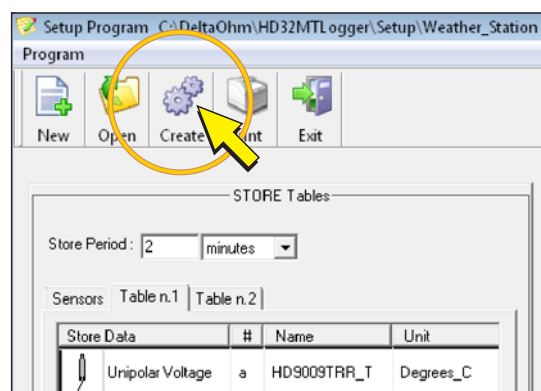

The window that allows you to specify the file name and path where to save it to your PC appears. After saving, a summary report is displayed, press *OK* to return to the program window.

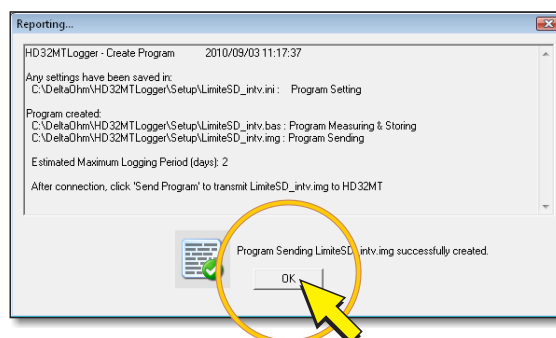

- Press *Exit* to close the program window.

The program is ready to be installed in the data logger. Please see paragraph 8.3 on page 53 on how to install it.



### 8.3 INSTALLING THE CHANGED PROGRAM IN THE DATA LOGGER

After modifying the program, it must be made to work by installing it in the data logger.

**Warning: The installation of a program in the data logger will erase all measurements stored in the internal memory.** To avoid losing data stored in internal memory you need to transfer them to your PC using the command "Dump LOG" of the HD32MTLogger software before starting the procedure of installation of the program. The measurements stored in the removable SD memory card, if present, remain stored.


To install the program in the data logger proceed as follows:

1. Select the *Send Program* icon in the toolbar.



*Note:* the command is only active if the instrument is connected, otherwise proceed to the connection as indicated in paragraph 8.1 on page 40.


2. In the window that opens, select the name of the previously saved program (the programs that can be installed in the data logger have the extension ".img") and press *Open*. A message appears to remind you that measurement data will be lost. Press *Yes* to continue.
3. Wait until the program is installed in the data logger (a progress bar indicates the installation status).

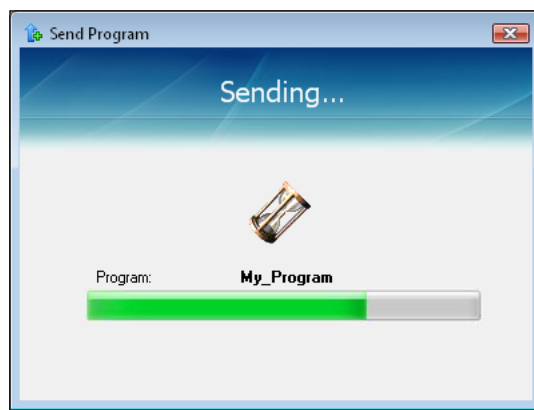

If the installation completed successfully, the *DataLogger Information* window is displayed again. Click *OK* to exit. The program installed starts automatically to operate in the data logger, capturing and storing the programmed measurement.

*Note:* The program already existing in the data logger is cleared at the beginning of the installation of the new program. During installation, if error messages appear and the installation is interrupted, the data logger is left without a working program. In this case you must repeat the installation procedure from the beginning.

4. To end the communication between PC and data logger, select the *Disconnect* icon.

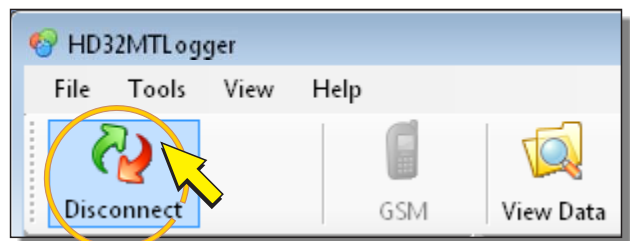

## 9 CREATION OF THE CONFIGURATION

If the logger is supplied without a program of measures and loggings installed, you must create a program and install it by connecting the logger to the PC, all with the help of **HD32MTLogger** application software.

**It is advisable to program the data logger prior to electrically connect the sensors, because the programming software automatically assigns the terminals to which sensors must be connected and does not allow an arbitrary assignment of sensors to certain inputs.**

During the creation of the program it is not necessary that the logger is physically connected to the PC. The connection of the logger is only necessary to install the program at the end of the preparation.


The steps to create a program can be divided into the following phases:

- Starting the **HD32MTLogger** software and opening a new program (paragraph 9.1 on page 54).
- Defining the list of sensors to be connected to the data logger and setting of the parameters of the various sensors (paragraph 9.2 on page 55).
- Creating the store tables (paragraph 9.3 on page 92).
- Creating the file to be installed in the data logger (paragraph 9.4 on page 100).
- Connecting the data logger to the PC and installing the measurement and recording program (paragraph 9.5 on page 102).


### 9.1 CREATING THE PROGRAM FILE

To open a new program proceed as follows:


1. Start the **HD32MTLogger** software via the icon on the desktop or selecting the program in the *Delta OHM* folder of the *Programs* menu.
2. Select the *Program Setup* icon in the toolbar.

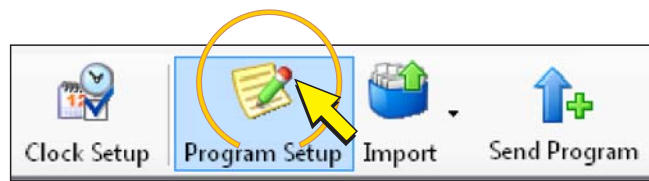

3. In the window that opens, select *NEW Program*.

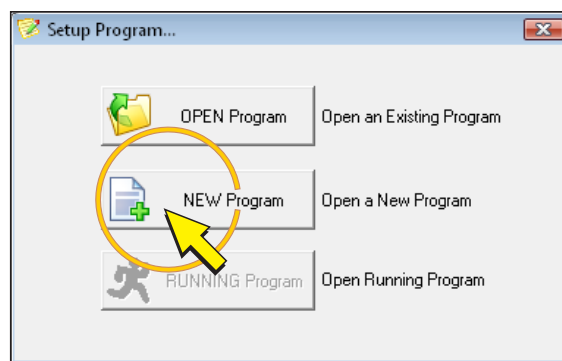


4. Enter a name for the new program in the *Program Name* field.

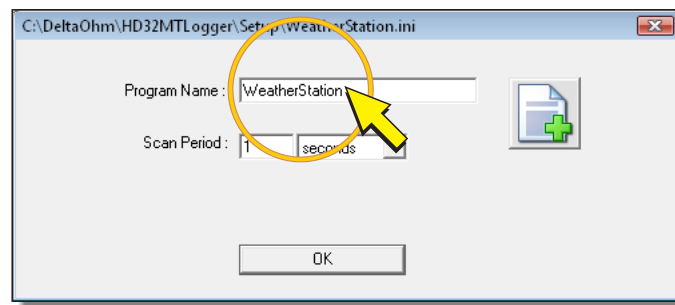

The name must start with a letter and can contain only letters, numbers, the character "\_" and the point (but may not be the last character of the name).

5. In the *Scan Period* field, enter the acquisition interval of the sensor measurements (from 1 to 60 seconds).

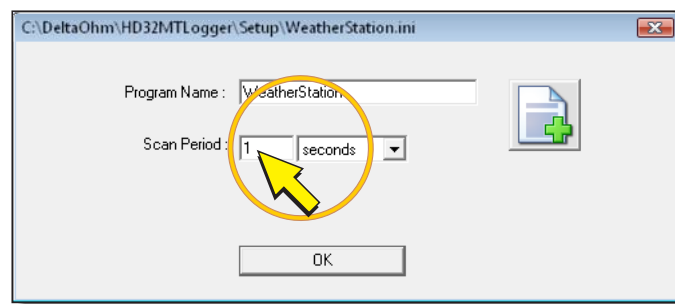

*Note:* The interval value can be added or changed even after.

6. Press *OK*, the new program window opens.

## 9.2 LIST OF SENSORS AND SETTING OF PARAMETERS

After opening the measurements and recordings program window, you must define the list of sensors to be connected to the data logger and set the parameters for each sensor.

The measures that you can perform with the data logger are divided into three categories:

- **Universal Measurements**

- |  |  |
|--|--|
| ○ <i>Unipolar Voltage</i>              | Measure voltage in single-ended mode                             |
| ○ <i>Bipolar Voltage</i>               | Measure voltage in differential mode                             |
| ○ <i>Resistance Divider</i>            | 2-wire resistance or 3-wire potentiometric measurement           |
| ○ <i>ResistanceDivider 4Wire:</i>      | 4-wire resistance measurement                                    |
| ○ <i>Adder Pulses</i>                  | Pulse or potential-free contact switching count                  |
| ○ <i>Input Current 4-20 and 0-20mA</i> | Current measurements   |
| ○ <i>Digital Input</i>                 | Detection of TTL logic levels                                    |
| ○ <i>Modbus RTU</i>                    | Acquisition of sensors with RS485 output and Modbus RTU protocol |

- **Environmental Analysis**


- *U.S. Anemometers HD2003* Measures of HD2003 and HD2003.1 anemometers
- *U.S. Anemometers HD52.3D* Measures of HD52.3D... series anemometers
- *Rain Gauges* Measure of rain quantity
- *Radiometry* Measure of solar radiation

- **Industry**


- *Pt100-Pt1000 thermometers* Temperature measures with Pt100-Pt1000 probe
- *Thermocouples* Temperature measures with thermocouple probe
- *NTC Thermistors* Temperature measures with NTC thermistors

To add a sensor to the program, proceed as follows:


1. In the list of measurements that can be executed by the data logger, identify the one corresponding to the sensor to be connected (for example *Input Current 4-20 and 0-20mA* in the case of a transmitter with current output, or *Radiometry* in the case of a solar radiation probe).
2. In the program window, make sure that in the left side it is selected the *Sensors* panel (the panel is selected by default when opening the program).

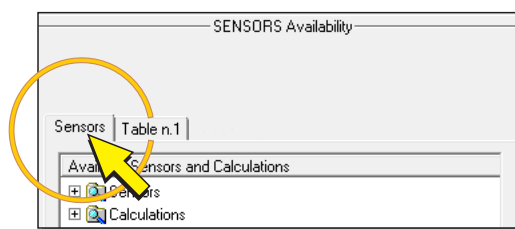

3. Expand the *Sensors* folder and then the folder of the category containing the type of measurement to be added (e.g. *Industry* if you are adding a temperature probe). Then select the type of measure (e.g. *Thermocouples*) and make a click on the *Add Measure* button with the green arrow at the center of the window (or alternatively, double-click on the name of the configuration).

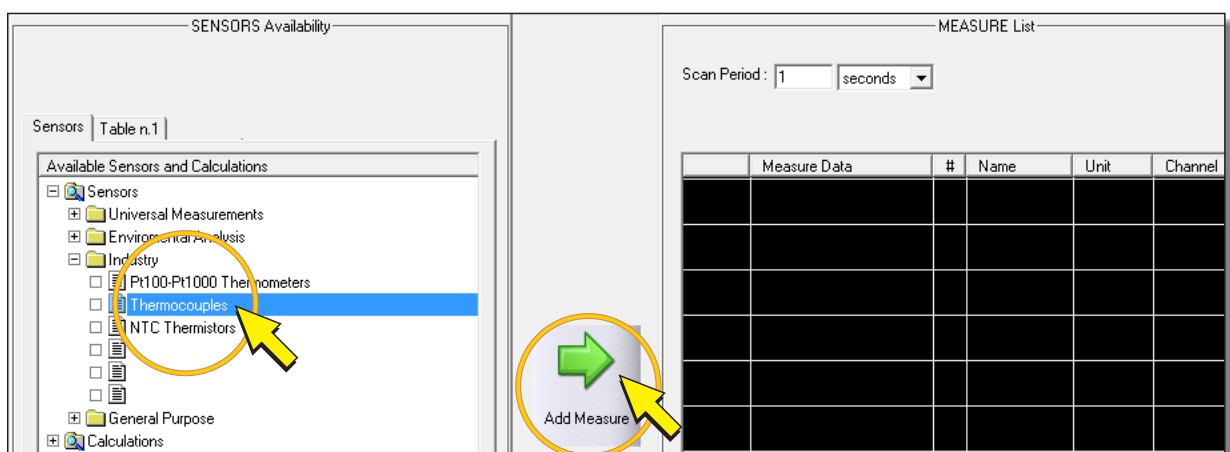

4. The window for sensor configuration appears, in which you can enter all the required parameters.

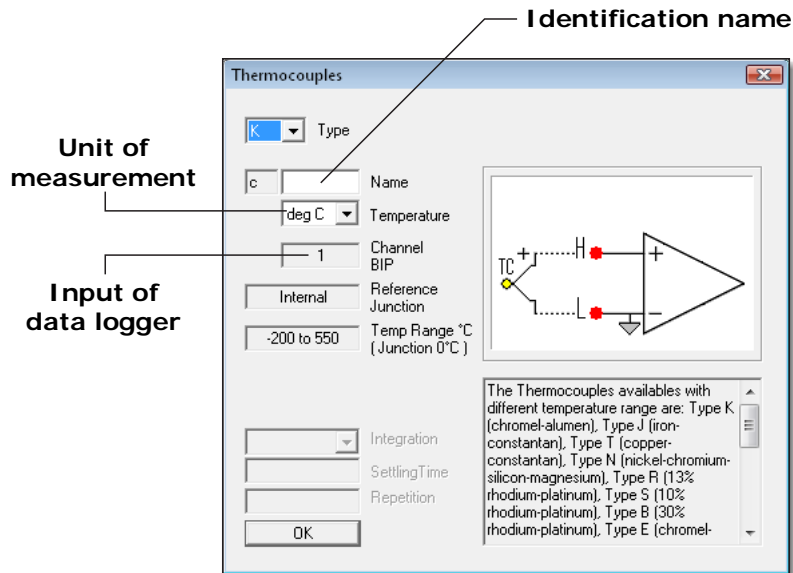

Fill in all editable fields (only the ones with white background) depending on the characteristics of the sensor. All windows have in common three configuration fields:


- The *Name* field, where you can enter an identifying name for the sensor (for example the model of the sensor, or the type of measured quantity). The name must start with a letter and can be up to 12 alphanumeric characters.
- The field to indicate the unit of measured quantity. The field is usually positioned just below the *Name* field. Depending on the type of sensor being configured, the unit can be selected from a drop-down list or it can be inserted freely; in the second case must begin with a letter and be no longer than 12 alphanumeric characters.
- The *Channel* field, which indicates the input of the logger to which the sensor must be connected. The input is assigned automatically, you can not change it manually.

The remaining fields depend on the selected sensor. For a full description of parameters for each sensor type, see the following sections (from 9.2.1 to 9.2.14).

Press *OK* to return to the program window.

*Note:* to cancel the insertion of the sensor, select the tick at the top right.

5. In the right panel of the window (*MEASURE List*) it is displayed the added sensor along with configuration data.

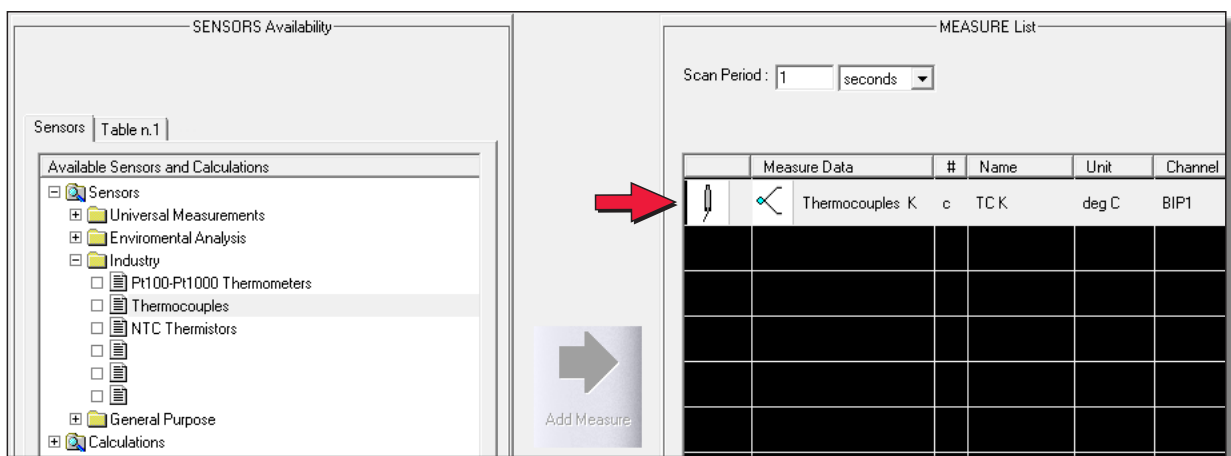


Repeat the procedure for each of the sensors to be connected to the data logger. Each new sensor is appended to the list of sensors already in place.

*Note:* if a sensor measures more quantities and has multiple outputs, it is necessary to repeat these steps for each output you want to connect (as if they were more separate sensors).

After the insertion of a sensor, you can change the parameters by double clicking on the row of the sensor in the list in the right pane of the window (*MEASURE List*).

*Note:* double click to change the parameters already entered is active only if in the left pane of the window is selected the *Sensors* panel.

If you want to remove one of the sensors already placed in the right pane, just select it and press the *Remove Measure* button in the lower side of the pane.

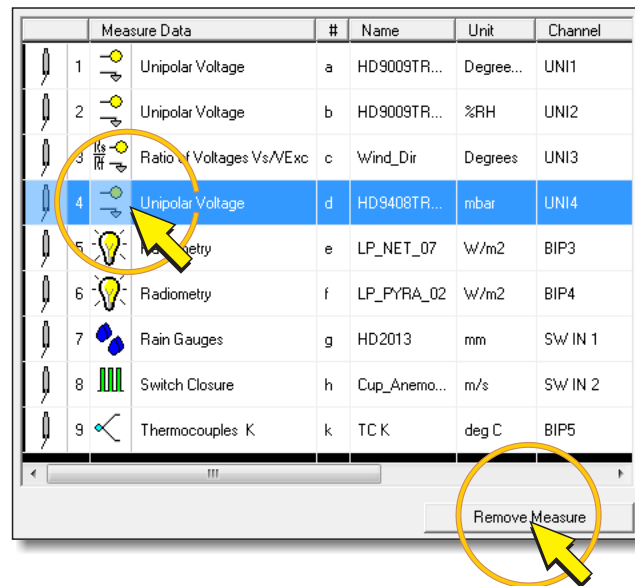


Pressing the *Remove Measure* button prompt to confirm the removal (message: *Do you wish to remove this measure?*), press *Yes* to confirm.

### WARNING MESSAGES

When entering the sensors you can get the following messages:

- *Scan Period too short !*

The message appears when the number of sensors becomes too high to be able to acquire all the measures between two successive instants of acquisition. The measure that you are trying to enter will **not** be added to the list of measures. Press *OK* to return to the program window. To insert additional measures it is necessary to increase the acquisition interval in the *Scan Period* field.

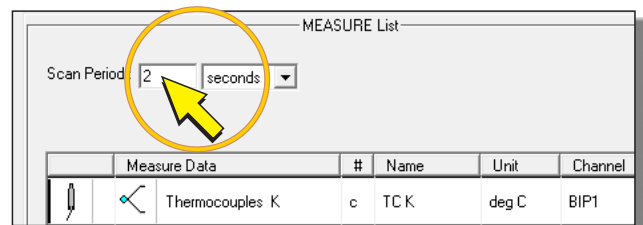

- *The Unipolar Channels n. 1,2 or 3,4 aren't available !*

The message appears when the single-ended inputs 1,2,3 and 4 are already occupied, and you try to insert *NTC Thermistors* and *Resistance Divider* sensor types that can only be connected to these inputs. To insert the sensor it is necessary first to free one of the inputs, deleting the sensor from the list with the command *Remove Measure*.

- *Not other free Channels !*

The message appears when you try to insert a sensor but there are no more inputs available for that type of sensor.

- *Total Measure Data over 30 reached!*

The message appears when you try to insert a sensor but there are already 30 measures present.


*Note:* when calculating the number of measures take into account that each *Pt100-Pt1000 Thermometers* or *NTC Thermistors* measurement is equivalent to two measures, and if there is at least a *Thermocouples* measure you should add two measures for the cold junction (for the total of all thermocouples).

## 9.2.1 UNIPOLAR VOLTAGE AND BIPOLAR VOLTAGE CONFIGURATION


In the *Universal Measurements* category, select the item:

- *Unipolar Voltage* to set up a single-ended voltage measurement
- *Bipolar Voltage* for configuring a differential voltage measurement

### UNIPOLAR VOLTAGE SELECTION

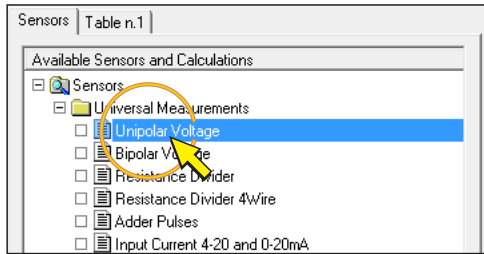


### BIPOLAR VOLTAGE SELECTION

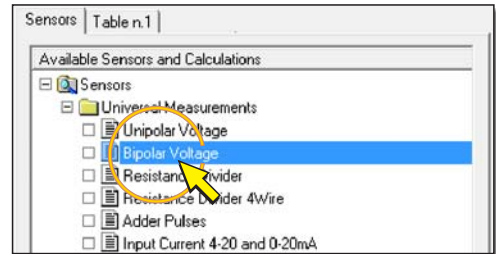


By pressing the *Add Measure* button to add the measure, the configuration window shown below opens. In the figure there is, for reference, also the detail of the terminal board related to the connection scheme that appears in the window (see paragraph 5.3.1 on page 17 for the details of the connections).

### UNIPOLAR VOLTAGE WINDOW

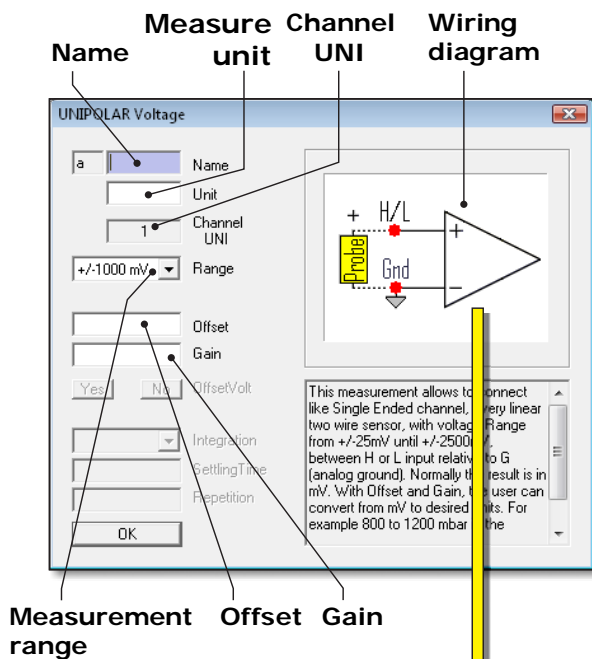

### BIPOLAR VOLTAGE WINDOW

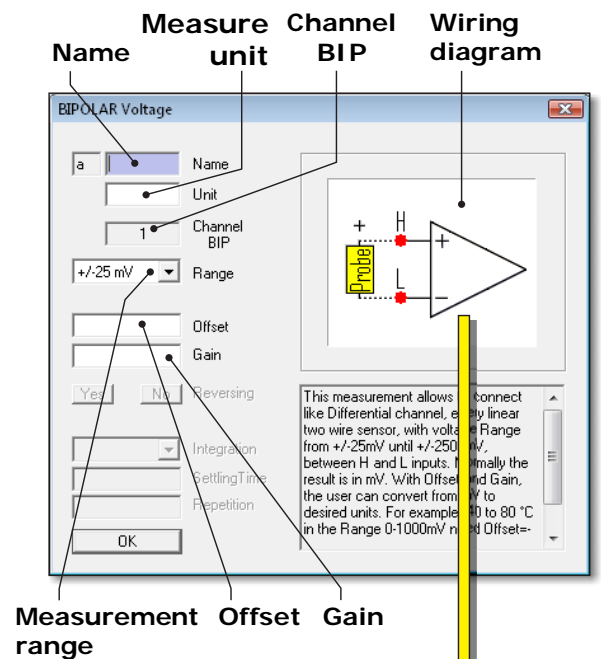



In the configuration, you must fill in all fields with white background. The fields in gray are not modifiable. The following describes the fields in the window.

- NAME

Identification name of the sensor. You can assign as the name, for example, the model of the sensor, or the type of measured quantity. The name must start with a letter and can be up to 12 alphanumeric characters.

The name uniquely identifies the measure that you are entering, you can not assign the same name to several measures.

- UNIT (UNIT OF MEASUREMENT)

A measure of the quantity detected by the sensor. It must begin with a letter and can be a maximum of 12 characters.

The unit is inserted in accordance with the values of *Offset* and *Gain* parameters (see the corresponding point below in the paragraph for setting these parameters).


- CHANNEL UNI OR CHANNEL BIP

It Indicates the number of analog input to which the sensor must be connected. The software automatically assigns the first free input. The number is not editable by the user. The location of the analog inputs is given at point **4** of the terminal board figure on page 8.

- RANGE


It is the measuring range of the data logger input. Click on the *Range* field and then select a measuring range suitable for the sensor that is being inserted, so that the voltage sensor output is within the measurement range selected. There are four selectable ranges:

- $\pm 25$  mV
- $\pm 100$  mV
- $\pm 1000$  mV
- $\pm 2500$  mV

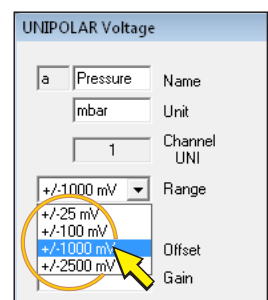

To get the best resolution of measurement it is convenient to choose the first measurement range higher than the output of the sensor.

If the sensor output voltage is too high to fall within the ranges available, it is necessary to reduce the signal by inserting a resistive divider between the output of the sensor and the data logger input (see paragraph 5.3.1 on page 17 for the connections).

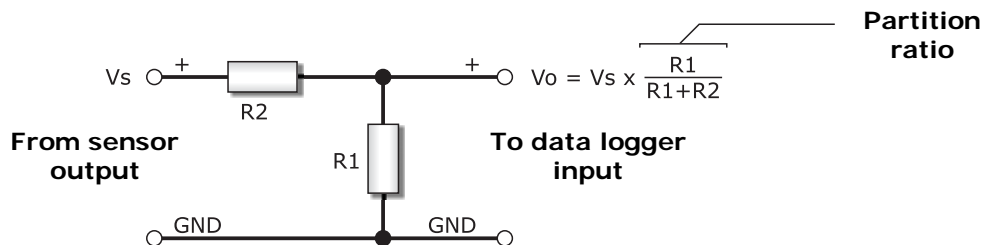

The sum of the values of R1 and R2 must be greater than the minimum load resistance of the sensor.

Only as an example, the table below shows the ranges in mV selectable and the possible need of the divider for the various voltage outputs typically available in Delta OHM sensors.

Sensor Output	Selectable Range <sup>(*)</sup>	Resistive Divider
0 ÷ 1 V	±1000 mV or ±2500 mV	No
0 ÷ 5 V	±1000 mV or ±2500 mV	Yes, partition ratio 1/5
0 ÷ 10 V	±1000 mV or ±2500 mV	Yes, partition ratio 1/10
1 ÷ 5 V	±1000 mV or ±2500 mV	Yes, partition ratio 1/5
2 ÷ 10 V	±1000 mV or ±2500 mV	Yes, partition ratio 1/10

(\*) *Note:* Some sensors can provide an output voltage that exceeds the nominal value of the scale, if the measured quantity exceeds the range measured. If you want that error condition is also recorded by the logger, you must set a value in the *Range* field higher than the nominal range of the sensor. For example, a sensor with a nominal 0-1 V output we have to select the range ±2500 mV and not ±1000 mV.

- OFFSET AND GAIN

The value recorded in the data logger is the result of a linear transformation applied to the value of the input voltage in mV. The transformation is as follows:

$$\text{Value recorded} = \text{Offset} + (\text{Gain} \times \text{Input voltage in mV})$$

By setting *Offset* = 0 and *Gain* = 1, the recorded value is exactly the value of the input voltage in mV.

Generally the voltage in mV corresponds to the value of a physical quantity, such as temperature, humidity, pressure, etc. It is therefore more interesting to directly store the value of the corresponding physical quantity rather than the value in mV. To record directly in the logger the value of the quantity is sufficient to enter in the fields *Offset* and *Gain* the values calculated by the following relations:

$$\text{Offset} = \frac{(\mathbf{G_{is}} \times \mathbf{V_{fs}}) - (\mathbf{G_{fs}} \times \mathbf{V_{is}})}{\mathbf{V_{fs}} - \mathbf{V_{is}}}$$

$$\text{Gain} = \frac{\mathbf{G_{fs}} - \mathbf{G_{is}}}{\mathbf{V_{fs}} - \mathbf{V_{is}}} \times \mathbf{K}$$

Where: **G<sub>is</sub>** = initial scale of the physical quantity

**G<sub>fs</sub>** = full scale of the physical quantity

**V<sub>is</sub>** = initial scale of the sensor output (in mV)

**V<sub>fs</sub>** = full scale of the sensor output (in mV)

**K** = inverse of the ratio of partition of any resistive divider connected between the sensor output and the input of data loggers (K = 1 if the divider is not present)

The value will be recorded in the same unit of measurement of **G<sub>is</sub>** and **G<sub>fs</sub>** values. This unit is one that should be inserted in the *Unit* field of the configuration window.

In the *Offset* and *Gain* fields must be entered only the numerical value without unit.

Using non-zero Offset and Gain different from 1 produces accurate results only if the sensor output varies **linearly** with the measured physical quantity. Otherwise, the recorded value will be affected by an error which depends on the sensor response. For sensors that have non-linearity that can not be neglected is advisable to set *Offset* = 0 and *Gain* = 1, and just registering the value of the input voltage in mV.

### Example 1

Suppose you need to configure a temperature transmitter with 0 to 1 V output and measuring range -40 to +80 °C. The transmitter output is connected directly to the data logger (there are no resistive dividers).

The values needed for the computation of *Offset* and *Gain* are therefore:

$$\mathbf{G_{is}} = -40\text{ }^{\circ}\text{C} \quad \mathbf{G_{fs}} = +80\text{ }^{\circ}\text{C} \quad \mathbf{V_{is}} = 0\text{ mV} \quad \mathbf{V_{fs}} = 1000\text{ mV} \quad \mathbf{K} = 1$$

The values needed to calculate the *Offset* and *Gain* are:

$$\text{Offset} = \frac{(-40 \times 1000) - (80 \times 0)}{1000 - 0} = -40 \quad \text{Gain} = \frac{80 - (-40)}{1000 - 0} \times 1 = 0,12$$

In the *Unit* field must be indicated degrees Celsius as the unit of measure. Since the maximum length of 12 characters and it is not possible to insert the special symbol "°", the unit can be shortened with "degrees C".

### Example 2

Suppose you need to configure a barometric transmitter with 1 to 5V output and measuring range 800 to 1100 mbar. Between the transmitter and data logger is inserted a resistive divider with a partition ratio of 1/5.

The values needed for the computation of *Offset* and *Gain* are therefore:

$$\mathbf{G_{is}} = 800\text{ mbar} \quad \mathbf{G_{fs}} = 1100\text{ mbar} \quad \mathbf{V_{is}} = 1000\text{ mV} \quad \mathbf{V_{fs}} = 5000\text{ mV} \quad \mathbf{K} = 5$$


The values needed to calculate the *Offset* and *Gain* are:

$$\text{Offset} = \frac{(800 \times 5000) - (1100 \times 1000)}{5000 - 1000} = -725 \quad \text{Gain} = \frac{1100 - 800}{5000 - 1000} \times 5 = 0,375$$


In the *Unit* field mbar must be indicated as the unit of measurement.

## 9.2.2 RESISTANCE DIVIDER CONFIGURATION

In the *Universal Measurements* category, select *Resistance Divider* to configure a 2-wire resistance or 3-wire potentiometric measurement.

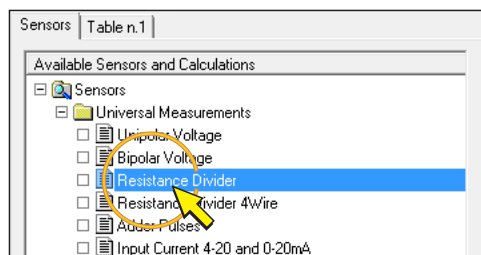


By pressing the *Add Measure* button to add the measure, the configuration window shown below appears. In the figure there is, for reference, also the detail of the terminal board related to the connection scheme that appears in the window (see paragraphs 5.3.3 on page 22 and 5.3.4 on page 23 for the details of the connections).

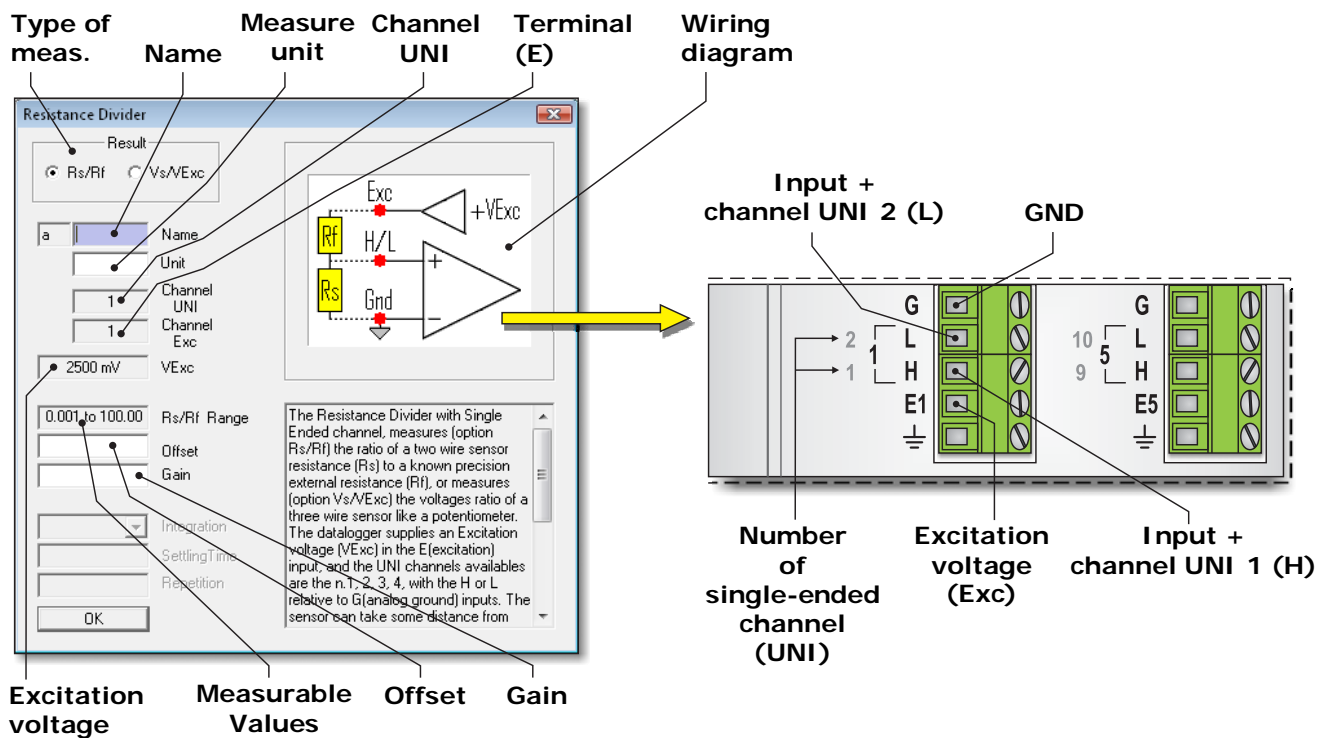

In the upper left corner of the configuration window there is the box to choose the type of measure. select:

- **Rs/Rf** to set up a 2-wire resistance measurement.  
With this option the data logger measures the value of resistance Rs provided by the sensor compared to the reference Rf resistance value.
- **Vs/VExc** to set up a 3-wire potentiometric measurement.  
With this option the data logger measures the voltage Vs at the input compared to the value of excitation voltage VExc.

At the opening of the window is selected by default **Rs/Rf** option. Selecting the **Vs/VExc** option, the window shows the wiring diagram for a potentiometric sensor, as shown below:

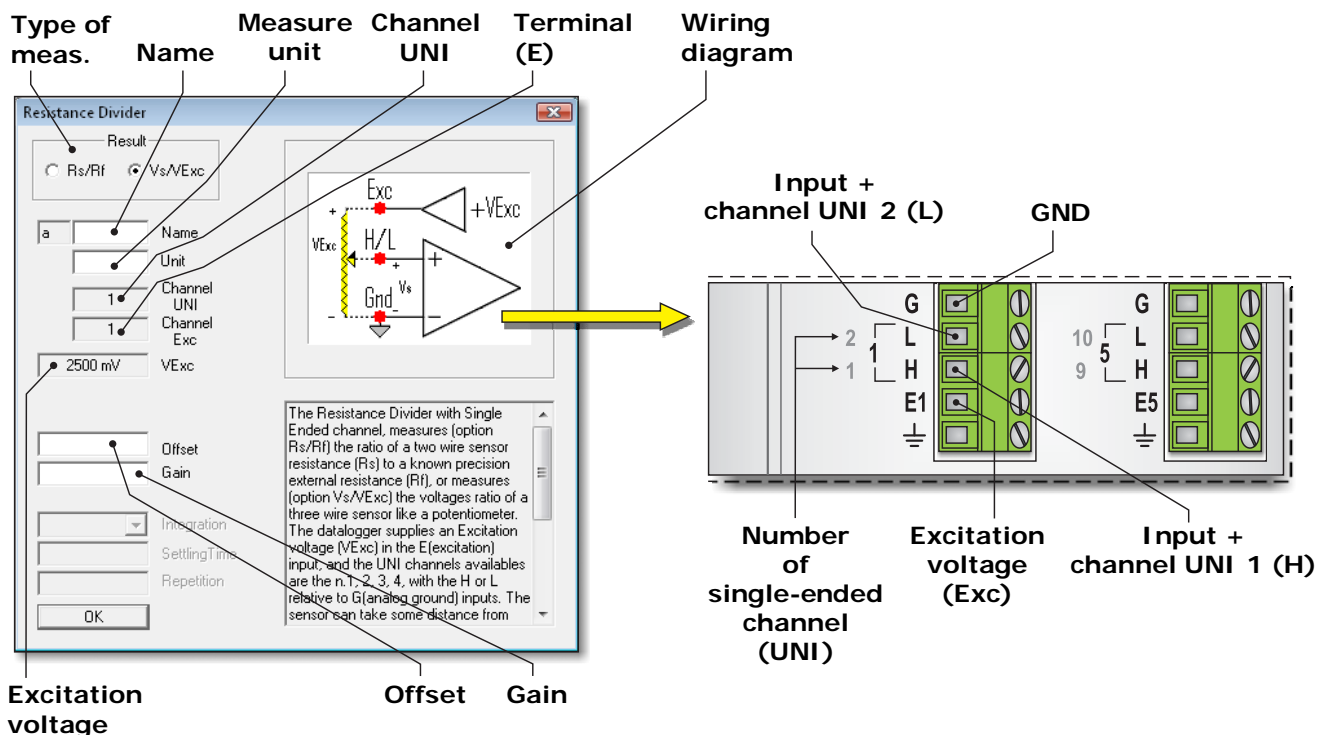

In the configuration, you must fill in all fields with white background. The fields in gray are not modifiable. The following describes the fields in the window.

- NAME

Identification name of the sensor. You can assign as the name, for example, the model of the sensor, or the type of measured quantity. The name must start with a letter and can be up to 12 alphanumeric characters.

The name uniquely identifies the measure that you are entering, you can not assign the same name to several measures.

- UNIT (UNIT OF MEASUREMENT)

Unit of measurement of the quantity detected by the sensor. It must begin with a letter and can be a maximum of 12 alphanumeric characters.

The unit is inserted in accordance with the values of *Offset* and *Gain* parameters (see the corresponding point below in the paragraph for setting these parameters).

- CHANNEL UNI

Indicates the number of analog input to which the sensor must be connected. The software automatically assigns the first free input. The number is not editable by the user. The location of the analog inputs is given at point 4 of the terminal board figure on page 8.

**The programmable inputs for this type of measurement are only the single-ended inputs 1, 2, 3 and 4.**

- CHANNEL EXC (EXCITATION TERMINAL)

Indicates the number of the terminal **E** which from where the excitation voltage must be taken, which is the terminal where you must connect one end of the reference resistor **R<sub>f</sub>** or potentiometer. The number is assigned automatically and is not editable by the user.

- V<sub>EXC</sub> (EXCITATION VOLTAGE)

It is the excitation voltage applied to terminal **E**. The value is fixed at 2500 mV.

- R<sub>s</sub>/R<sub>f</sub> RANGE

The field appears only if you selected *R<sub>s</sub>/R<sub>f</sub>*, and indicates the range of measurement of the resistance *R<sub>s</sub>* of the sensor compared to the reference resistance value *R<sub>f</sub>*. The field can not be set. The measuring range of *R<sub>s</sub>* depends only on the value of the reference resistance *R<sub>f</sub>*. The minimum and maximum values measurable are respectively:

$$R_{s_{\min}} = R_f / 1000$$

$$R_{s_{\max}} = 100 \times R_f$$

It is recommended that *R<sub>f</sub>* is neither too small nor too large compared to the values that can assumed by the sensor, otherwise there would be a small change in voltage across *R<sub>s</sub>* and therefore a low resolution. The *R<sub>f</sub>* values should be between the minimum (*R<sub>s\_{\min}</sub>*) and maximum (*R<sub>s\_{\max}</sub>*) of *R<sub>s</sub>*. The *R<sub>f</sub>* values that maximizes the change in voltage across *R<sub>s</sub>* and allows the best resolution is given by the following relation:

$$R_f = \sqrt{R_{s_{\min}} \times R_{s_{\max}}}$$

The reference resistor *R<sub>f</sub>* must be a precision resistor and sufficiently stable over time and exposure to environmental conditions, since the drift of the *R<sub>f</sub>* values results in a measurement change that this is not due to a real variation of the physical quantity measured.

- **OFFSET AND GAIN**

The value recorded in the data logger is the result of a linear transformation applied to the measured value.

If you select the *Rs/Rf* measurement type, the transformation is:

$$\text{Value recorded} = \text{Offset} + (\text{Gain} \times \text{Rs/Rf})$$

If you select the type of measurement *Vs/VExc*, the formula is:

$$\text{Value recorded} = \text{Offset} + (\text{Gain} \times \text{Vs/VExc})$$

By setting *Offset* = 0 and *Gain* = 1, the recorded value is *Rs/Rf* or *Vs/VExc* depending on the type of measurement selected.

Generally, the measured value corresponds to the value of a physical quantity, such as temperature, wind direction, etc.. It is therefore more interesting to store directly the value of the physical quantity. To record directly in the logger the value of the quantity is sufficient to enter in the fields *Offset* and *Gain* the values calculated by the following relations:

$$\text{Offset} = \frac{(\mathbf{G_{is}} \times \mathbf{V_{fs}}) - (\mathbf{G_{fs}} \times \mathbf{V_{is}})}{\mathbf{V_{fs}} - \mathbf{V_{is}}} \qquad \text{Gain} = \frac{\mathbf{G_{fs}} - \mathbf{G_{is}}}{\mathbf{V_{fs}} - \mathbf{V_{is}}}$$

Where: **G<sub>is</sub>** = initial scale of the physical quantity

**G<sub>fs</sub>** = full scale of the physical quantity

**V<sub>is</sub>** = value of *Rs/Rf* or *Vs/VExc* at initial scale (dimensionless value)

**V<sub>fs</sub>** = value of *Rs/Rf* or *Vs/VExc* at full scale (dimensionless value)

The value will be recorded in the same unit of measurement of **G<sub>is</sub>** and **G<sub>fs</sub>** values. This unit is the one that should be inserted in the *Unit* field of the configuration window.

In the *Offset* and *Gain* fields must be entered only the numerical value without unit.

Using non-zero *Offset* and *Gain* different from 1 produces accurate results only if the sensor output varies **linearly** with the measured physical quantity. Otherwise, the recorded value will be affected by an error which depends on the sensor response. For sensors that have non-linearity that can not be neglected it is advisable to set *Offset* = 0 and *Gain* = 1, and just registering the value measured without applying transformations.

## Example

Suppose you need to configure a vane sensor for wind direction with potentiometric output, whose measurement range is 2 to 357°.

The sensor has a dead band of 5° not symmetric around the reference direction (0°). It is assumed that the potentiometer is at minimum (0 ohm ⇒ *Vs* = 0) when the measurement is 2°, and is instead at maximum (*Vs* = *VExc*) when the measure is 357°. To calculate the *Offset* and *Gain* is not important the absolute value of the potentiometer in ohm.

The values needed to calculate the *Offset* and *Gain* are therefore.

$$\mathbf{G_{is}} = 2^\circ \qquad \mathbf{G_{fs}} = 357^\circ \qquad \mathbf{V_{is}} = 0 \qquad \mathbf{V_{fs}} = 1$$

The values of the parameters to be included in the configuration window are:


$$\text{Offset} = \frac{(2 \times 1) - (357 \times 0)}{1 - 0} = 2 \qquad \text{Gain} = \frac{357 - 2}{1 - 0} = 355$$

In the field *Unit* must be indicated degrees as unit of measurement.


*Note:* in the particular case that the sensor has a dead band *D* symmetrical to the reference direction, we get *Offset* = *D*/2 and *Gain* = 360° - *D*.

### 9.2.3 RESISTANCE DIVIDER 4-WIRE CONFIGURATION

In the *Universal Measurements* category, select *4 Wire Resistance Divider 4-Wire* for setting up a 4-wire resistance measurement.

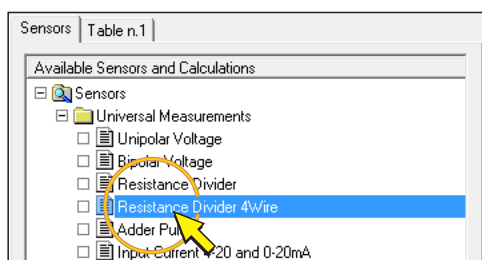

By pressing the *Add Measure* button to add the measure, the configuration window shown below appears. In the figure there is, for reference, also the detail of the terminal board related to the connection scheme that appears in the window (please see the paragraph 5.3.5 on page 23 for the details of the connections).

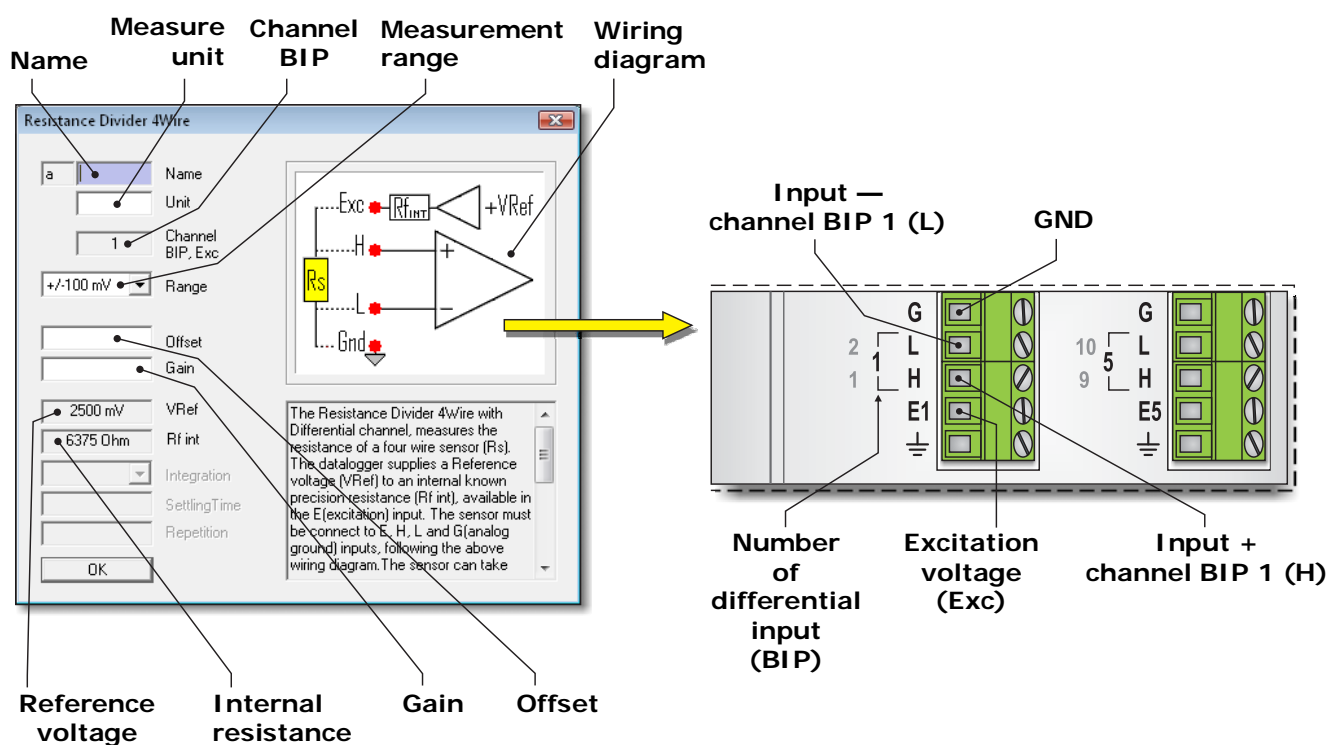

In the configuration window, you must fill in all fields with white background. The fields in gray are not modifiable. The following describes the fields in the window.

- **NAME**

Identification name of the sensor. You can assign as the name, for example, the model of the sensor, or the type of measured quantity. The name must start with a letter and can be up to 12 alphanumeric characters.

The name uniquely identifies the measure that you are entering, you can not assign the same name to several measures.

- **UNIT (UNIT OF MEASUREMENT)**

Unit of measurement of the quantity detected by the sensor. It must begin with a letter and can be a maximum of 12 alphanumeric characters.

The unit is inserted in accordance with the values of *Offset* and *Gain* parameters (see the corresponding point below in the paragraph for setting these parameters).


- CHANNEL BIP,Exc

Indicates the number of analog input to which the sensor must be connected. The software automatically assigns the first free input. The number is not editable by the user. The location of the analog inputs is given at point 4 of the terminal board figure on page 8.

- RANGE

It is the measuring range in mV of data logger input. Click on the *Range* field and then select a measuring range suitable for the sensor that is being inserted, so that the voltage at the data logger input is within the measuring range selected. There are three selectable ranges:

- $\pm 100$  mV
- $\pm 1000$  mV
- $\pm 2500$  mV

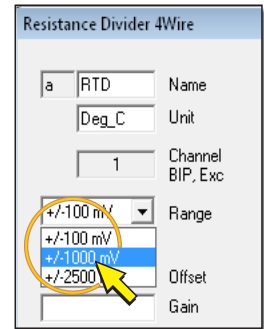

To get the best resolution of measurement it is convenient to choose the first measurement range higher than the maximum voltage drop  $V_{smax}$  on the resistance  $R_s$  to be measured, given by the relation.

$$V_{smax} = V_{Ref} \times \frac{R_{smax}}{R_{smax} + R_{fint}} \quad (V_{Ref} = 2500 \text{ mV and } R_{fint} = 6375 \text{ ohm are fixed values})$$

- VREF (REFERENCE VOLTAGE)

It is the reference voltage applied to the divider comprising the sensor resistance and the internal resistance  $R_f$  of the data logger. The value is fixed at 2500 mV.

- RF INT (Rf INTERNAL RESISTANCE)

It is the internal resistance of the logger, interposed between terminal **E** and the internal reference voltage. The value is fixed at 6375 ohm.

- OFFSET AND GAIN

The value recorded in the data logger is the result of a linear transformation applied to the measured value. The formula is the following:

$$\text{Value recorded} = \text{Offset} + (\text{Gain} \times R_s)$$

By setting *Offset* = 0 and *Gain* = 1, the recorded value is exactly the value of the resistance  $R_s$  offered by the sensor.

Generally, the measured value corresponds to the value of a physical quantity, e.g. temperature. It is therefore more interesting to store directly the value of the physical quantity rather than the resistance value measured. To record directly in the logger the value of the quantity is sufficient to enter in the fields *Offset* and *Gain* the values calculated by the following relations:

$$\text{Offset} = \frac{(G_{is} \times V_{fs}) - (G_{fs} \times V_{is})}{V_{fs} - V_{is}} \quad \text{Gain} = \frac{G_{fs} - G_{is}}{V_{fs} - V_{is}}$$

Where: **G<sub>is</sub>** = initial scale of the physical quantity

**G<sub>fs</sub>** = full scale of the physical quantity

**V<sub>is</sub>** = resistance value  $R_s$  of the sensor initial scale (in ohm)

**V<sub>fs</sub>** = resistance value  $R_s$  of the sensor full scale (in ohm)



The value will be recorded in the same unit of measurement of **Gis** and **Gfs** values. This unit is one that should be inserted in the *Unit* field of the configuration window.

In the *Offset* and *Gain* fields must be entered only the numerical value without unit.

Using non-zero *Offset* and *Gain* different from 1 produces accurate results only if the sensor output varies **linearly** with the measured physical quantity, otherwise the recorded value will be affected by an error which depends on the sensor response. For sensors that have non-linearity that can not be neglected is advisable to set *Offset* = 0 and *Gain* = 1, and simply recording the measured resistance value.

### Example

Suppose you need to configure a resistive temperature sensor, whose measuring range is -50 to 200 °C. The values of sensor resistance at initial and full scale are respectively 80.31 ohm and 175.86 ohm.

The values needed to calculate the *Offset* and *Gain* are therefore:

$$G_{is} = -50\text{ °C} \quad G_{fs} = 200\text{ °C} \quad V_{is} = 80.31\text{ ohm} \quad V_{fs} = 175.86\text{ ohm}$$


The values of the parameters to be included in the configuration window are:

$$Offset = \frac{((-50) \times 175.86) - (200 \times 80.31)}{175.86 - 80.31} = -260.125 \quad Gain = \frac{200 - (-50)}{175.86 - 80.31} = 2.616$$


In the field *Unit* must be indicated degrees Celsius as the unit of measurement. Since the maximum length is 12 characters and it is not possible to insert the special symbol "°", the unit can be shortened with "degrees C".

### 9.2.4 ADDER PULSES → DIGITAL/ANALOG PULSES CONFIGURATION


To configure the digital or analog high-frequency pulse counting (up to 50KHz), select the item *Adder Pulses* in the category *Universal Measurements*.

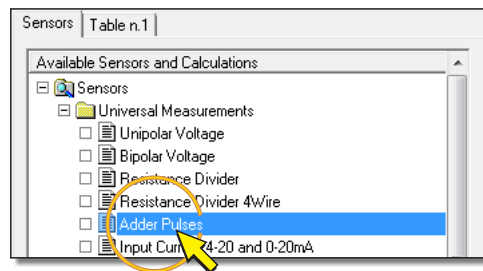

By pressing the *Add Measure* button to add the measurement, the window for the selection of the type of pulses to be counted appears. Select the *Digital/Analog Pulses* option.

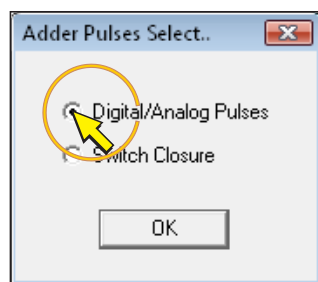

Press *OK* to confirm, the configuration window shown below appears. In the figure there is, for reference, also the detail of the terminal board related to the connection scheme that appears in the window (see section 5.5.1 on page 26 for details of the connections).

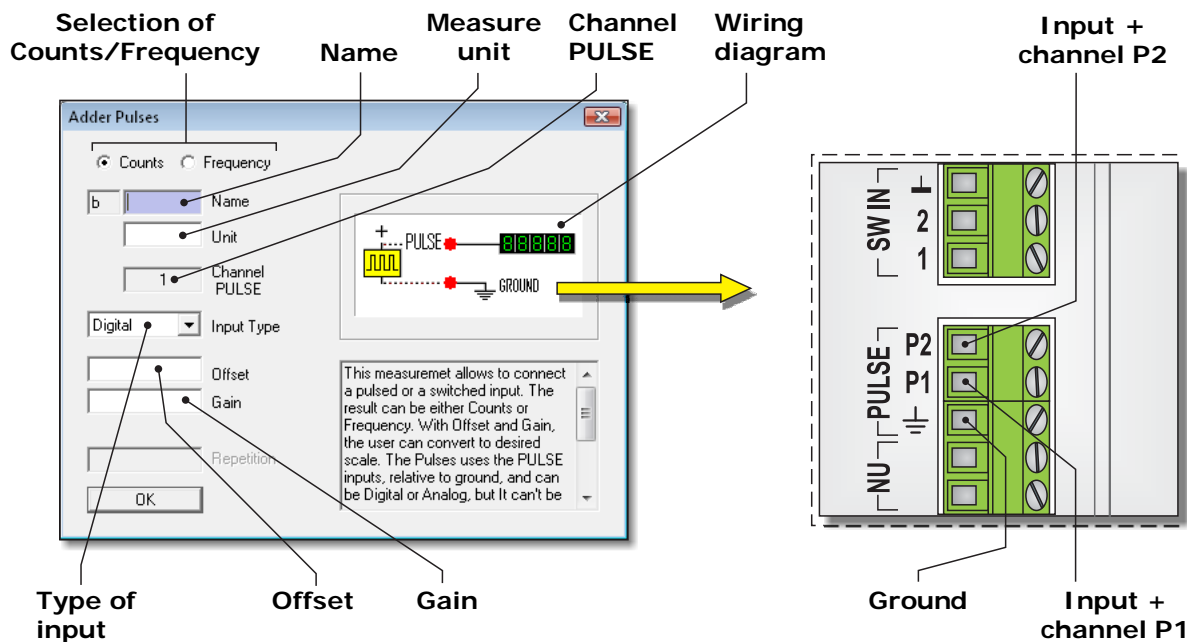

In the top left of the configuration window select the option:

- **Counts** to acquire the number of pulses received during the acquisition interval (*Scan Period*).
- **Frequency** to acquire the frequency (in Hz) of the input signal. The frequency is calculated in the interval of acquisition (*Scan Period*).

**Note:** The pulse count is reset at the beginning of each acquisition interval (*SCAN Period*). To store the total number of pulses received in N successive acquisition intervals, insert the quantity in a store table selecting *Total* as value to be stored, and setting the recording interval (*STORE Period*) equal to N times the acquisition interval (see paragraph 9.3 on page 92).

In the configuration, you must fill in all fields with white background. The fields in gray are not modifiable. The following describes the fields in the window.

- **NAME**

Identification name of the sensor. You can assign the name, for example, of the sensor model, or the type of measured quantity. The name should begin with a letter and can be maximum 12 alphanumeric characters long.

The name unequivocally identifies the measurement being input; you cannot assign the same name to multiple measurements.

- **UNIT** (UNIT OF MEASUREMENT)

Unit of measurement of the quantity detected by the sensor. It must begin with a letter and can be a maximum of 12 alphanumeric characters.

The unit is inserted in accordance with the values of *Offset* and *Gain* parameters (see the corresponding point below in the paragraph for setting these parameters).


- **CHANNEL PULSE**

Indicates the number of the PULSE input to which the sensor must be connected. The software automatically assigns the first free input. The number is not editable by the user. The location of the PULSE inputs is indicated at the point **8** of the terminal board figure on page 8.

- INPUT TYPE

Select the *Digital* option if the output signal of the sensor is digital, or *Analog*, if it is analog.

In both cases the threshold voltages levels for the recognition of the pulse correspond to the values of the standard TTL logic.

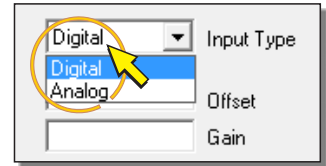

- OFFSET AND GAIN

The value recorded in the data logger is the result of a linear transformation applied to the measured value.

If you select the *Counts* type of measurement, the formula is:

$$\text{Value recorded} = \text{Offset} + (\text{Gain} \times \text{Count})$$

If you select the *Frequency* type of measurement, the formula is:

$$\text{Value recorded} = \text{Offset} + (\text{Gain} \times \text{Frequency})$$

By setting *Offset* = 0 and *Gain* = 1, the recorded value is exactly the value of the count or frequency.

Generally, the measured value corresponds to the value of a physical quantity, e.g. flow rate, wind speed, etc. It is therefore more interesting to store directly the value of the physical rather than the measured value. To record directly in the logger the value of the quantity it is sufficient to enter in the fields *Offset* and *Gain* the values calculated by the following relations:

$$\text{Offset} = \frac{(\mathbf{G_{is}} \times \mathbf{V_{fs}}) - (\mathbf{G_{fs}} \times \mathbf{V_{is}})}{\mathbf{V_{fs}} - \mathbf{V_{is}}}$$

$$\text{Gain} = \frac{\mathbf{G_{fs}} - \mathbf{G_{is}}}{\mathbf{V_{fs}} - \mathbf{V_{is}}}$$

Where:

**G<sub>is</sub>** = initial scale of the physical quantity

**G<sub>fs</sub>** = full scale of the physical quantity

**V<sub>is</sub>** = value of the count or frequency relative to the initial scale of the quantity

**V<sub>fs</sub>** = value of the count or frequency relative to the full scale of the quantity

The value will be recorded in the same unit of measurement of **G<sub>is</sub>** and **G<sub>fs</sub>** values. This unit is one that should be inserted in the *Unit* field of the configuration window.

In the *Offset* and *Gain* fields must be entered only the numerical value without unit.

---

### Example

Suppose you need to configure a cup anemometer with frequency digital output. The measuring range is 0 to 70 m/s. The values of the output frequency at the initial and full scale are respectively 0 and 700 Hz.

The input is configured to measure the frequency of the signal (*Frequency* option).

The values needed to calculate the *Offset* and *Gain* are therefore:

$$\mathbf{G_{is}} = 0$$

$$\mathbf{G_{fs}} = 70 \text{ m/s}$$

$$\mathbf{V_{is}} = 0$$

$$\mathbf{V_{fs}} = 700 \text{ Hz}$$

The values of the parameters to be included in the configuration window are:


$$\text{Offset} = \frac{(0 \times 700) - (70 \times 0)}{700 - 0} = 0$$

$$\text{Gain} = \frac{70 - 0}{700 - 0} = 0.1$$


In the field *Unit*, must be indicated m/s as unit.

### 9.2.5 ADDER PULSES → SWITCH CLOSURE CONFIGURATION


To set the count of the number of opening/closing of a potential-free contact, for example, the contact of a relay, select the *Adder Pulses* item in the category *Universal Measurements*.

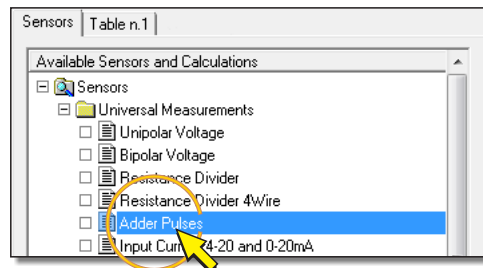

By pressing the *Add Measure* button to add the measurement, appears the dialog for selecting the type of pulses to be counted. Select the *Switch Closure* option.

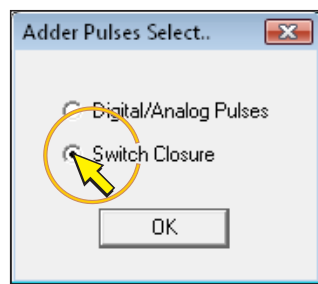

Press *OK* to confirm, so the configuration window shown below appears. In the figure there is, for reference, also the detail of the terminal board related to the connection scheme that appears in the window (see paragraph 5.5.2 on page 26 for details of the connections).

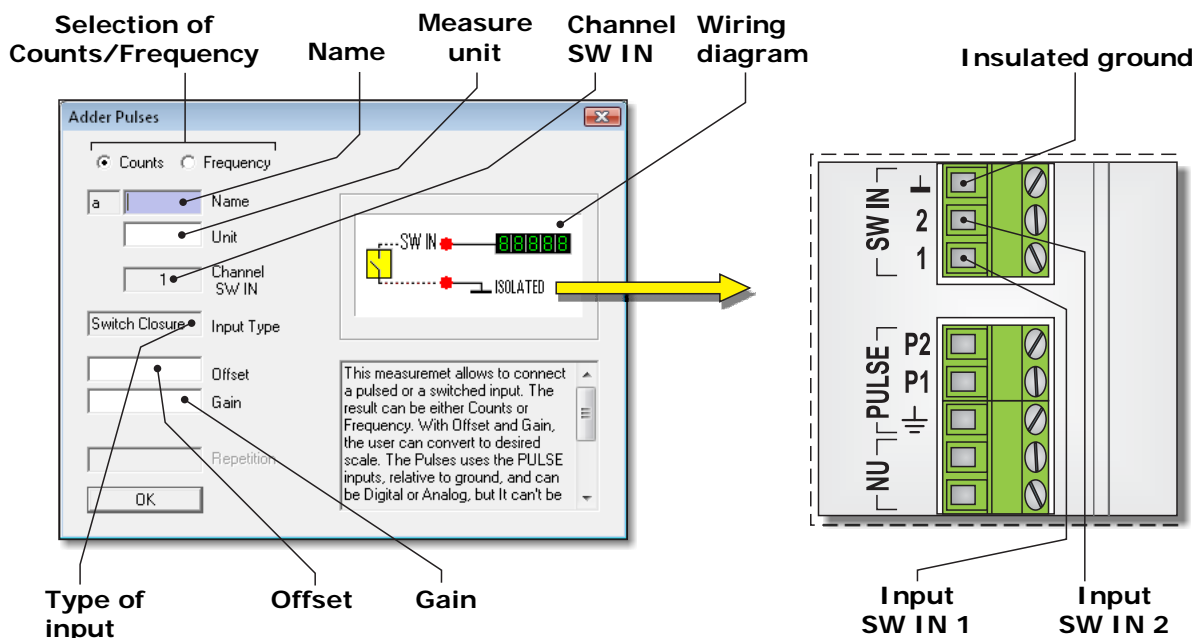

Select the option up on the left in the configuration window:

- *Counts* to acquire the number of openings / closings during an acquisition interval (*Scan Period*).
- *Frequency* to acquire the frequency (in Hz) of the switching contact. The frequency is calculated in the interval of acquisition (*Scan Period*).

*Note:* The count of the opening/closing is reset at the beginning of each acquisition interval (*SCAN Period*). To store the total number of openings/closures in N intervals of acquisition, insert the measure in a store table selecting the *Total* option as value to be stored, and setting the recording interval (*STORE Period*) equal to N times the acquisition interval (see paragraph 9.3 on page 92).

In the configuration, you must fill in all fields with white background. The fields in gray are not modifiable. The following describes the fields in the window.

- NAME

Identification name of the sensor. You can assign as the name, for example, the model of the sensor, or the type of measured quantity. The name must start with a letter and can be up to 12 alphanumeric characters.

The name uniquely identifies the measure that you are entering, you can not assign the same name to several measures.

- UNIT (UNIT OF MEASUREMENT)

Unit of measurement of the quantity detected by the sensor. It must begin with a letter and can be a maximum of 12 alphanumeric characters.

The unit is inserted in accordance with the values of *Offset* and *Gain* parameters (see the corresponding point below in the paragraph for setting these parameters).

- CHANNEL SW IN

Indicates the number of the SW IN input to which the sensor must be connected. The software automatically assigns the first free input. The number is not editable by the user. The SW IN inputs arrangement is shown at point 9 of the terminal board figure on page 8.

- INPUT TYPE

The setting is fixed to *Switch Closure*. The maximum detectable switching frequency is 50 Hz.

- OFFSET AND GAIN

The value recorded in the data logger is the result of a linear transformation applied to the measured value.

If you select the *Counts* type of measure the transformation is:

$$\text{Value recorded} = \text{Offset} + (\text{Gain} \times \text{Count})$$

If you select the *Frequency* type of measurement, the formula is:

$$\text{Value recorded} = \text{Offset} + (\text{Gain} \times \text{Frequency})$$

By setting *Offset* = 0 and *Gain* = 1, the recorded value is exactly the value of the count or frequency.

Generally, the measured value corresponds to the value of a physical quantity, such as wind speed, the amount of rain, etc. It is therefore more interesting to store directly the value of the physical quantity rather than the measured value. To record directly in the logger the value of the quantity it is sufficient to enter in the fields *Offset* and *Gain* the values calculated by the following relations:

$$\text{Offset} = \frac{(\mathbf{G_{is}} \times \mathbf{V_{fs}}) - (\mathbf{G_{fs}} \times \mathbf{V_{is}})}{\mathbf{V_{fs}} - \mathbf{V_{is}}}$$

$$\text{Gain} = \frac{\mathbf{G_{fs}} - \mathbf{G_{is}}}{\mathbf{V_{fs}} - \mathbf{V_{is}}}$$

Where:

**Gis** = initial scale of the physical quantity

**Gfs** = full scale of the physical quantity

**Vis** = value of the count or frequency relative to the initial scale of the quantity

**Vfs** = value of the count or frequency relative to the full scale of the quantity

The value will be recorded in the same unit of measurement of **Gis** and **Gfs** values. This unit is one that should be inserted in the *Unit* field of the configuration window.

In the *Offset* and *Gain* fields must be entered only the numerical value without unit.

---

### Example

Suppose you need to set up a tipping bucket rain gauge with voltage-free ON/OFF contact output. The resolution of this sensor is 0.2 mm/switching.

The input is configured to capture the number of pulses (*Counts* option).

In this case, the full scale of measurement of the sensor is not a finite value, since the bucket can switch indefinitely. For the calculation of *offset* and *slope* is therefore necessary to use, instead of the full scale values, intermediate defined values, for example, the values corresponding to 1 count. In the case of rain gauge, 1 count corresponds to the capacity of the bucket at the time of switching (0.2 mm). The initial scale is equivalent to the empty bucket and zero counts.

The values needed for the computation of *Offset* and *Gain* are therefore:

$$\mathbf{Gis} = 0$$

$$\mathbf{Gfs} = 0.2 \text{ mm}$$

$$\mathbf{Vis} = 0$$

$$\mathbf{Vfs} = 1 \text{ count}$$

- o The values of the parameters to be inserted in the configuration window are:


$$\text{Offset} = \frac{(0 \times 1) - (0.2 \times 0)}{1 - 0} = 0$$

$$\text{Gain} = \frac{0.2 - 0}{1 - 0} = 0.2$$


In the *Unit* field, mm must be indicated as the unit.

### 9.2.6 INPUT CURRENT 4-20 AND 0-20mA CONFIGURATION

In the *Universal Measurements* category, select the *Input Current 4-20 and 0-20mA* item to configure an input for current measurements.

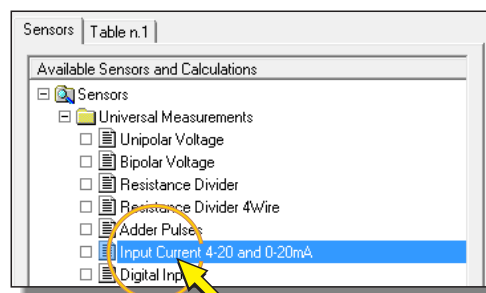


By pressing the *Add Measure* button to add the measurement, the configuration window shown below appears. In the figure there is, for reference, also the detail of the terminal board related to the connection scheme that appears in the window (see the paragraph 5.3.2 on page 20 for the details of the connections).

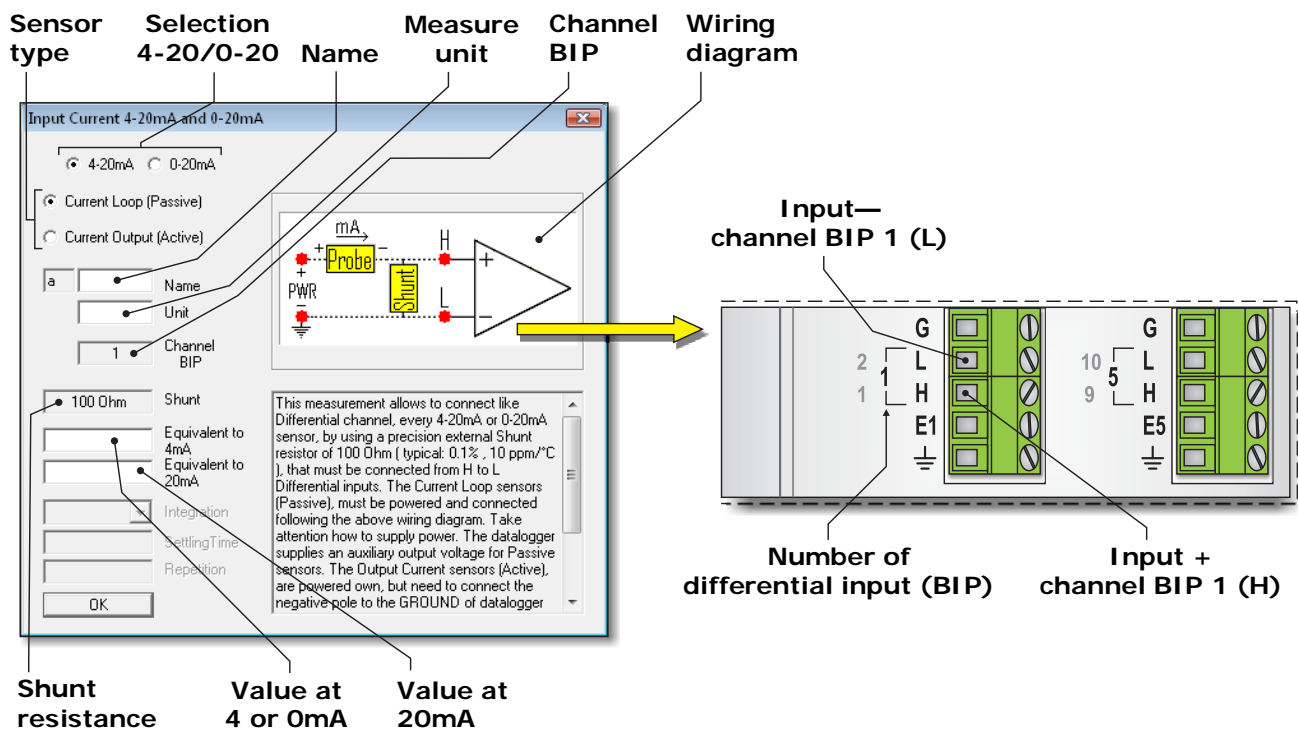

- In the top left of the configuration window, select *4-20mA* or *0-20mA* depending on the current output range of the sensor.
- Depending on the type of sensor select:

- *Current Loop (Passive)* if the sensor has 2 wires with power on the same line as the signal.
- *Current Output (Active)* if the sensor has 3 or 4 wires with power supply separate from the signal.

At the opening of the window it is selected by default the *Current Loop (Passive)* option. Selecting the *Output Current (Active)* option, the connection scheme presented in the window changes:

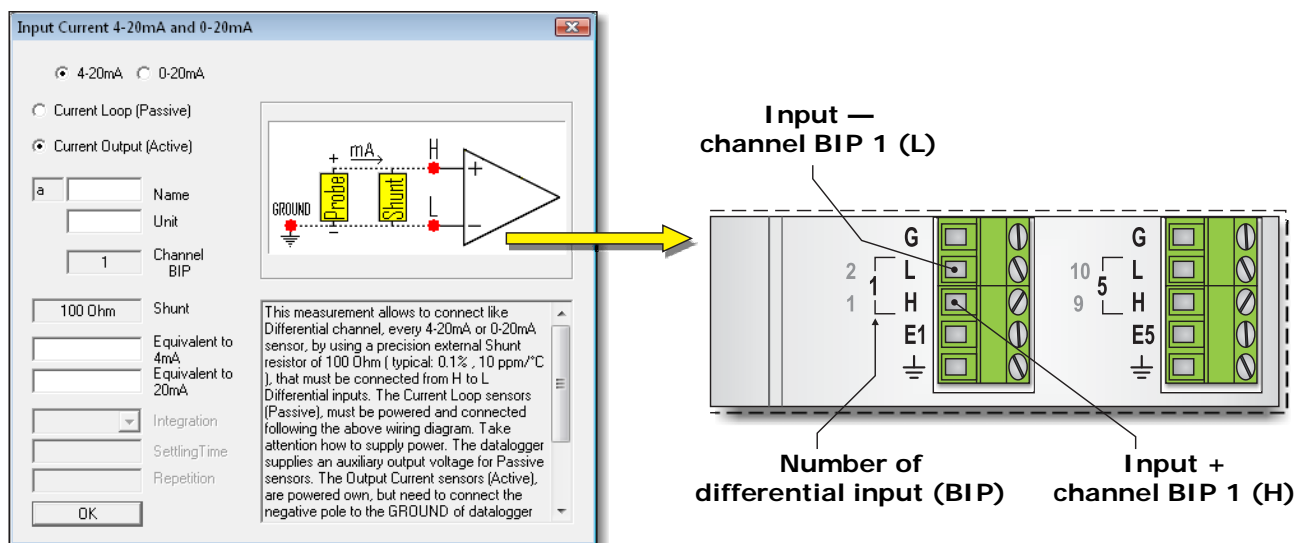

In the configuration window, you must fill in all fields with white background. The fields in gray are not modifiable. The following describes the fields in the window.

- NAME

Identification name of the sensor. You can assign as the name, for example, the model of the sensor, or the type of measured quantity. The name must start with a letter and can be up to 12 alphanumeric characters.

The name uniquely identifies the quantity that you are entering, you can not assign the same name to several measures.

- UNIT (UNIT OF MEASUREMENT)

Unit of measurement of the quantity detected by the sensor. It must begin with a letter and can be a maximum of 12 alphanumeric characters.

The unit is inserted in accordance with the values of parameters *Equivalent to 4mA (or 0mA)* and *Equivalent to 20mA* (see the corresponding point below in the paragraph for setting these parameters).

- CHANNEL BIP

It indicates the number of the analog input to which the sensor should be connected. The software automatically assigns the first free input. The number cannot be changed by the user. The analog inputs arrangement is shown at point 4 of the terminal board figure on page 8.

- SHUNT (SHUNT RESISTANCE VALUE)

The shunt resistor value is fixed at 100 ohm.

- EQUIVALENT TO 4mA OR 0mA AND EQUIVALENT TO 20mA

Generally, the value measured corresponds to the value of a physical quantity, such as temperature, humidity, pressure, etc. It is therefore more interesting to store directly the value of the physical quantity. To record the value of the quantity directly into the data logger, simply enter in the fields *Equivalent to 4mA (or 0mA)* and *Equivalent to 20mA* the following values::

*Equivalent to 4mA (or 0mA)* = initial scale of the physical quantity

*Equivalent to 20mA* = full scale of the physical quantity

The recorded value will use the same unit of measurements of the initial and full scale values entered. Such unit of measurement should be entered in the *Unit* field of the configuration window.

You should only enter the numeric value, without unit of measurement, in the *Equivalent to 4mA (or 0mA)* and *Equivalent to 20mA* fields.

---

## Example

Suppose you need to configure a relative humidity transmitter with output 4 to 20 mA, whose measurement range is 0 to 100%.

The values to be entered in the *Equivalent to 4mA* and *Equivalent to 20mA* are simply:

*Equivalent to 4mA* = 0


*Equivalent to 20mA* = 100

In the *Unit* field, % must be indicated as unit of measurement.




### 9.2.7 DIGITAL INPUT CONFIGURATION

In the *Universal Measurements* category, select the *Digital Input* item to configure an input for the detection of TTL logic levels.

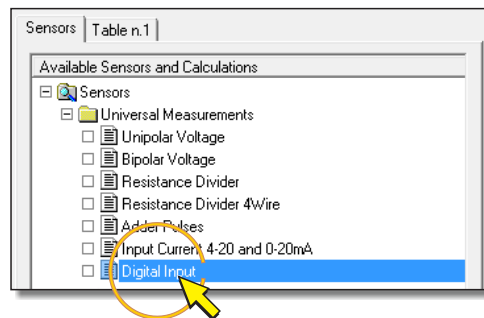

By pressing the *Add Measure* button to add the measurement, the configuration window shown below appears. In the figure there is, for reference, also the detail of the terminal board related to the connection scheme that appears in the window (see the paragraph 5.4 on page 25 for the details of the connections).

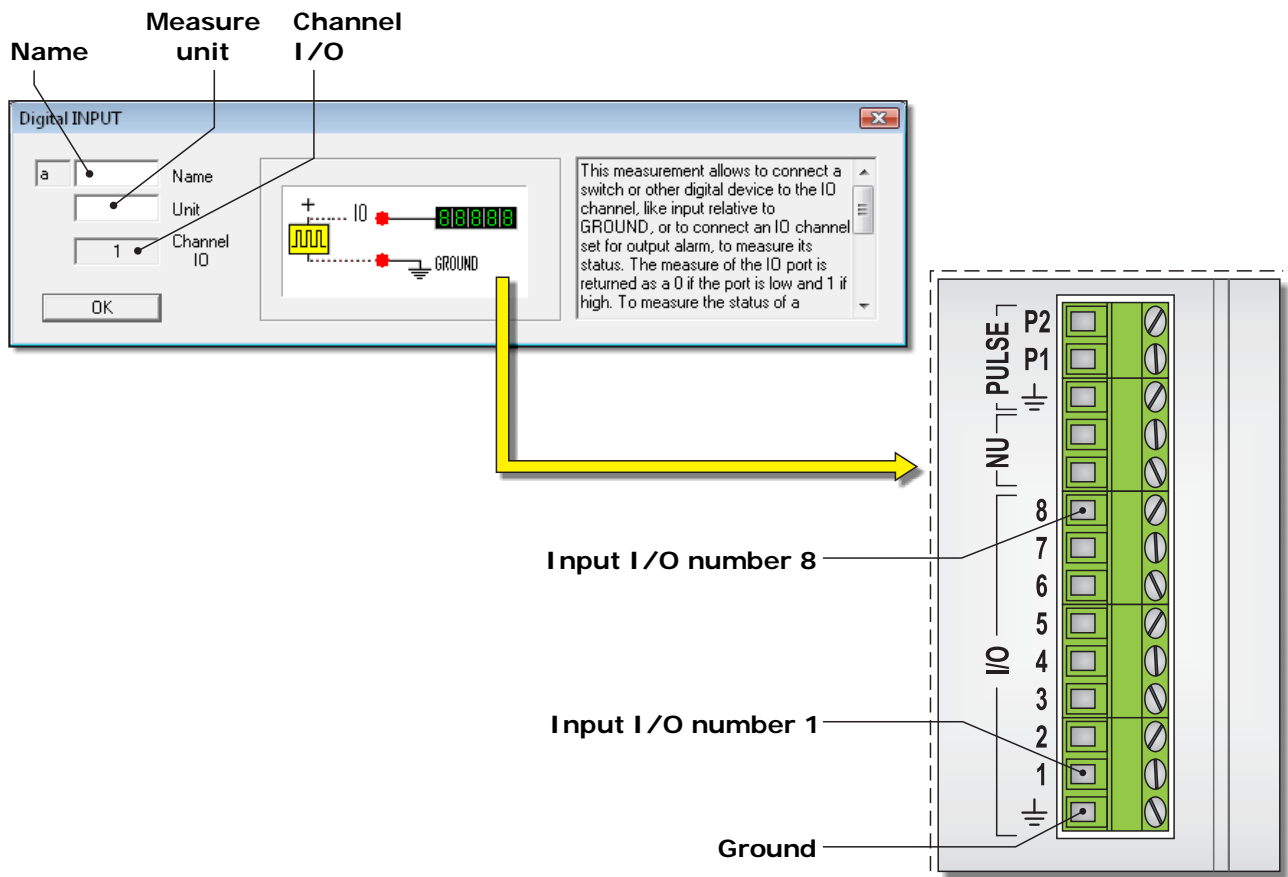

In the configuration window, you must fill in all fields with white background. The fields in gray are not modifiable. The following describes the fields in the window.

- **NAME**

Identification name of the sensor. You can assign as the name, for example, the model of the sensor, or the type of measured quantity. The name must start with a letter and can be up to 12 alphanumeric characters.

The name uniquely identifies the quantity that you are entering, you can not assign the same name to several measures.

- UNIT (UNIT OF MEASUREMENT)


Unit of measurement of the quantity detected by the sensor. It must begin with a letter and can be a maximum of 12 alphanumeric characters.

- CHANNEL I/O


Indicates the number of digital input to which the sensor must be connected. The software automatically assigns the first free input. The number is not editable by the user. The digital inputs arrangement is shown at point **6** of the terminal board figure on page 8.

## 9.2.8 MODBUS RTU CONFIGURATION

In the *Environmental Analysis* category, select the *Modbus RTU* item to configure the RS485 serial input for the connection of a sensor with RS485 output and MODBUS-RTU protocol.

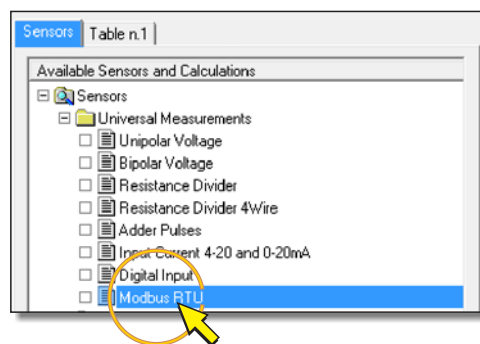

By pressing the *Add Measure* button to add the measure, the configuration window shown below appears. In the figure there is, for reference, also the detail of the terminal board related to the connection scheme that appears in the window (see the paragraph 5.6 on page 28 for the details of the connections).

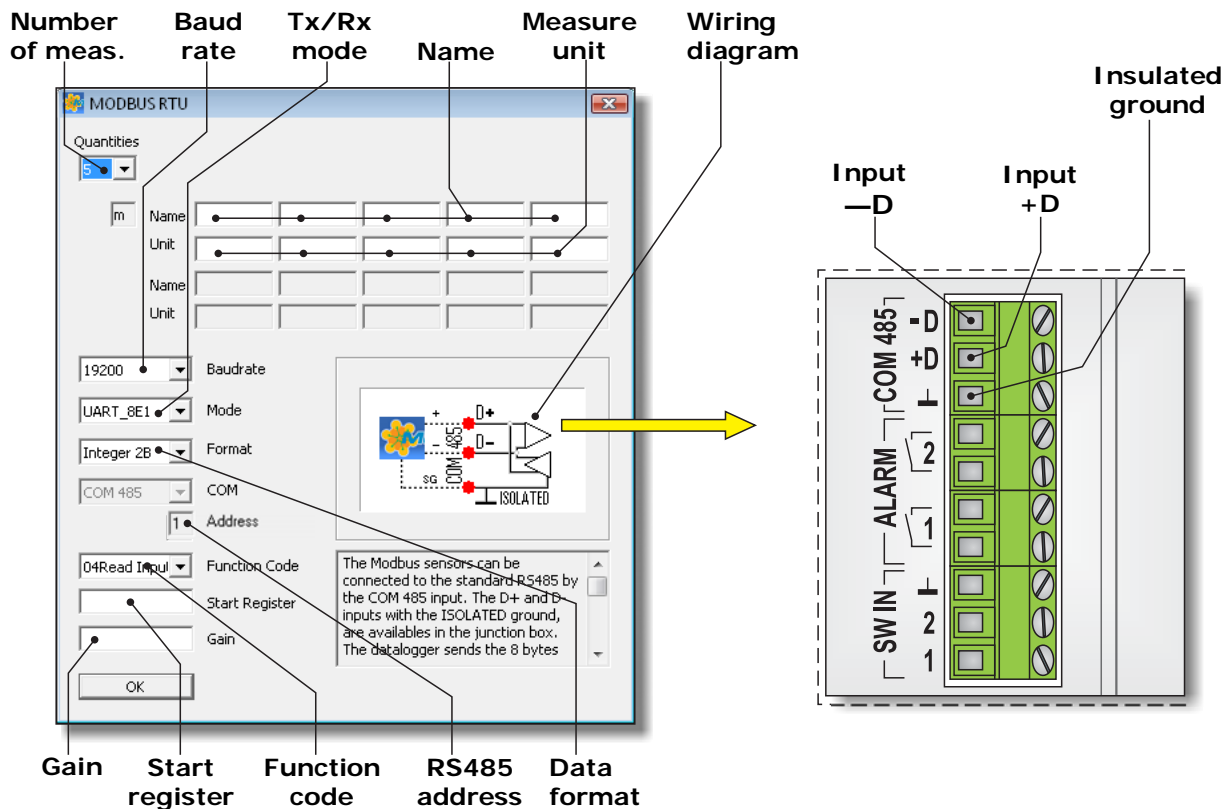

In the configuration window, you must fill in all fields with white background. The fields in gray are not modifiable. The following describes the fields in the window.

- QUANTITIES (NUMBER OF MEASURED QUANTITIES)

Select the number of physical quantities that you want to acquire from the sensor. The value can be set from 1 to 10, the value proposed by default is 5.

- NAME

Enter an identifying name for each of the quantities to be acquired. You can assign as the name, for example, the type of measured quantity. The name must start with a letter and can be up to 12 alphanumeric characters. The name uniquely identifies the quantity that you are entering, you can not assign the same name to several measures.

- UNIT (UNIT OF MEASUREMENT)

Unit of measurement of the quantity detected by the sensor. It should begin with a letter and can be maximum 12 characters long. The unit of measurement should be in agreement with the value of the *Gain* parameter.

- BAUD RATE

Select the communication speed of the sensor. The values 9600, 19200, 38400, 57600 and 115200 baud can be selected.

- MODE (COMMUNICATION PARAMETERS)

Select the communication parameters. The following options can be selected:

- UART\_8N1: no parity, 1 stop bit
- UART\_8E1: even parity, 1 stop bit
- UART\_8O1: odd parity, 1 stop bit
- UART\_8N2: no parity, 2 stop bits
- UART\_8E2: even parity, 2 stop bits
- UART\_8O2: odd parity, 2 stop bits

- FORMAT (FORMAT OF DATA)

Select the format of the data transmitted by the sensor. The following options can be selected:

- Integer 2B: 2 Bytes
- Long 4B: 4 Bytes
- Floating Point 4B: 4 Bytes

- ADDRESS

Anemometer RS485 address. The software automatically assigns the address. The number is not editable by the user.

- FUNCTION CODE

Select the function code of the Modbus command. The following options can be selected:

- 03 Read Holding Registers
- 04 Read Input Registers

- START REGISTER

Enter the address (not the number) of the register containing the first quantity to be read. The number of consecutive registers to be read is determined by the number of measured quantities.

- GAIN

The value recorded in the data logger is the result of a linear transformation applied to the measured value:

$$\text{Value recorded} = \text{Gain} \times \text{Value measured}$$

The *Gain* value is the same for all the quantities measured by the sensor. You should only enter the numeric value, without unit of measurement, in the *Gain* field. The unit of measurement should be entered in the *Unit* field. By setting *Gain* = 1, the recorded value is exactly the measured value.


## SENSOR CONFIGURATION

For the proper functioning of the system, the sensor must be pre-configured with the following settings:


1. The order in which the sensor sends the measures to the output must match the one programmed into the data logger.
2. The units of measurement set in the sensor should match the ones programmed in the datalogger.
3. RS485 with Modbus-RTU protocol communication mode.
4. The RS485 Address must match the one programmed into the data logger.
5. The communication speed (Baud rate) must match the one programmed into the data logger.

### 9.2.9 U.S. ANEMOMETERS HD2003 AND U.S. ANEMOMETERS HD52.3D CONFIGURATIONS

In the *Environmental Analysis* category, select the *U.S. Anemometers HD2003* or *U.S. Anemometers HD52.3D* item to configure the RS485 serial input for the connection of an ultrasonic anemometer Delta OHM series HD2003 or HD52.3D, respectively.

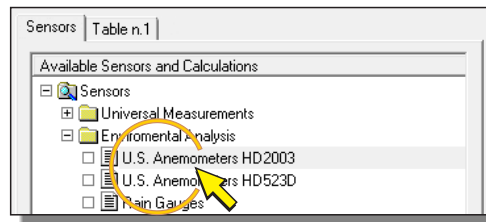

By pressing the *Add Measure* button to add the measure, the configuration window shown below appears. In the figure there is, for reference, also the detail of the terminal board related to the connection scheme that appears in the window (see the paragraph 5.6 on page 28 for the details of the connections).

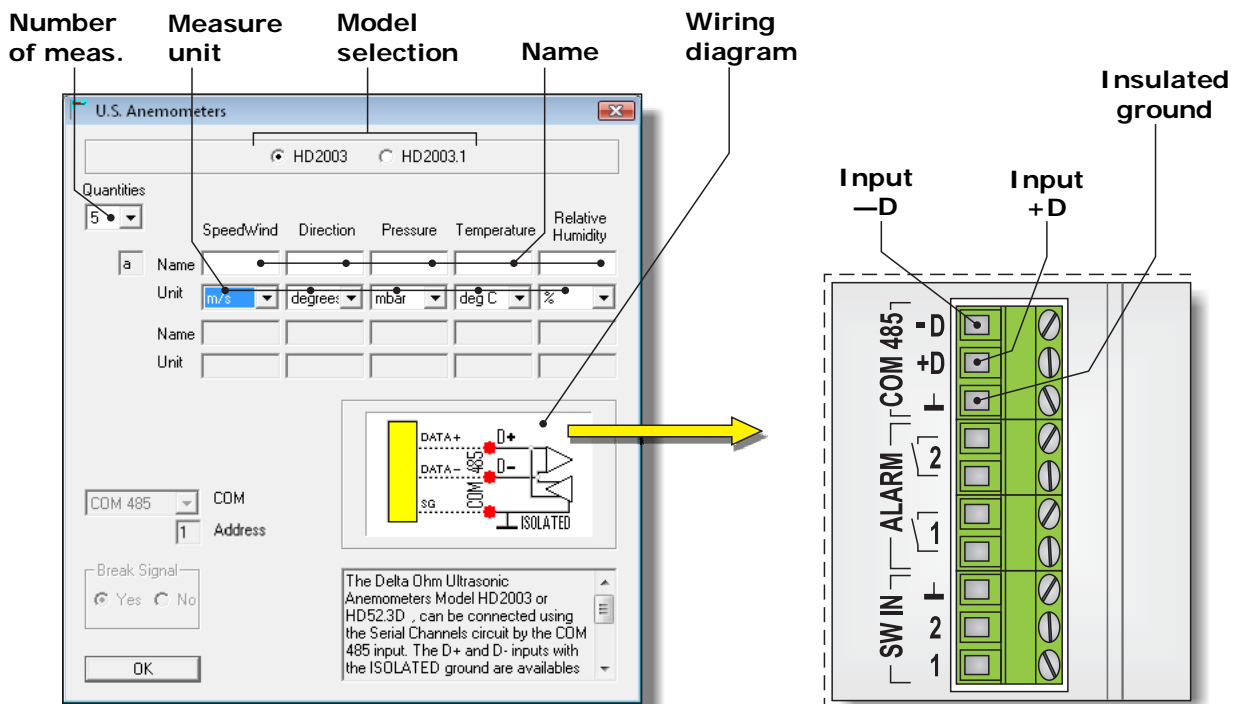

At the top of the configuration window, select the model of anemometer to be connected.

In the configuration window, you must fill in all fields with white background. The fields in gray are not modifiable. The following describes the fields in the window.


- QUANTITIES (NUMBER OF MEASURED QUANTITIES)

Select the number of physical quantities that you want to acquire from the anemometer. The value can be set from 1 to 10, the value proposed by default is 5.

For models HD2003 and HD52.3D147, the order of the first 5 quantities is fixed:

- Wind Speed
- Wind Direction
- Barometric Pressure
- Temperature
- Relative Humidity

For HD2003.1 and HD52.3D models, the first 2 quantities are fixed: wind speed and direction.

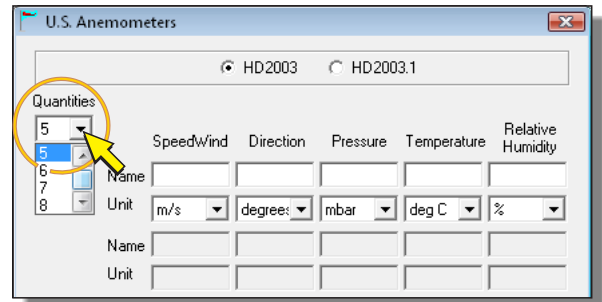

- NAME

Enter an identifying name for each of the quantities to be acquired. You can assign as the name, for example, the type of measured quantity. The name must start with a letter and can be up to 12 alphanumeric characters.


The name uniquely identifies the quantity that you are entering, you can not assign the same name to several measures.

- UNIT (UNIT OF MEASUREMENT)

Select a unit of measurement for the speed of wind among those proposed. The unit selected must be identical to that set in the anemometer.

The unit of measurement of the other quantities is fixed.

If there are optional variables, in addition to the quantities set by the program, type in the relevant unit of measurement in the *Unit* field (at max. 12 alphanumeric characters starting with a letter).

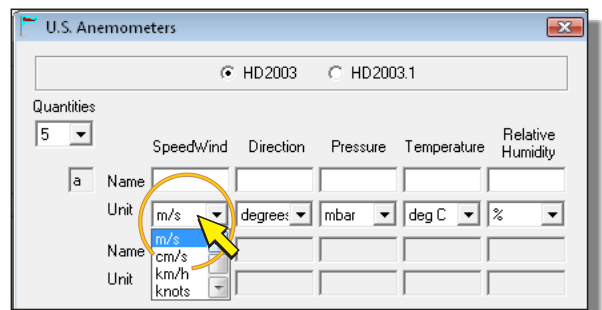

- ADDRESS

Anemometer RS485 address. The software automatically assigns the address. The number is not editable by the user.


## ANEMOMETER CONFIGURATION

For the proper functioning of the system, the anemometer must be pre-configured with the following settings:


1. The order in which the anemometer sends the measures to the output must match the one programmed into the data logger.
2. The unit of measurement of air speed set in the anemometer must match the one programmed in the data logger.
3. Averaging period of the measures equal to 1 second.
4. RS485 communication mode.
5. The RS485 Address must match the one programmed into the data logger.
6. Baud Rate = 115200

## 9.2.10 RAIN GAUGE CONFIGURATION

To configure an input for connecting a rain gauge with a voltage-free ON/OFF contact output, select *Rain Gauges* inside the category *Environmental Analysis*.

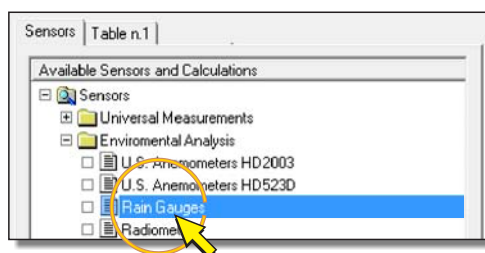

Press the *Add Measure* button to add the measurement and this opens the configuration window shown below. In the figure there is, for reference, also the detail of the terminal board related to the connection scheme that appears in the window (please see the paragraph 5.5.2 on page 26 for the details of the connections).

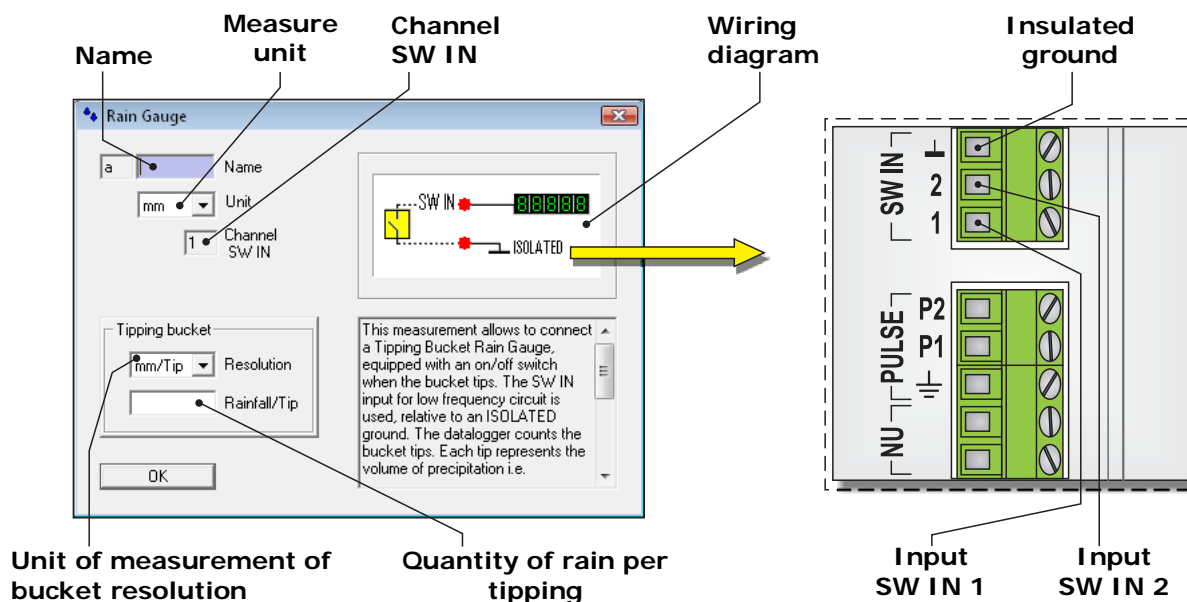

In the configuration window, you must fill in all fields with white background. The fields in gray are not modifiable. The following describes the fields in the window.

- **NAME**

Identification name of the sensor. You can assign as the name, for example, the model of the sensor, or the type of measured quantity. The name must start with a letter and can be up to 12 alphanumeric characters.


The name uniquely identifies the quantity that you are entering, you can not assign the same name to several measures.

- **UNIT (UNIT OF MEASUREMENT)**

Select the desired unit of measurement for the amount of rain between *mm* and *inch*.


- **CHANNEL SW IN**

Indicates the number of the SW IN input to which the sensor must be connected. The software automatically assigns the first free input. The number is not editable by the user. The location of the SW IN inputs is indicated at point **9** of the terminal board figure on page 8.

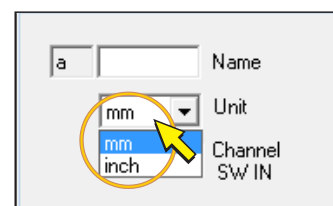

- **RESOLUTION** (UNIT OF MEASUREMENT OF RESOLUTION)

In the field should be selected the unit of measurement of the resolution printed in the rain gauge data sheet. The selectable settings are *mm/Tip* and *inch/Tip*.

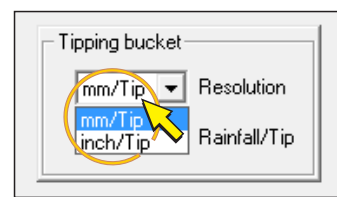


- **RAINFALL/TIP** (QUANTITY OF RAIN PER TIPPING)


Enter the resolution value reported in the technical data sheet of the rain gauge. The value is the amount of rain that causes the switching of the tipping bucket. Must be inserted only the numerical value without unit.

## 9.2.11 RADIOMETRY CONFIGURATION

To configure an input for connecting a solar radiation sensor with voltage output, select *Radiometry* item inside the *Environmental Analysis* category.

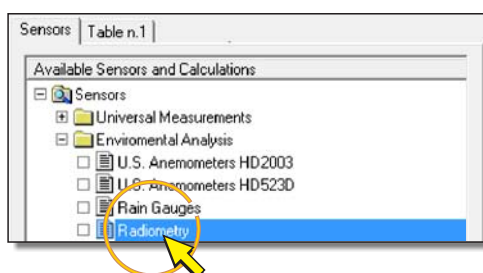


By pressing the *Add Measure* button to add the measurement, the window for selecting the connection type appears.

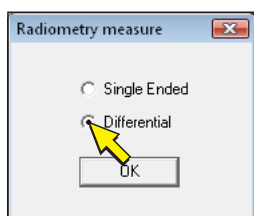


Select *Single Ended* option if you are planning a single-ended connection (measuring signal connected between a single-ended input and the analog ground) or *Differential* option if you plan to connect the sensor in differential mode (measuring signal connected between two analog inputs). The differential mode is recommended for sensors with mV output, so as to reduce the influence of noise on the measurement signal. For sensors with normalized voltage output, the single-ended connection is sufficient.

Press *OK* to confirm, so the configuration window shown below appears. In the figure there is, for reference, also the detail of the terminal board related to the connection scheme that appears in the window (see the paragraph 5.3.1 on page 17 for the details of the connections).

## WINDOW WITH SINGLE ENDED OPTION

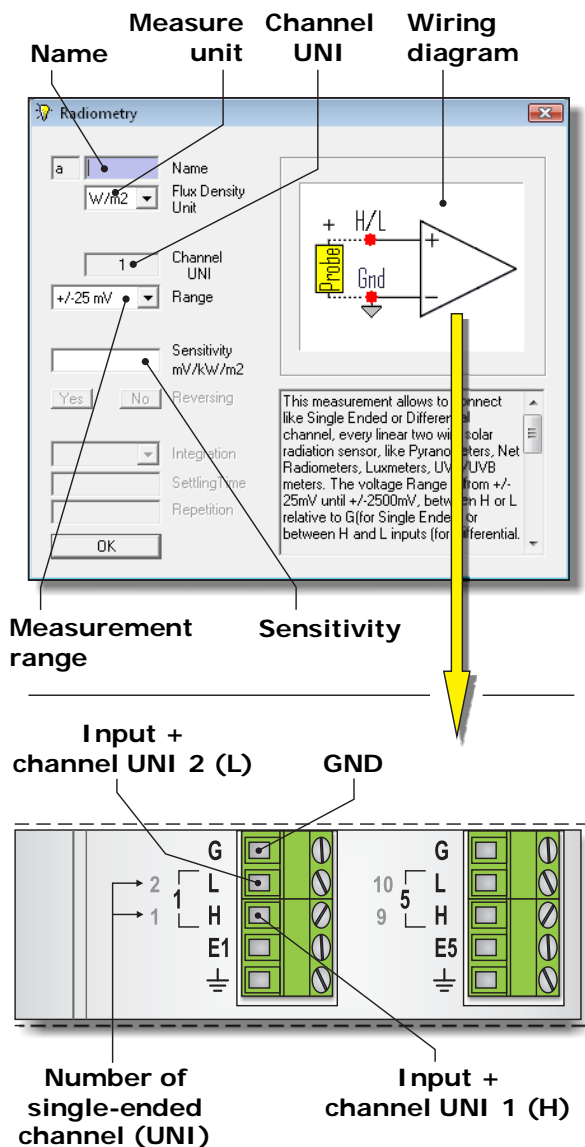

## WINDOW WITH DIFFERENTIAL OPTION

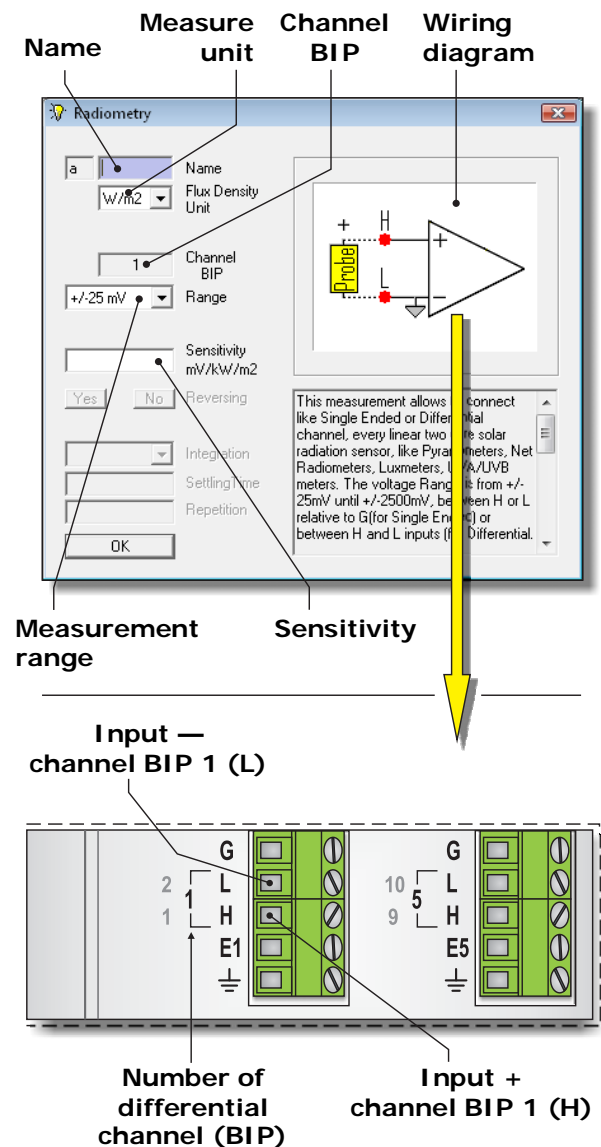

In the configuration window, you must fill in all fields with white background. The fields in gray are not modifiable. The following describes the fields in the window.


- **NAME**

Identification name of the sensor. You can assign as the name, for example, the model of the sensor, or the type of magnitude being measured. The name must start with a letter and can be up to 12 alphanumeric characters.

The name uniquely identifies the measure that you are entering, you can not assign the same name to several measures.

- **FLUX DENSITY UNIT (UNIT OF MEASUREMENT)**

Select the unit of measurement of the quantity measured by the sensor. There are two possible options:  $kLux$  and  $W/m^2$  ( $W/m^2$ ).

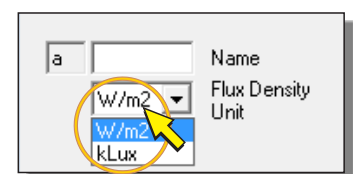

- **CHANNEL UNI OR CHANNEL BIP**


Indicates the number of analog input to which the sensor must be connected. The software automatically assigns the first free input. The number is not editable by the user. The location of the analog inputs is shown at point 4 of the terminal board figure on page 8.



- **RANGE**


It is the measuring range of the data logger input. Click on the *Range* field and then select a measuring range suitable for the sensor that is being inserted, so that the voltage sensor output is within the measurement range selected. There are four selectable ranges:

- $\pm 25$  mV
- $\pm 100$  mV
- $\pm 1000$  mV
- $\pm 2500$  mV

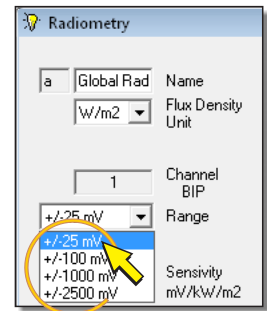

To get the best resolution of measurement it is convenient to choose the first measurement range higher than the output of the sensor.

If the sensor output is too high to fall within the ranges available, it is necessary to reduce the signal by inserting a resistive divider between the output of the sensor and the data logger input (see paragraph 5.3.1 on page 17 for the connection).

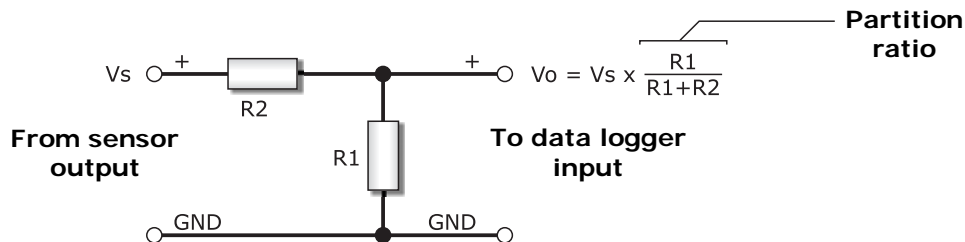

The sum of the values of R1 and R2 must be greater than the minimum load resistance of the sensor.

Only as an example, the table below shows the range selectable and the need of divider for different voltage outputs that are typically available in Delta ohm sensors with normalized voltage output.

Sensor Output	Selectable Range (*)	Resistive Divider
0 ÷ 1 V	$\pm 1000$ mV or $\pm 2500$ mV	No
0 ÷ 5 V	$\pm 1000$ mV or $\pm 2500$ mV	Yes, partition ratio 1/5
0 ÷ 10 V	$\pm 1000$ mV or $\pm 2500$ mV	Yes, partition ratio 1/10
1 ÷ 5 V	$\pm 1000$ mV or $\pm 2500$ mV	Yes, partition ratio 1/5
2 ÷ 10 V	$\pm 1000$ mV or $\pm 2500$ mV	Yes, partition ratio 1/10

(\*) *Note:* Some sensors can provide an output voltage that exceeds the nominal value of the scale, if the measured quantity exceeds the range measured. If you want that error condition is also recorded by the logger, you must set a value in the *Range* field higher than the nominal range of the sensor. For example, for a sensor with a nominal 0-1V output we have to select the range  $\pm 2500$  mV, not the  $\pm 1000$  mV range.

For sensors with not normalized mV output, the maximum output voltage is obtained by multiplying the sensitivity of the sensor by the full scale value of the measured quantity.

- **SENSITIVITY**

In this field, the value of the sensitivity of the sensor must be inserted. **The entered value must be expressed in mV/(kW m<sup>-2</sup>) or mV/klux** depending on the type of quantity measured by the sensor. If the sensitivity is known in a different unit, you must convert in the units above. Must be inserted only the numerical value without unit.

For sensors with direct mV output, the sensitivity is usually stated by the manufacturer and is also indicated on the housing of the sensor.

For sensors with normalized voltage output, the sensitivity should be calculated by dividing the output voltage range by the measurement range of the physical quantity.

---

### Example 1

Suppose you need to set up a pyranometer with normalized 0 to 10V voltage output and measurement range 0 to 2000 W/m<sup>2</sup>. Between the transmitter and data logger it is inserted a resistive divider with a partition ratio of 1 / 10.

The configuration values of the logger input are:

*Flux Density Unit* = W/m<sup>2</sup>

*Range* = ±1000mV.

*Sensitivity* = 10 / 2000 = 0.005 V/(W m<sup>-2</sup>) = 5000 mV/(kW m<sup>-2</sup>). The value to be entered is 5000.

### Example 2

Suppose you need to configure a pyranometer with mV output and measurement range 0 to 2000 W/m<sup>2</sup>. The sensitivity is declared 10 µV/(Wm<sup>-2</sup>). The transmitter output is connected directly to the data logger input (resistive dividers are not present).

The maximum voltage that can be generated from the sensor is equal to the sensitivity multiplied by the full scale of the measured quantity: 10 x 2000 = 20.000 µV = 20 mV.

The configuration values of the of the logger input are:


*Flux Density Unit* = W/m<sup>2</sup>

*Range* = ±25 mV.


*Sensitivity* = 10 µV/(Wm<sup>-2</sup>) = 10 mV/(kW m<sup>-2</sup>). The value to be entered is 10.

## 9.2.12 Pt100-Pt1000 THERMOMETERS CONFIGURATION

To configure an input for connecting a 4-wire Pt100 or Pt1000 temperature probe with coefficient  $\alpha = 0.00385$  (IEC 751), select the *Pt100-Pt1000 Thermometers* item in the *Industry* category.

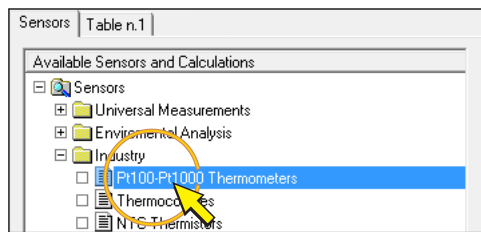

By pressing the *Add Measure* button to add the measurement, the configuration window shown below appears. In the figure there is, for reference, also the detail of the terminal board related to the connection scheme that appears in the window (see the paragraph 5.3.5 on page 23 for the details of the connections).

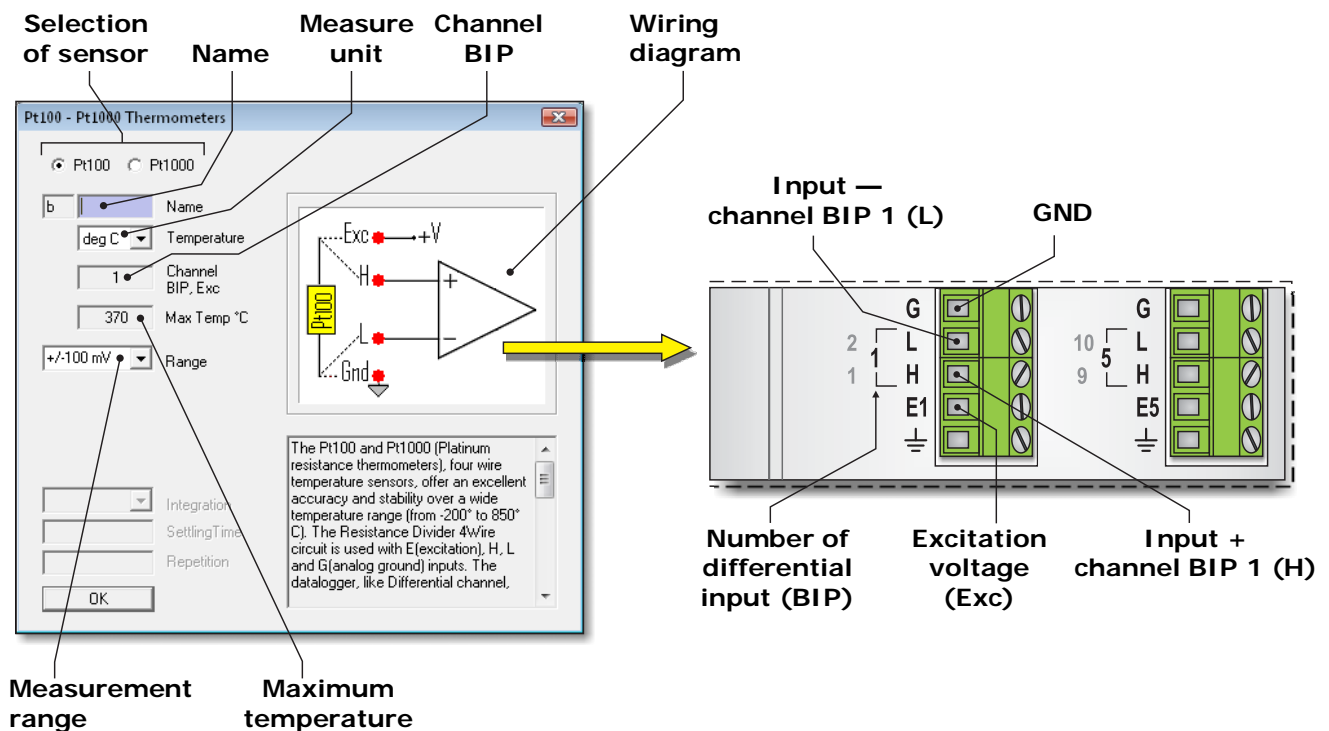

In the top left of the configuration window, select *Pt100* or *Pt1000* according to the type of sensor used.

In the configuration window, you must fill in all fields with white background. The fields in gray are not modifiable. The following describes the fields in the window.

- NAME


Identification name of the sensor. You can assign as the name, for example, the model of the sensor, or the type of measured quantity. The name must start with a letter and can be up to 12 alphanumeric characters.

The name uniquely identifies the measure that you are entering, you can not assign the same name to several measures.

- TEMPERATURE (TEMPERATURE UNIT OF MEASUREMENT)

Select the desired unit of measurement among: *deg C* (Celsius degrees), *deg F* (Fahrenheit degrees) and *deg K* (Kelvin degrees).

The data logger computes, using the coefficient  $\alpha = 0.00385$ , the value of temperature corresponding to the measured resistance value, and directly records the temperature value in the chosen unit of measurement.

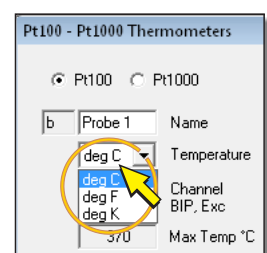

- CHANNEL BIP, EXC

It Indicates the number of analog input to which the sensor must be connected. The software automatically assigns the first free input. The number is not editable by the user. The location of the analog inputs is shown at point **4** of the terminal board figure on page 8.

- RANGE

Select the desired measuring range. The options presented depend on the type of sensor.


For sensor type **Pt100** select:

- o  $\pm 100$  mV for temperature measurements up to  $370^{\circ}\text{C}$
- o  $\pm 1000$  mV for temperature measurements up to  $850^{\circ}\text{C}$

For sensors type **Pt1000** select:

- o  $\pm 1000$  mV for temperature measurements up to 370 °C
- o  $\pm 2500$  mV for temperature measurements up to 850 °C

If you plan to measure temperatures not higher than 370 °C it is convenient to choose the lower range because it allows better measurement resolution.

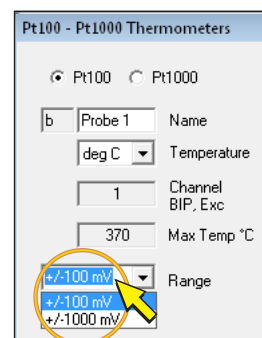


• MAX TEMP °C (MAXIMUM TEMPERATURE IN °C)


It is the maximum temperature that can be measured with the current setting in the *Range* field. The value cannot be changed directly but it is calculated automatically according to the option selected in the *Range* field.

### 9.2.13 THERMOCOUPLES CONFIGURATION

To configure an input to connect a thermocouple temperature probe, select the *Thermocouples* item in the *Industry* category.

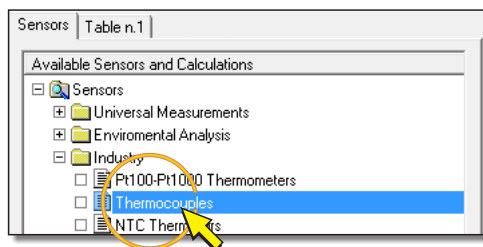


By pressing the *Add Measure* button to add the measurement, the configuration window shown below will appear. In the figure is shown, as a reference, also the detail of the terminal board concerning the wiring diagram appearing on the window (see the paragraph 5.3.6 on page 24 for the details of the connections).

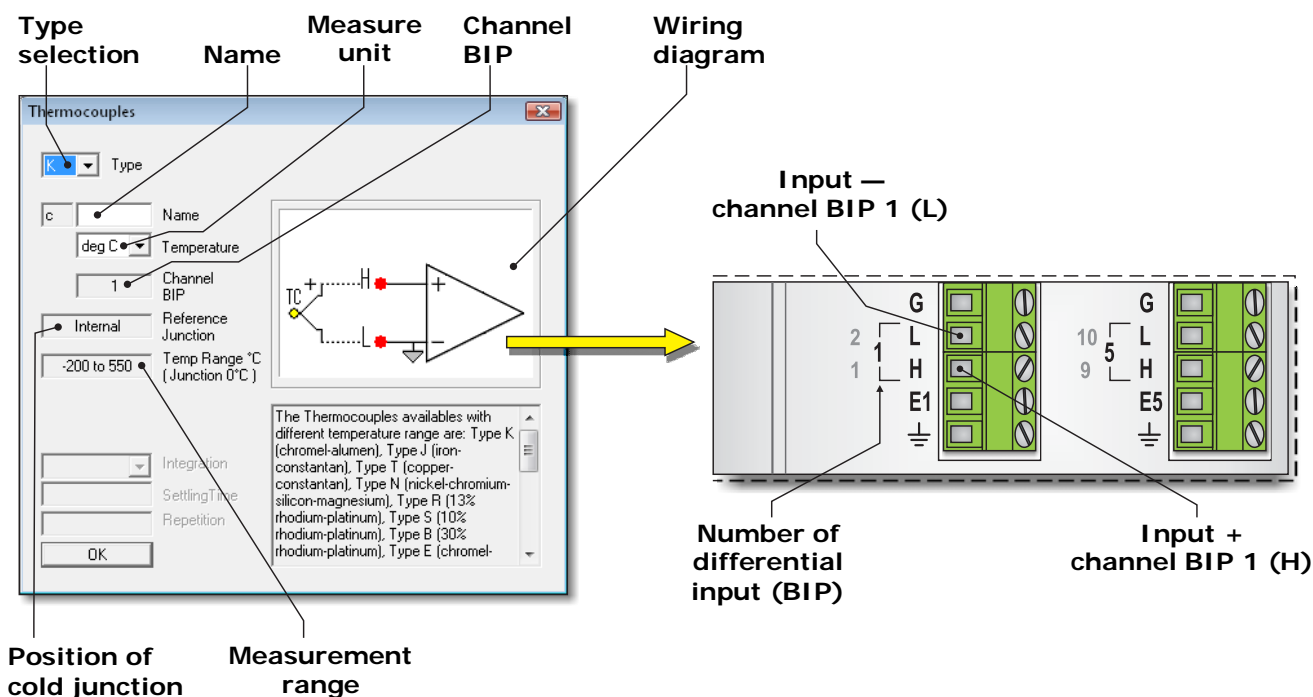

In the configuration window, you must fill in all fields with white background. The fields in gray are not modifiable. The following describes the fields in the window.

- **TYPE (TYPE OF THERMOCOUPLE)**

In the *Type* field select the type of thermocouple to be connected to the data logger. You can connect thermocouples type K, J, T, N, R, S, B, E.

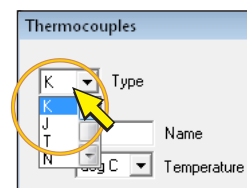

- **NAME**


Identification name of the sensor. You can assign as the name, for example, the model of the sensor, or the type of quantity measured. The name must start with a letter and can be up to 12 alphanumeric characters.

The name uniquely identifies the measure that you are entering, you can not assign the same name to several measures.

- **TEMPERATURE (UNIT OF TEMPERATURE MEASUREMENT)**

Select the desired unit of measurement among: *deg C* (Celsius degrees), *deg F* (Fahrenheit degrees) and *deg K* (Kelvin degrees).

The data logger calculates the temperature corresponding to the value of the input voltage in mV, and directly stores the value of temperature in the selected unit of measurement.

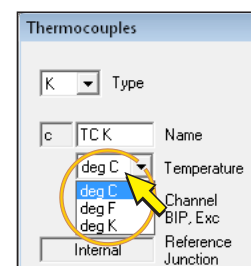

- **CHANNEL BIP**

Indicates the number of analog input to which the sensor must be connected. The software automatically assigns the first free input. The number is not editable by the user. The analog inputs arrangement is shown at point **4** of the terminal board figure on page 8.

- **REFERENCE JUNCTION (COLD JUNCTION)**

The field is fixed to the value *Internal*. The cold junction is located at the connection point of the thermocouple to the data logger and the junction temperature is measured by a temperature sensor inside the logger. Do not connect external temperature sensors for cold junction compensation


- **TEMP RANGE °C (TEMPERATURE RANGE IN °C)**

It indicates the temperature measurement range with thermocouple type selected. The value that appears is set automatically depending on the option selected in the *Type* field. The correspondence between the type of thermocouple and the measured field is shown in the table below:

Type of thermocouple	Measurement range
K	-200...+550 °C
J	-210...+420 °C
T	-200...+400 °C
N	-200...+660 °C
R	-50...+1760 °C
S	-50...+1760 °C
B	+250...+1820 °C
E	-200...+330 °C

## 9.2.14 NTC THERMISTOR CONFIGURATION

To configure an input for connecting an NTC thermistor temperature probe, select the *NTC Thermistors* item in the *Industry* category.

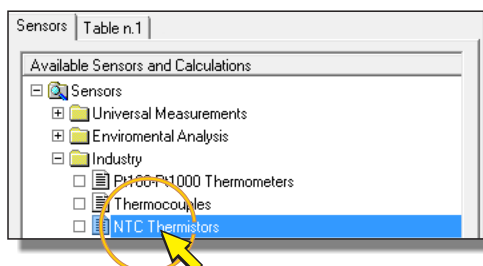

Press the *Add Measure* button to add the measurement and this opens the configuration shown below. In the figure is shown, as a reference, also the detail of the terminal board concerning the wiring diagram appearing on the window (see the paragraphs 5.3.3 on page 22 for the details of the connections).

Name	Measure unit	Channel UNI	Terminal (E)	Excitation voltage	Wiring diagram

**BETA**      **Measurable values**

In the configuration window, you must fill in all fields with white background. The fields in gray are not modifiable. The following describes the fields in the window.


- NAME

Identification name of the sensor. You can assign as the name, for example, the model of the sensor, or the type of measured quantity. The name must start with a letter and can be up to 12 alphanumeric characters.

The name uniquely identifies the measure that you are entering, you can not assign the same name to several measures.

- TEMPERATURE (UNIT OF TEMPERATURE MEASUREMENT)

Select the desired unit of measurement among: *deg C* (Celsius degrees), *deg F* (Fahrenheit degrees) and *deg K* (Kelvin degrees).

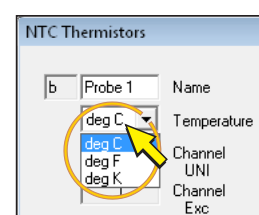

The data logger calculates the temperature corresponding to the resistance value measured as a function of the value inserted in the *BETA* field, and directly store the value of temperature in the chosen unit of measurement.

- CHANNEL UNI

It Indicates the number of analog input to which the sensor must be connected. The software automatically assigns the first free input. The number is not editable by the user. The analog inputs arrangement is shown at point 4 of the terminal board figure on page 8.

**The programmable inputs for this type of measurement are only the single-ended inputs 1, 2, 3 and 4.**

- CHANNEL EXC (EXCITATION TERMINAL)

Indicates the number of the terminal **E** from where the excitation voltage must be taken, which is the terminal where you must connect one end of the reference resistor **Rf**. The number is assigned automatically and is not editable by the user.

- VEXC (EXCITATION VOLTAGE)

It is the excitation voltage applied to terminal **E**. The value is fixed at 2500 mV.

- BETA (CONSTANT OF THE MATERIAL)

Write in this field the value of the coefficient BETA ( $\beta$ ) reported in the sensor specifications.

- NTC/Rf RANGE

It is the measuring range of sensor resistance value compared to the reference resistance Rf. The field can not be set. The minimum and maximum values measurable are respectively:

$$NTC_{min} = Rf / 1000$$

$$NTC_{max} = 100 \times Rf$$

The value of Rf to be connected is the thermistor resistance value at 25 °C.

The reference resistor Rf must be a precision resistor and sufficiently stable over time and exposure to environmental conditions, since the drift of the Rf values results in a measurement change not due to a real variation in temperature.

### 9.2.15 ERROR MESSAGES WHILE SETTING THE PARAMETERS

If the parameters are not correctly set in the configuration window, you can get the following error messages.

- *The name and Unit fields are required!*

Cause: The name or the unit of measurement field is not filled in.

- *There is just an equivalent Name !*

Cause: it has already been previously entered a sensor with the same name. You must change the name.

Note: the software does not distinguish between uppercase and lowercase letters (for example the name TC\_K is assumed to be the same as tc\_K).

- *Gain must be not zero !*

Cause: *Gain* field was not filled in or has been put to zero.

- *The Sensitivity must be positive !*

Cause: the *Sensitivity* field of the *Radiometry* configuration has not been filled in or has been set to zero or negative value.

- *Rainfall/Tip must be positive !*

Cause: the *Rainfall/Tip* field of the *Rain Gauge* configuration has not been filled in or has been set to zero or negative value.

- *BETA must be positive !*

Cause: the *BETA* field of the *NTC Thermistors* configuration has not been filled in or has been set to zero or negative value.

### 9.3 CREATING THE STORE TABLES


After you define the list of measures (*MEASURE List*) and the acquisition interval (*SCAN Period*), you must determine which measures should be stored in the data logger and when.

It is important to note that in the data logger the process of measures acquisition is distinct from the process of measures recording. The definition of the list of measures and acquisition interval does not involve the automatic storage of acquired data. To store a measurement it is necessary to insert it into a store table.

A program can consist of one or more store tables. The use of multiple tables allows to store the various measures at different intervals.

To define the first store table, proceed as follows:


1. In the left panel of the program window, select the folder *Table n.1*, by clicking on the relevant label.

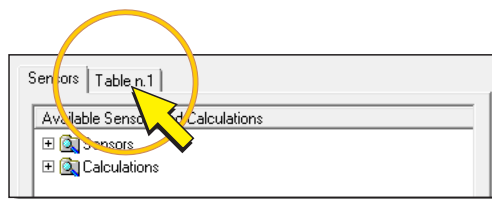


*Note*: the folder is selectable only if the *MEASURE List* includes at least one sensor.



- In the left pane appears an empty table. To insert a measure, select it from the list in the right pane of the window (*MEASURE List*) and click on the *Add Store* button with the blue arrow at the centre of the window.

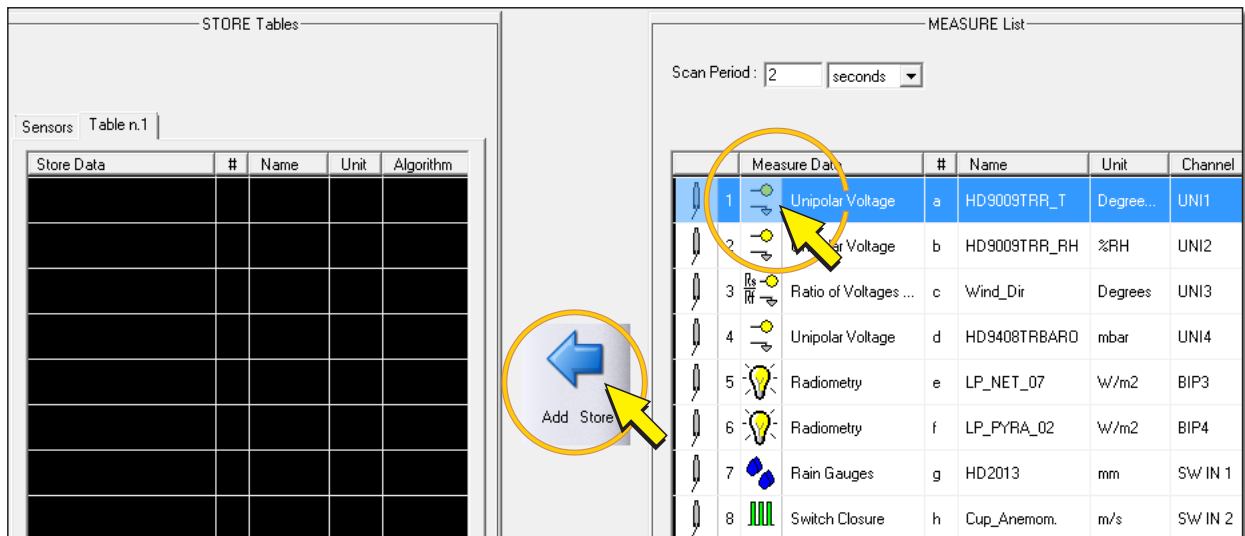


- The window for selecting the type of value to be stored appears. Select the desired option from the following:
  - *OneSample* stores the last instant value acquired.
  - *Average* stores the average of the values acquired between two successive recording instants.
  - *Max* stores the maximum of the values acquired between two successive recording instants.
  - *Min* stores the minimum of the values acquired between two successive recording instants.
  - *Total* stores the sum of the values acquired between two successive recording instants. It is used in case of pulse inputs to store the total number of pulses counted.
  - *StDeviation* stores the standard deviation of the values acquired between two successive recording instants.
  - *Alarms* stores the alarm condition of the measurement.

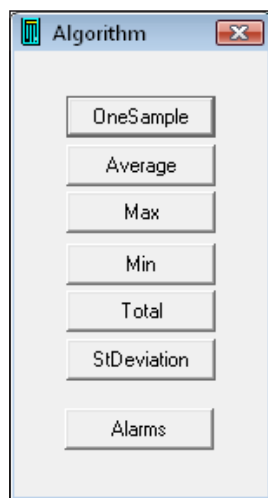

Depending on the type of measurement, some of the options might be disabled if they are not significant for the measure. The *Alarms* button is disabled if the table already contains a type of storage different from the alarm condition (please see paragraph 9.3.1 on page 96 for the creation of the alarms table).

- After choosing the type of value to be stored, the measure is added to the store table, and above the table appears the recording interval (*Store Period*). Write the desired interval. If necessary, select minutes (*minutes*) or seconds (*seconds*) as unit of measurement for the interval.

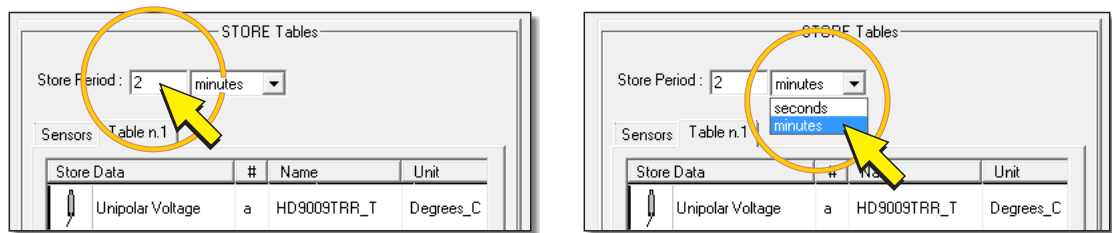

The recording interval (*Store period*) must meet the following conditions:

- Be between 2 and 60 seconds or between 1 and 1440 minutes (24 hours).
- Be equal to or multiple of the acquisition interval (*Scan Period*).




If you set a recording interval that is not a multiple of the acquisition interval, an error message appears: *Store Period must be multiple of Scan Period!*. In this case, press *OK* and set a correct interval value.

The recording interval is associated with the table that is being defined and it is common to all measures in the table. Each table has its own recording interval that can be the same or different compared to other tables that may be present.

- Proceed according to steps 2 and 3 to add further measures to the store table.

*Note:* the type of stored value (*OneSample*, *Average*, etc.) may be different from measure to measure. In addition, the same measure can be added multiple times to the same table with different types of value to be stored.

To remove a measure from a store table, select it and press *Remove store*.

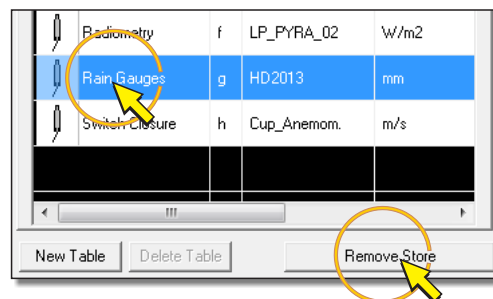


If you want to store some of the measures at different intervals than others, you can split the measures into multiple tables, setting the required interval for each table.

The same measure may also appear in multiple tables.


If there are many measures to be stored with the same interval, for your convenience you can also divide them into multiple tables by setting the same recording interval for the various tables.

To create further tables after the first one, select the *New Table* button at the bottom left. This opens an empty table (with a sequential number following the last created table) in which you can enter the measurements you want.

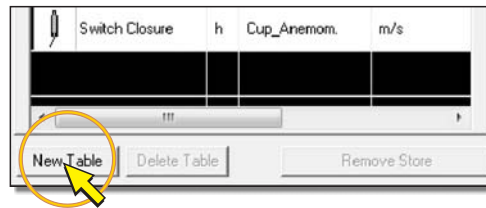

The program can contain up to 8 store tables.

To delete the last created table, select the *Delete Table* button below the table, then press *Yes* when the message asking you to confirm the operation appears.

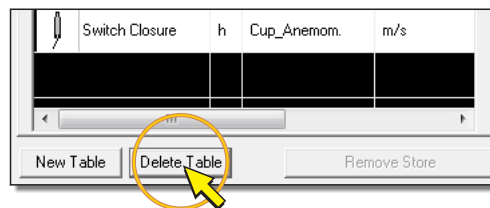


You can only delete the table with the highest sequential number among those present. You can not delete the table number 1, even if empty.

#### WARNING MESSAGES

During the insertion of the measures in the store tables, the following messages may appear:

- *Scan Period too short !*

The message appears when the number of measurements becomes too high to be able to acquire all the measures between two successive acquisition instants. The measure that you are trying to enter will **not** be added to the table. Press *OK* to return to the program window. To insert additional measures it is necessary to increase the acquisition interval in the *Scan Period* field.

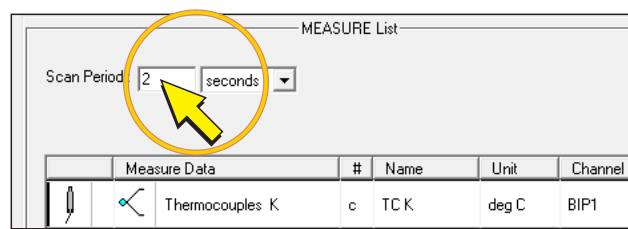

- *Total Store Data over 30 reached !*

The message appears when you try to insert a measure, but there are already 30 measures present.

### 9.3.1 ALARMS TABLE

To create a table of alarms, select an empty table, then add the measurements you want by choosing the *Alarms* option.

Selecting the *Alarms* option, a window appears that allows you to set the values of the two alarm thresholds, lower and higher, and the associated alarm outputs to be activated.

The screenshot shows the 'Alarm Set' dialog box with the following components and annotations:

- Enable lower threshold:** Points to the 'Enable' checkbox for the Low threshold.
- Lower threshold:** Points to the 'Value' field for the Low threshold, which contains '-10.0'.
- Lower threshold alarm output:** Points to the 'Out' section for the Low threshold, specifically to the '1 Ch ALARM' option.
- Enable higher threshold:** Points to the 'Enable' checkbox for the High threshold.
- Higher threshold:** Points to the 'Value' field for the High threshold, which contains '45.0'.
- Higher threshold alarm output:** Points to the 'Out' section for the High threshold, specifically to the '2 Ch IO' option.
- SMS text:** Points to the 'General' text field in the 'SMS Messages' section.

The dialog box also includes an 'Edge Trigger' checkbox and an 'OK' button at the bottom.

Select the *Enable* boxes to enable the thresholds. The alarm condition occurs if the value falls below the lower threshold or rises above the upper threshold.

The alarm outputs are independent for the two thresholds. As alarm outputs you can use the digital I/O ports, by selecting the *Ch IO* option, or the potential-free contact alarm outputs, selecting the *Ch ALARM* option. The output number, shown to the left of the option is assigned automatically by the software, it is not allowed the manual setting. If you do not want to assign an alarm output, select *NO Out*. If you do not select any output option, the software automatically assigns the *NO Out* option.

Each alarm output is related to a single threshold. It is not allowed to assign the same output to two different thresholds, even if they related to the same measure.

Alarm conditions are always all stored according to the set recording interval for the table, regardless of the assignment or not of corresponding outputs.

If the data logger is connected to a GSM device, when an alarm condition occurs, the data logger can send an alert SMS. The SMS text consists of the text entered in the field *General*, followed by the text (not editable) of the *Event Low* or *Event High* field depending on the alarm condition present.

Press *OK* to add the alarm conditions to the table.


Alarm conditions to be stored must all be entered in the same table. Tables dedicated to the storage of measured values can not contain storing of alarm conditions. If a table already includes the storage of a measured value, the *Alarms* button is disabled when adding other measures to the table. Similarly, if the table stores alarm conditions, it can not contain recordings of measured values. If a table already contains the storage of an alarm condition, only the *Alarms* button is enabled when adding other recordings to the table.

You can change alarm conditions already entered by double clicking on the rows of the table (*note*: the SMS text is visible only if the sending of the SMS is enabled).

To the alarm thresholds it is applied an hysteresis of  $\pm 1\%$  of set value. The difference between the two thresholds can not be less than 2% of the value of the lower threshold.

### **ALARMS RELATED TO DIGITAL INPUTS**


In the case of digital inputs, only one thresholds can be enabled. Enabling the lower thresholds, there is the alarm signal when the input is at logic state 0. Enabling the higher thresholds, there is the alarm signal when the input is at logic state 1. If both thresholds are enabled, an error message appears when pressing *OK* to confirm.

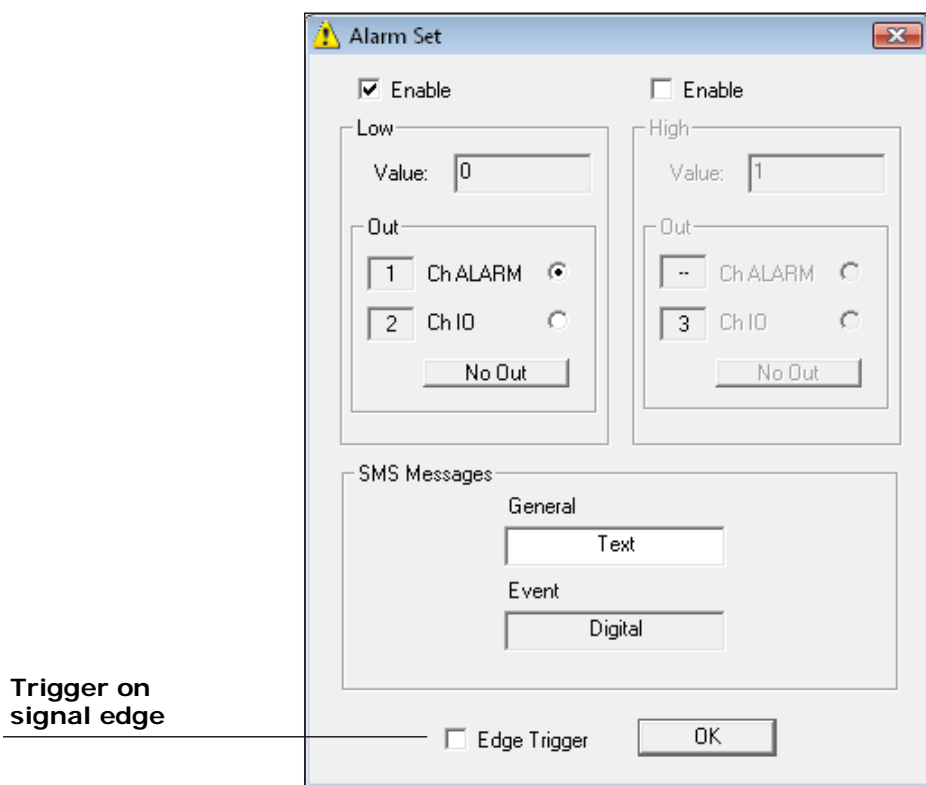

By selecting the *Edge Trigger* box, the alarm is triggered only after a state change of the input signal (from 1 to 0 if the lower thresholds is enabled, from 0 to 1 if the higher thresholds is enabled). This allows to prevent false alarms at system power on: if the digital input is in the alarm state at datalogger power on, the alarm is not triggered immediately but the datalogger waits for the alarm condition to stop and occur again later (with the *Edge Trigger* box not selected, instead, the alarm would be triggered immediately at power on).

### **ENABLING THE SMS**

To enable the sending of SMS messages you must apply the check mark in the *Enable SMS* option.

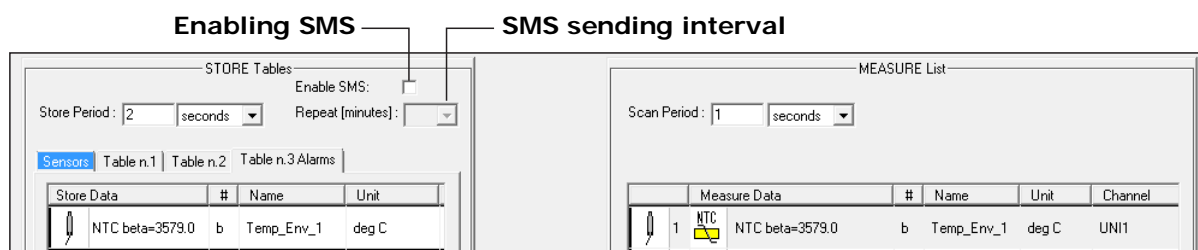

In the *Repeat* field, set the time interval between the sending of successive alarm SMS, in the case the alarm condition persists over time.

After an alarm condition has occurred and the corresponding message has been sent, no further SMS will be sent until the set *Repeat* interval has elapsed, even if other alarm conditions occur. If at the time to send the SMS alert more of an alarm condition is present, it is sent only the SMS corresponding to the alarm condition that occurred first.

If at the expiration of the *Repeat* interval the alarm condition is no longer present, the SMS is not sent.


The setting of the *Enable SMS* option and *Repeat* interval is unique for all measures. The SMS alert is available only for the first 16 measures of the table.

For the setting of phone numbers to which the SMS messages should be sent, refer to the manual of the HD32MTLogger application software.

*Note:* SMS messages are not sent if the logger is connected to the PC and there is an ongoing communication session.

### 9.3.2 CAPACITY OF THE INTERNAL MEMORY

The HD32MTLogger software calculates the time needed to fill the data logger internal memory as a function of the set recording intervals and the number of tables and measures to store. The time is calculated when you press the *Create* button to save the program file, or the *Print* button to print the wiring diagram or the store tables. The time is displayed in the lower right side of the program window and is estimated in days.

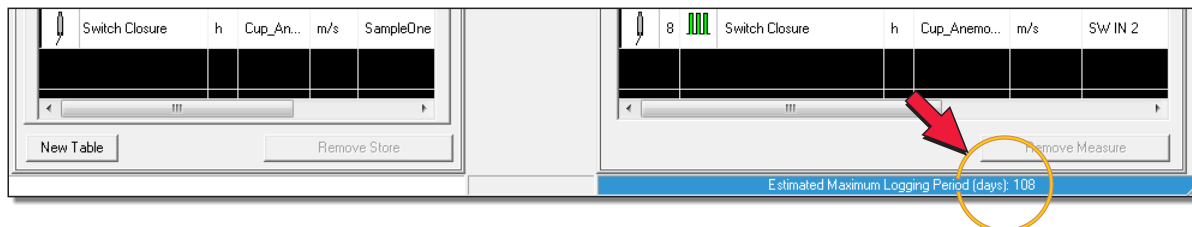

The internal memory is managed in a circular manner, when the memory is full, the new data will overwrite the oldest.

*Note:* you can extend the memory capacity and prevent loss of data using a removable SD type memory card (up to 2 GB). See chapter 10 on page 106 on how to use the card.

The following describes how to estimate in advance, before preparing the program, how much data can be stored in the internal memory and for how long, so to evaluate how many sensors to use in the system.

The data logger has an internal memory of 4 MB. Storing a single data, whether the value of a measurement or the date or time of storage, requires 4 bytes. It is therefore possible to store 1 MB of data. For a table containing N measurements, each store requires (N+2) data, namely the N measures plus the date and time of storage.

### **PROGRAM WITH ONE STORE TABLE**

If the program has only one table, the internal memory will fill up after a MEM number of recordings equal to:

$$MEM = \frac{1MB}{N + 2}$$

If T is the recording interval of the table, the memory will be filled after the time:

$$MEM \times T$$

#### **Example**

Suppose that the data logger program has only one table with 8 measures and recording interval of 30 seconds.

The number of recordings possible before you fill the internal memory is:

$$MEM = \frac{1MB}{8 + 2} \approx 100,000$$

The time required to fill the memory is  $\approx 100,000 \times 30$  seconds  $\approx 35$  days.

### **PROGRAM WITH TWO STORE TABLES**

If the program has two tables you need to consider the difference between the two recording intervals.

Let's say  $N_1, T_1$  and  $N_2, T_2$  are the number of measures and the recording interval of the first and second table respectively. The number of recordings MEM1 and MEM2 of the two tables needed to fill the memory is given by:

$$MEM_1 = \frac{1MB}{N_1 + 2 + \left[ \frac{T_1}{T_2} \times (N_2 + 2) \right]} \quad MEM_2 = \frac{1MB}{N_2 + 2 + \left[ \frac{T_2}{T_1} \times (N_1 + 2) \right]}$$

The memory will fill up after the time:  $MEM_1 \times T_1 = MEM_2 \times T_2$

#### **Example**

Suppose the data logger program has two store tables. The first with  $N_1=6$  measurements and interval  $T_1=1$  minute, the second with  $N_2=2$  measurements and interval  $T_2=2$  minutes.

The number of records to fill the internal memory is:

$$MEM_1 = \frac{1MB}{6 + 2 + \left[ \frac{1}{2} \times (2 + 2) \right]} \approx 100,000 \quad MEM_2 = \frac{1MB}{2 + 2 + \left[ \frac{2}{1} \times (6 + 2) \right]} \approx 50,000$$

The internal memory will contain  $MEM_1 + MEM_2 \approx 150,000$  records.

The time required to fill the memory is  $\approx 50,000 \times 2$  minutes  $\approx 70$  days.

### **PROGRAM WITH MULTIPLE STORE TABLES**

In general, if a program has **k** tables, before filling the memory, the **i-th** table will be recorded for a number of times equal to:


$$MEM_i = \frac{1MB}{\left[ \frac{T_i}{T_1} \times (N_1 + 2) \right] + \left[ \frac{T_i}{T_2} \times (N_2 + 2) \right] + \dots + \left[ \frac{T_i}{T_k} \times (N_k + 2) \right]} \quad \text{with } i=1,2,\dots,k$$

The time needed to fill the memory is:  $MEM_i \times T_i$  and the memory will contain a number of records equal to  $MEM_1 + MEM_2 + \dots + MEM_k$ .


## 9.4 SAVING THE PROGRAM IN THE PC

After you define the list of sensors (*MEASURE List*) and the *STORE Tables*, with its acquisition (*Scan Period*) and recording (*Store Period*) intervals, you must save to your PC the file of the program of measures and recordings, for subsequent installation in the data logger.


1. Press *Create* to save the program and generate the file needed by the data logger.

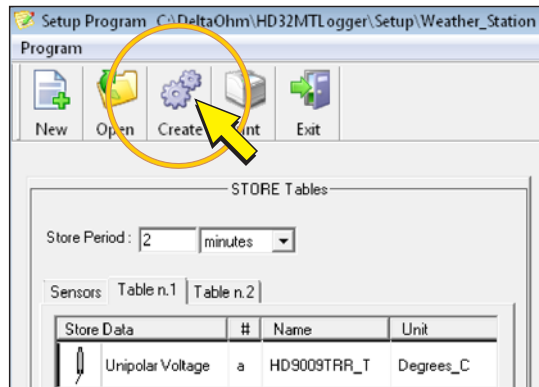

The window that allows you to specify the file name and path where to save it to your PC appears. After saving, a summary report is displayed, press *OK* to return to the program window.

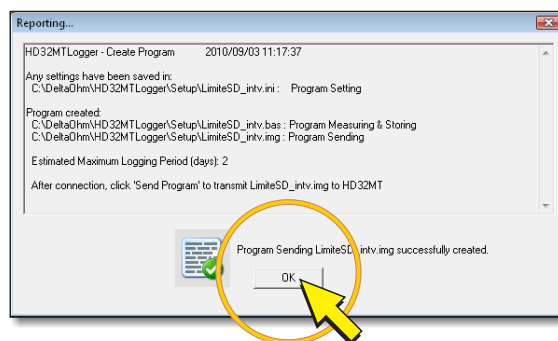


2. Verify that the time (in days) needed to fill the data logger internal memory, displayed in the lower right side of the program window is sufficient for your application.

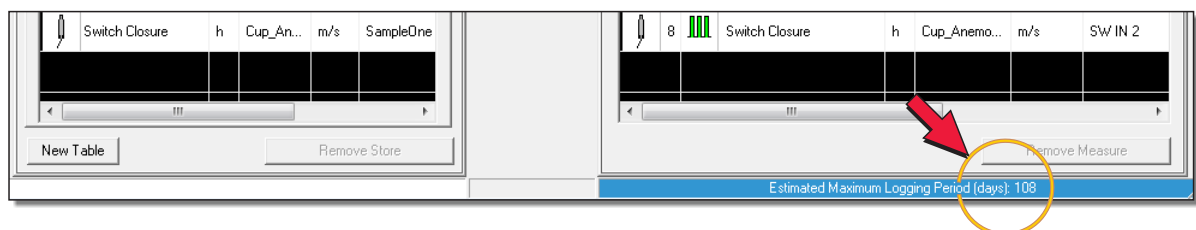




3. Select *Print* to print the wiring diagram and/or the store tables.

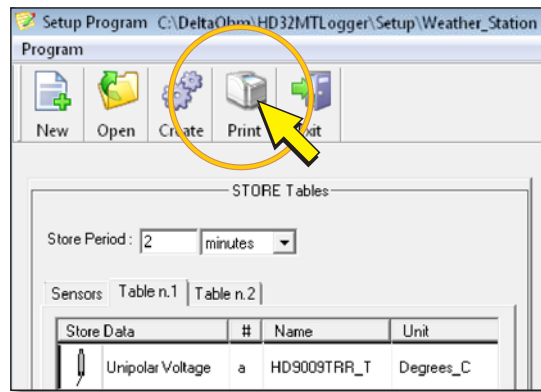

Then select *Print Wiring Diagram* to print the wiring diagram or *Print Tables Store* to print the store tables. Press *OK*.

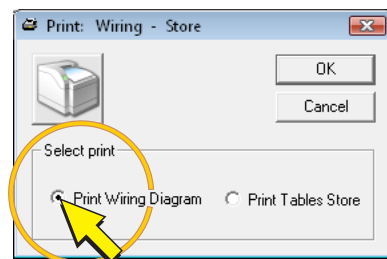

4. Press *Exit* to close the program window.

With the *Create* button, the program is saved in multiple versions with the same name but different extension. In particular, it generates a file with extension "*ini*" and a file with extension "*img*". The file with extension "*img*" contains the program in a format readable by the data logger, and is therefore the file to be installed later in the data logger. The file with extension "*ini*" contains the program in text format, and is the file that is opened by the HD32MTLogger software when you have to make changes to the program.

To save the program without generating the file to install in the data logger, for example because you have not yet completed it, select the *Exit* button directly instead of *Create*. The software will ask the name and location to save the file, and only the "*ini*" format will be saved.

If you want to change a previously saved program, before installing it in the data logger, select the *Program Setup* command in the main window of HD32MTLogger software, then choose *OPEN Program*, select the program previously saved (file with extension "*ini*" ) and press *Open*.

*Note:* If you select *Create* with blank store tables, a warning message appears: *No STORE Tables or empty Tables, confirm creating ?*. If you proceed, the file for the logger is created anyway, but the program will only make the measurements without saving them.

## 9.5 INSTALLING THE PROGRAM IN THE DATA LOGGER


To make the program operational you need to install it into the data logger.

**Warning: the installation of a program in the data logger erases all measurements recorded in the internal memory.** So as not to permanently lose the data recorded in the internal memory, you should transfer them to the PC using the "Dump LOG" command of the HD32MTLogger software, before beginning the program installation. The measurements stored in the removable SD memory card, if any, will remain recorded.


To install the program in the data logger, proceed as follows:

- 1 Power up the logger and connect it to your PC (directly, via radio modem or via local network) by following the instructions in chapter 6 on page 36.
- 2 If the datalogger is connected directly to a RS232 or USB port of the PC, or it is connected through a Radio Modem, select the *Serial Connection* item in the *Tools* menu to configure the connection.

If the datalogger is connected through a Local Area Network with TCP/IP protocol, select the *TCP/IP connection setup* item in the *Tools* menu to configure the connection.

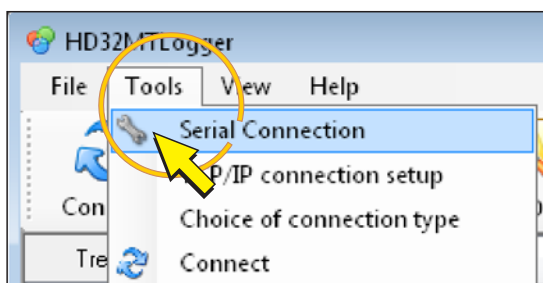

Direct or Radio Modem connection

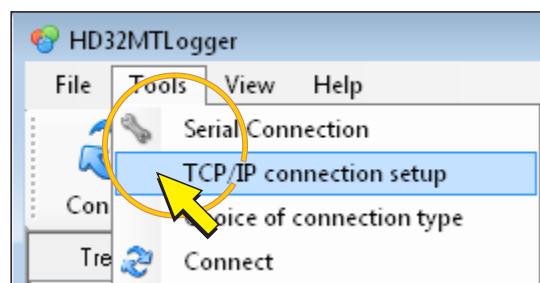


Local network connection

- 3 Configure the connection as follows:


### 3.1 Direct or Radio Modem connection configuration:

In the *Connection Properties* window, apply the check mark next to the *Radio Modem* entry for the model with Radio Modem option. For the base model, make sure the check mark is not present, possibly by clicking on the box next to the entry to deselect it.

Model with Radio Modem option

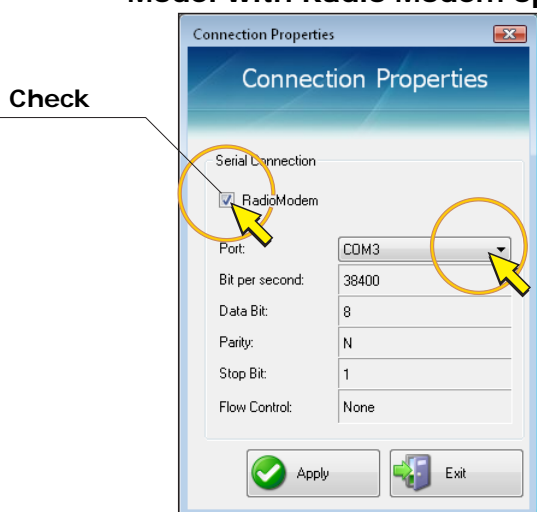

Basic model

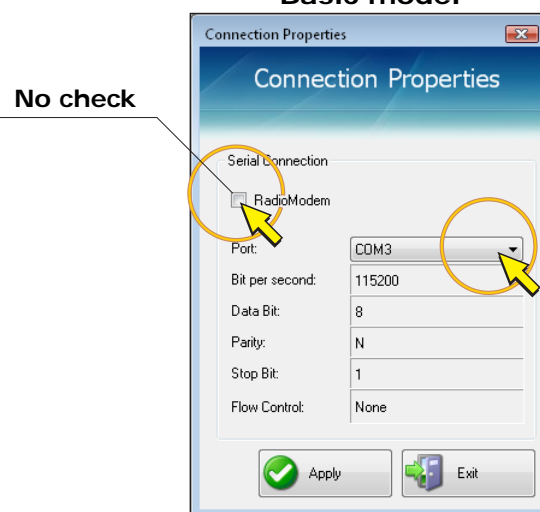

Select the COM port number of the PC which is connected to the instrument or radio modem, then click *Apply* to return to the main window.


If the COM port number is not known, leave the setting unchanged and press *Apply* to

exit, the program will automatically search for an instrument connected to the available ports on your PC, starting from the set one.

*Note:* the remaining communication parameters are fixed, the difference between the two models of data loggers is the data transfer rate (bits per second): 38400 for the model with radio modems and 115200 for the base model.


### 3.2 Configuration of network connection with TCP/IP protocol:

In the *TCP/IP connection setup* window, set the *IP address* and *Port* fields as required by the used RS232/Ethernet adapter (please see the adapter documentation).

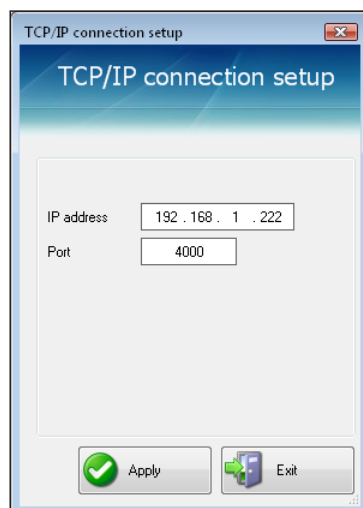


Press *Apply* to store the configuration. Press *Exit* to return to the main window.

- 4 Select the *Choice of instrument model and connection type* item in the *Tools* menu.

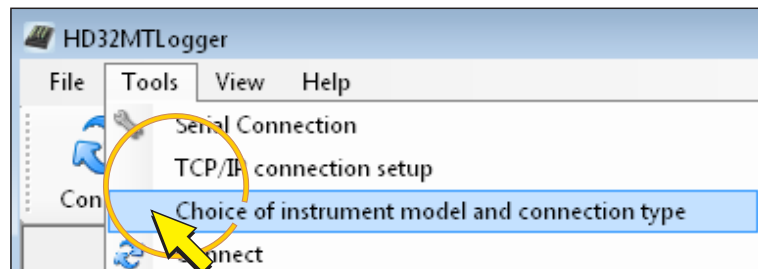


- 5 Select the model **HD32MT.1**. Select *Serial connection* if the datalogger is connected directly to a RS232 or USB port of the PC, or it is connected through a Radio Modem. Select *TCP/IP connection* if the datalogger is connected through a Local Area Network with TCP/IP protocol.

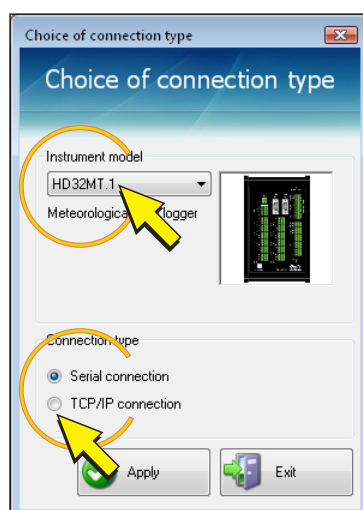

Press *Apply* to store the choice. Press *Exit* to return to the main window.

- 6 Press the *Connect* icon in the toolbar.

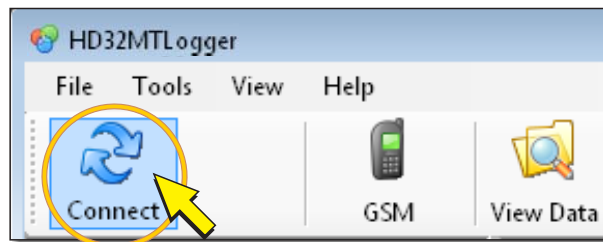

- 7 If the connection is successfully established, the software reads the data logger program installed and then displays the *DataLogger Information*, which are listed in the order: data logger model, serial number, firmware version, the name of the program installed in the data logger, the measurements acquisition interval (*Scan period*) and the number of store tables (*STORE Tables*).



Press *OK* to return to the software main window.

*Note:* if you attempt a connection while the logger is recording data in the SD memory card, you receive a warning message (*SD Card Running*). In this case, wait a few minutes and try to press the *Connect* icon again.

*Note:* if the logger has no program installed, the message *Absent* or *UnHook!* appears when connecting, to remember the need to install a program. Ignore it and continue with the installation.

If you experience connection errors, follow the instructions of paragraph 9.5.1 on page 105.


- 8 Select the *Send Program* icon.



- 9 In the window that opens, select the name of the previously saved program (with extension *"img"*) and press *Open*.

A message appears to remind you that the stored data will be lost. Press *Yes* to continue.


- 10 Wait until the program is installed in the data logger (a progress bar indicates the installation status).

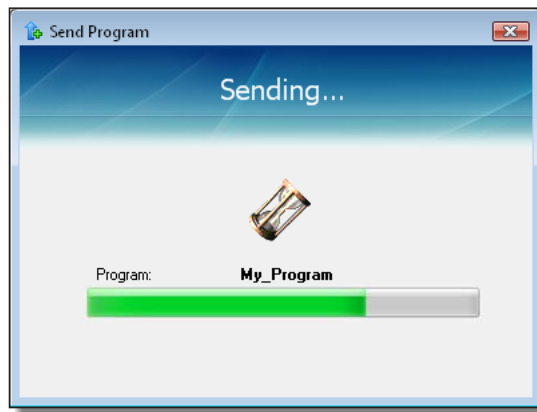

If the installation is completed successfully, the *DataLogger Information* window is displayed again. Click *OK* to exit. The program installed starts automatically to operate in the data logger, acquiring and storing the programmed measurements.

*Note:* the program already existing in the data logger is cleared at the beginning of the installation of the new program. If error messages appear during installation and the installation process is interrupted, the data logger is left without a working program. In this case you must repeat the installation procedure.

- 11 To end the communication session between the PC and data logger, select the *Disconnect* icon.

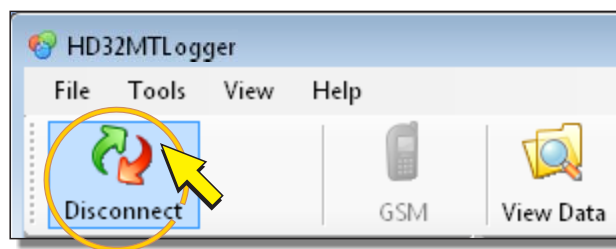

### 9.5.1 ERROR MESSAGES DURING CONNECTION

If the connection fails, the message *HD32MT Not Found!* appears. In this case, check the following points:

- In the connection properties, check that the correct data logger model was set (option with or without Radio Modem) and that the COM port to which the data logger is connected is selected.
- Check the PC connections are correct according to the instructions in chapter 6 on page 36.
- To connect via radio modem, check that the antennas are not positioned too far away from each other and that there are no obstacles that can limit the transmission equipments range.

If the connection is successfully established initially, but then of interruption occurs, the following messages may appear:

- *TIMEOUT CMD OVER 7 Attempts!* (Command times out after 7 attempts)
- *No Answer after CMD!* (No response after the command)
- *ERROR: communication at ... block* (Communication error at the block....)
- *HD32MT Not Connected or Program Error!*

In these cases retry the connection, possibly checking the status of the electrical connections.


## 10 MEMORY CARD

The data logger is equipped with a reader for removable SD memory card, located at the top of the instrument (point 12 of the figure on page 8).

You can use memory cards up to a capacity of 2 GB.

The use of a memory card allows you to greatly increase the capacity of the data logger to store data, avoiding a possible loss of data due to the filling of internal memory.

To use a memory card it is sufficient to insert it the appropriate slot (push the card until a click is heard, which guarantees the correct insertion). The logger automatically detects the presence of the card and will use it to store measurements.

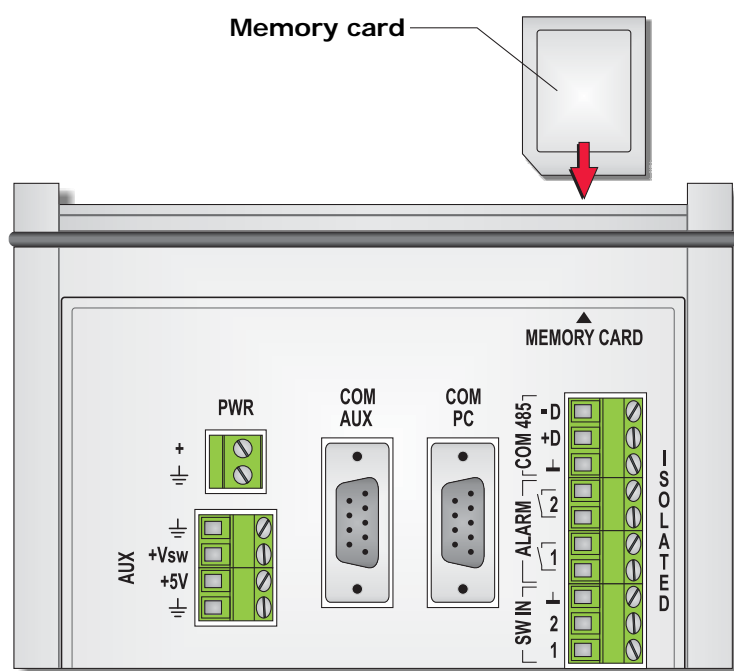

When a card is inserted, the data logger verifies that it is writeable. During verification, the LED next to the card turns red. Make sure that after a few seconds from the card insertion the LED turns green. If the LED does not become green after inserting the card, but emits red flashes, verify the correct insertion of the card and replace it if necessary.

Unlike the internal memory in which data are written at each recording interval, data in the memory card are written once every hour (the writing begins exactly on the hour: at 1:00, 2:00, etc..). The memory card will then contain hourly files, each of which contains all the measurements stored by the data logger in one hour (or more hours if you have set the file appending option for GSM transmission, see the HD32MTLogger software instructions for the appending functionality).

Since the internal memory fills up normally in a period greater than one hour, the hourly transfer of the measures in the memory card allows to store data in an almost permanent way (at least until the memory card capacity is reached).

The measures contained in different store tables are saved in separate files. Each hour as many files as the number of store tables in the data logger program are created. The file names are formed by the table number to which they refer followed by a sequential number.

When writing files on the memory card, the LED located next to the card turns red, indicating that the write operation is in progress. Do not remove the memory card when the LED is red, to avoid damage to the contents of the card. The card can be removed when the LED is green.

*Note:* if the memory card is not inserted, the LED will emit five red flashes every hour, indicating the absence of the card.

The files on the card can be transferred to a PC equipped with an SD memory card reader. To transfer files, remove the card from its slot (push the card firmly until you hear a click and then release it), and insert it into your PC.

The HD32MTLogger software has a special feature called *Merge Files*, which lets you combine multiple files related to the same store table into one file. To use this function, please refer to the software manual.

*Note:* when writing in the card, the logger can not connect to the PC. If you try to connect while writing, you will receive the *SD Card RUNNING* message. In this case, wait for the write process to be completed before retrying the connection.

If the data logger is equipped with a GSM module, the use of the memory card is required to transmit data via the GSM device, since the data transmitted are those that are stored in the card.

## 11 LED SIGNALS


The LED next to the SD memory card provides various signals to indicate the status of the data logger or any abnormalities that may occur. The following table summarizes the meaning of the signals.

LED Signal	Meaning
ON red fixed	Writing in the memory card in progress
2 s ON red / 2 s OFF	Detected hardware problems at startup
1 s ON red / 1 s OFF	Detected problems in the operation program loaded
1 quick red blink once per second, OFF the rest of the time	Low consumption mode due to supply voltage drops below 11.7V
5 blinks 1 s ON red/ 1 s ON green	The SD memory card is not inserted. The flashes are emitted at startup or when trying to access the card.
10 blinks 0.5 s ON red / 0.5 s ON green	The SD memory card is inserted but it was not possible to access it at the time of writing
1 quick red blink on startup and then green fixed	Data logger basic model detected
1 long red blink of 5 s on startup and then green fixed	Data logger model with Radio Modem option detected
10 quick double red blinks on startup	Waiting time for stabilization of the +Vsw supply output
20 quick double red blinks	Exit low power mode and return to normal operation


## 12 HOUSING OPENING ALARM

The outdoor housing for the data acquisition system can be supplied with an **optional** sensor (**HD32MT.ALM**) able to detect the opening of the door of the housing and provide an alarm signal.

The sensor is connected to one of the data logger digital inputs (see point **6** of the terminal board figure on page 8 for the digital inputs location).

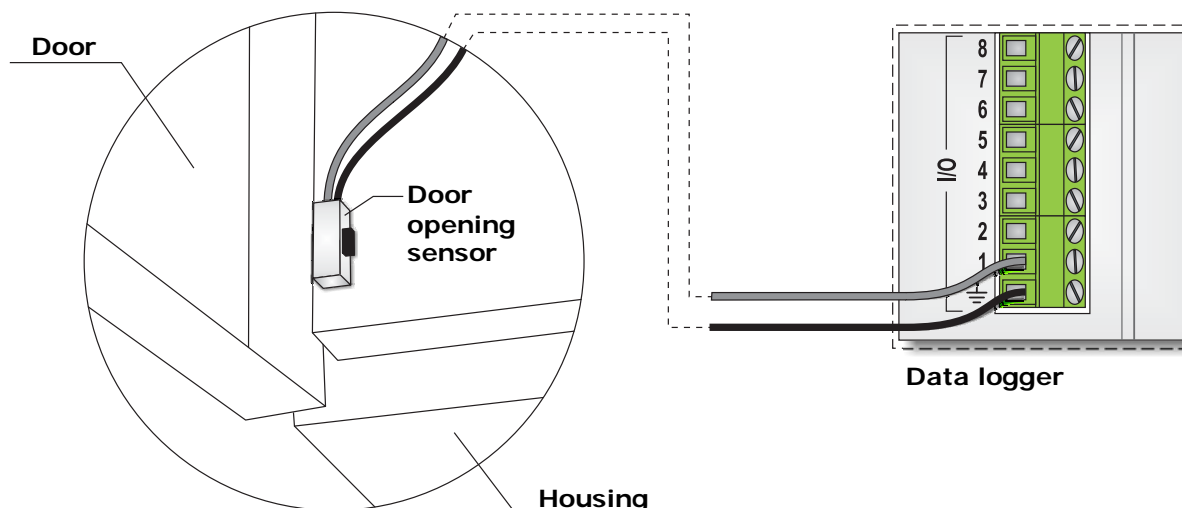

The principle of operation of the sensor is shown below:

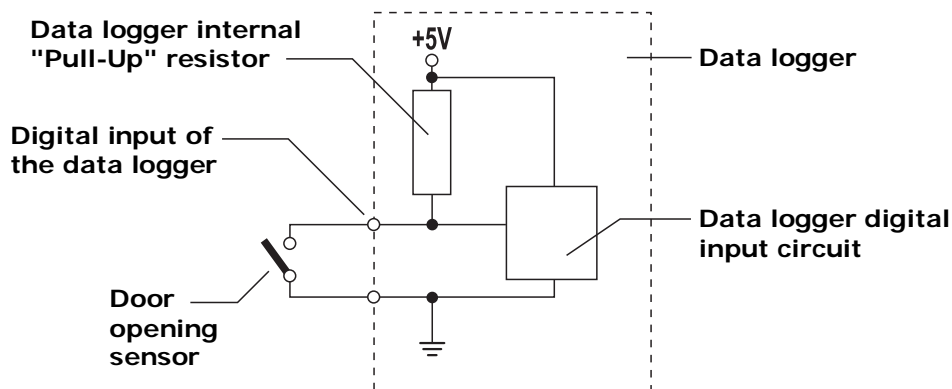

The digital input of the data logger detects the status of the sensor contact. If the input of the logger is in the logic state 0 (closed contact) means that the door is closed. When the housing door is opened, the input of the data logger goes to logic state 1 (open contact).

To record in the data logger memory the opening/closing state of the housing door, the sensor must be included into a store table of the data logger program of measures and recordings (see paragraphs 9.2.7 "Digital Input Configuration" and 9.3 "Creating the store tables").

To be able to signal the alarm (also via SMS, if the system has the GSM module), the sensor must be inserted in the alarms table (see paragraph 9.3.1 "Alarms Table").

In case of delivery of a system with door opening sensor and data logger with preinstalled program, the data logger is already configured for the operation of the sensor.



## 13 DISPLAY


It is possible to connect an **optional** LCD display to the data logger, to check the values acquired by the data logger without having to connect your PC.

The display is available in the basic version (**HD32.D**), or with the GPS option (**HD32.D.GPS**) to automatically update the clock of the data logger.

The displays **HD32.D** and **HD32.D.GPS** are designed for being fixed to the outdoor housings HD32.35, HD32.35FP, HD32.36 and HD32.36FP.

The supply voltage required by the display is 8...30 Vdc.

The display connects to the data logger **COM PC** RS232 serial port via the cable with 9-pin female SubD connector.

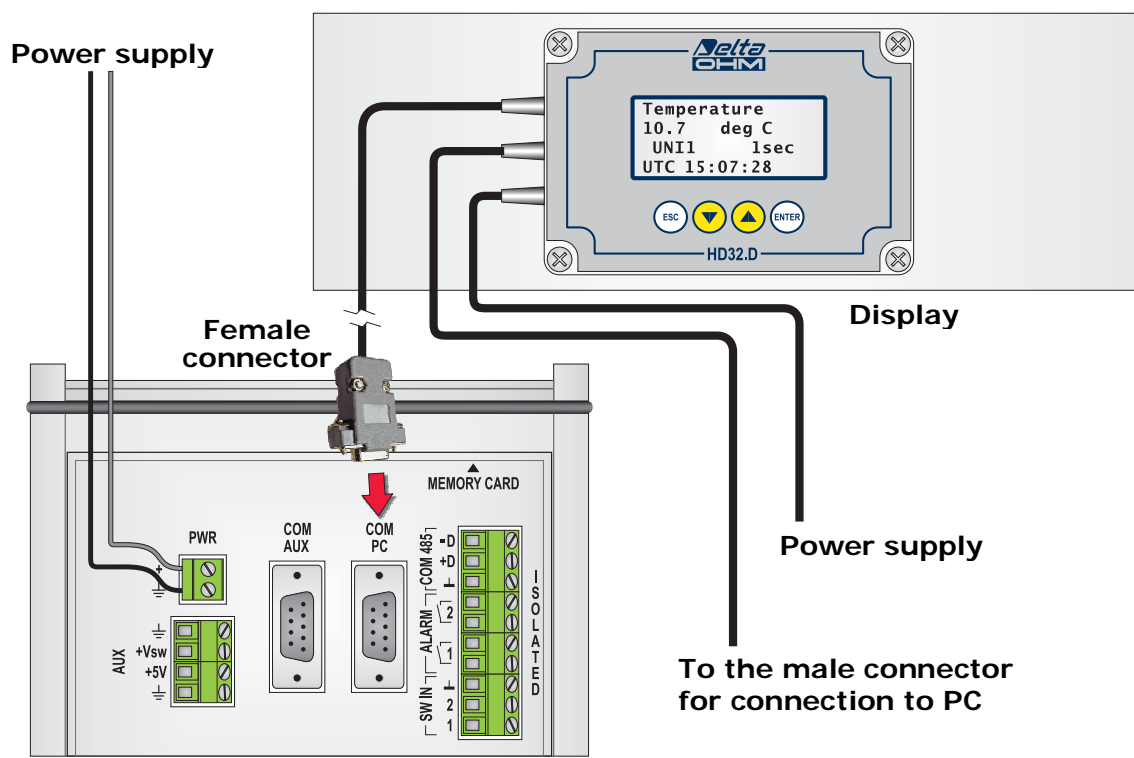

Once connected and powered, the display shows the startup screen for selecting the Baud Rate. Using the arrow keys, select:

- **115200** for the basic data logger model;
- **38400** for the data logger model with Radio Modem option.

**CONNECT @ BAUD**  
**115200**  
**ENTER = accept**  
**UP/DOWN = change**



Press the ENTER key.

**CONNECT @ BAUD  
115200  
ENTER = accept  
UP/DOWN = change**



*Note:* If during the visualization of the startup screen for setting the baud rate no keys are pressed for 30 seconds, the display will automatically connect to the data logger (as if the ENTER key was pressed).

After a few moments, needed by the display to read the general information of the data logger, the values acquired by the data logger will be shown.

**Temperature  
10.7 deg C  
UNI1 1sec  
UTC 15:07:28**

For each measurement is displayed:

- the name of the parameter measured;
- the value of the measure and the unit of measurement;
- the data logger input the sensor is connected to (see terminal board on page 8);
- the acquisition interval (*Scan Period*);
- the current UTC time in the data logger.

The various measures automatically follow one another on the display. To stop automatic scrolling, press an arrow key. The measures can be scrolled manually using the arrow keys. To reactivate the automatic scrolling, press the ENTER key.

If instead of the measured value, the message "WAITING MEASURE" appears, it means that the display is waiting for the next instant of acquisition in order to display the updated measuring values.

The appearance of the indication "DATA OBSOLETE" instead of UTC indicates that the displayed value is not the current value but the value acquired in a previous instant (the information assumes significance especially if the acquisition interval is long).

The display is backlit. The backlight turns off if no keys are pressed for 1 minute. To reactivate, simply press any key.

### 13.1 DISPLAY FUNCTIONS

The display has the following functions:

- Connection at 115200 baud
- Connection at 38400 baud
- Time Zone setting
- Display switch off
- Display reset
- Display of measured data
- Time synchronization

To access the list of the available functions, press the ESC key during the display of the measured values.

**Temperature**  
**10.7 deg C**  
**UNI1 1sec**  
**UTC 15:07:28**



Use the arrow keys to select the desired function.

**CONNECT @ BAUD**  
**115200**  
**ENTER = accept**  
**UP/DOWN = change**



Then press the ENTER key to activate the selected function.

The details of the various functions are as follows.

➤ **CONNECTION AT 115200 BAUD**

**CONNECT @ BAUD**  
**115200**  
**ENTER = accept**  
**UP/DOWN = change**

The "CONNECT @ BAUD 115200" allows you to repeat the reading of the information of the basic model of the data logger. It is a "service" function for the technical service.

➤ **CONNECTION AT 38400 BAUD**

**CONNECT @ BAUD**  
**38400**  
**ENTER = accept**  
**UP/DOWN = change**

The "CONNECT @ BAUD 38400" allows to repeat the reading of the information of the data logger model with Radio Modem option. It is a "service" function for the technical service.

➤ **TIME ZONE SETTING**

**SELECT UTC OFFS**

**ENTER = accept**  
**UP/DOWN = change**

The "SELECT UTC OFFS" allows you to change the time zone set in the data logger. Press ENTER to activate the function, the currently set time zone of the data logger is displayed.

**SELECT UTC OFFS**

**+01.00**

**ENTER = accept**  
**UP/DOWN = change**

Make sure that the set time zone corresponds to the place of installation of the data logger. If necessary, change the time zone with the arrow keys and press ENTER to confirm.

➤ **DISPLAY SWITCH OFF**

**SYSTEM SHUTDOWN?**

**ENTER = accept**  
**UP/DOWN = change**

The "SYSTEM SHUTDOWN" function turns off the display. The feature is especially useful in systems that are not powered from the mains, where it is important to limit the energy consumption of the system. To switch on the display press ENTER.

➤ **DISPLAY RESET**

**SYSTEM RESET?(!)**

**ENTER = accept**  
**UP/DOWN = change**

The "SYSTEM RESET" function resets the display. After reset, the display starts from the startup screen for the selection of the Baud Rate.

➤ **DISPLAY OF MEASURED DATA**

**GO DATA DISPLAY**  
**AT SELECTED BAUD**

**ENTER = accept**  
**UP/DOWN = change**

The function "GO DATA DISPLAY AT SELECTED BAUD" allows to return to the display of measuring values acquired by the data logger.

## ➤ TIME SYNCHRONIZATION

**GO GPS SYNC**

**ENTER = accept**  
**UP/DOWN = change**

If the display is equipped with the GPS option (**HD32.35D.GPS** and **HD23.36.GPS**), the data logger clock is synchronized every day automatically using the information received from the GPS system.

The "GO GPS SYNC" function allows you to manually start the clock synchronization, without waiting for the automatic synchronization. Press the ENTER key, then wait for the synchronization to be completed.

### 13.2 PC-DATA LOGGER CONNECTION IN PRESENCE OF THE DISPLAY

To connect the PC to the data logger is not necessary to disconnect the display from the **COM PC** serial port to connect your PC. Simply connect the PC to the second serial port of the display (cable with 9-pin male SubD connector), provided for connection to PC via "null modem" cable **9CPRS232** (for RS232) or **C205** cable (for USB connection).

When the PC starts a communication session, the display acts as a "bridge" between PC and data logger. **During communication, instead of the measured values appears the message:**

**BYPASS MODE  
ACTIVATED**

The display remains in this state until the end of the communication session between the PC and data logger. Once the communication session is concluded, after a few seconds the display returns to normal operation.

The PC-logger connection through the display is only possible if the display is turned on (no need to press ENTER to activate the connection).

## 14 LITHIUM BATTERY REPLACEMENT


The data logger has an internal lithium battery that allows operation of the clock of the instrument even without external power.

When the data logger is powered externally, the internal battery is not used, in order to preserve the charge and prolong its life.


If the internal battery is discharged, the logger clock continues to operate normally until the external power supply is present, if that fails, the current date and time are lost and need to be reprogrammed.

Should it be necessary to replace the internal battery, proceed as follows:

1. Disconnect the external power supply of the data logger.
2. Unscrew the four screws that secure the two side covers of the housing, then remove the two lids.

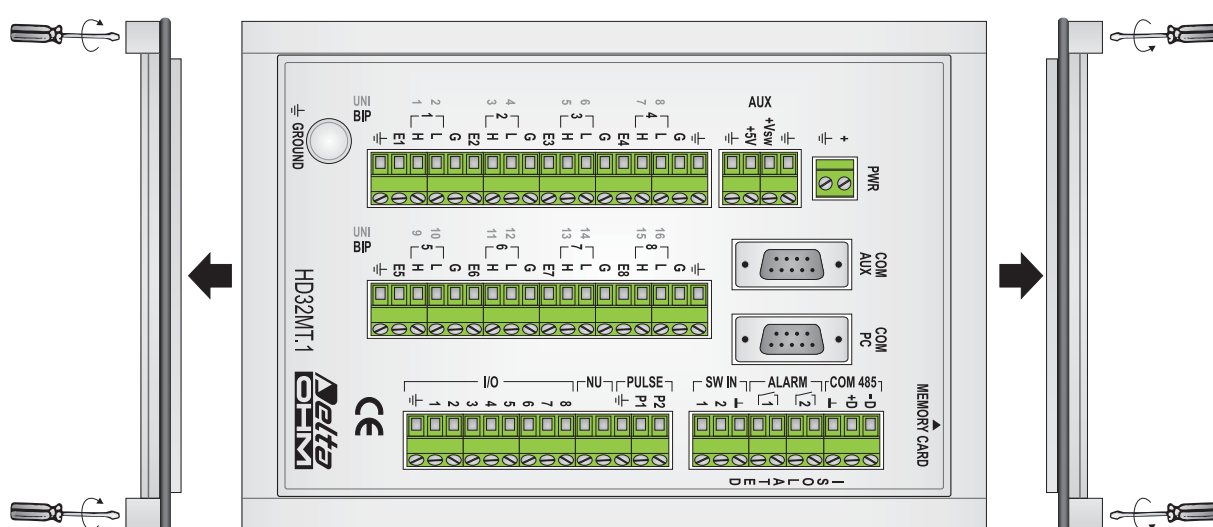


3. The battery is located on the underside of the board, on the side of the ground knob. Push the circuit board to the bottom of the housing, pushing close to the two connectors on the sides, so as to remove the card from the top panel.

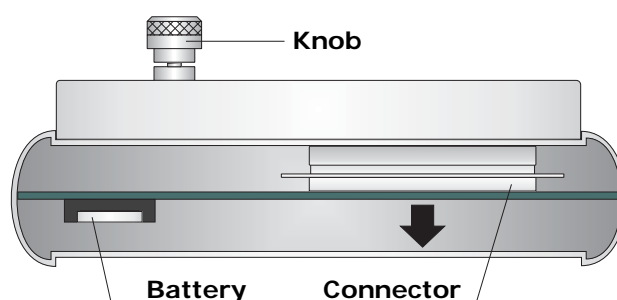

4. Pull the board out and replace the battery with another of the same type (**CR2032**), observing the correct polarity (the positive of the battery is facing out of the battery holder).
5. Reinsert the board and connect it to the top panel, making sure that both connectors are correctly aligned. Replace the two side covers and secure with the four screws.

## 15 MOUNTING THE DATA LOGGER

The data logger can be attached to a panel by means of two rear supports. The figure below shows the size in mm for fixing.

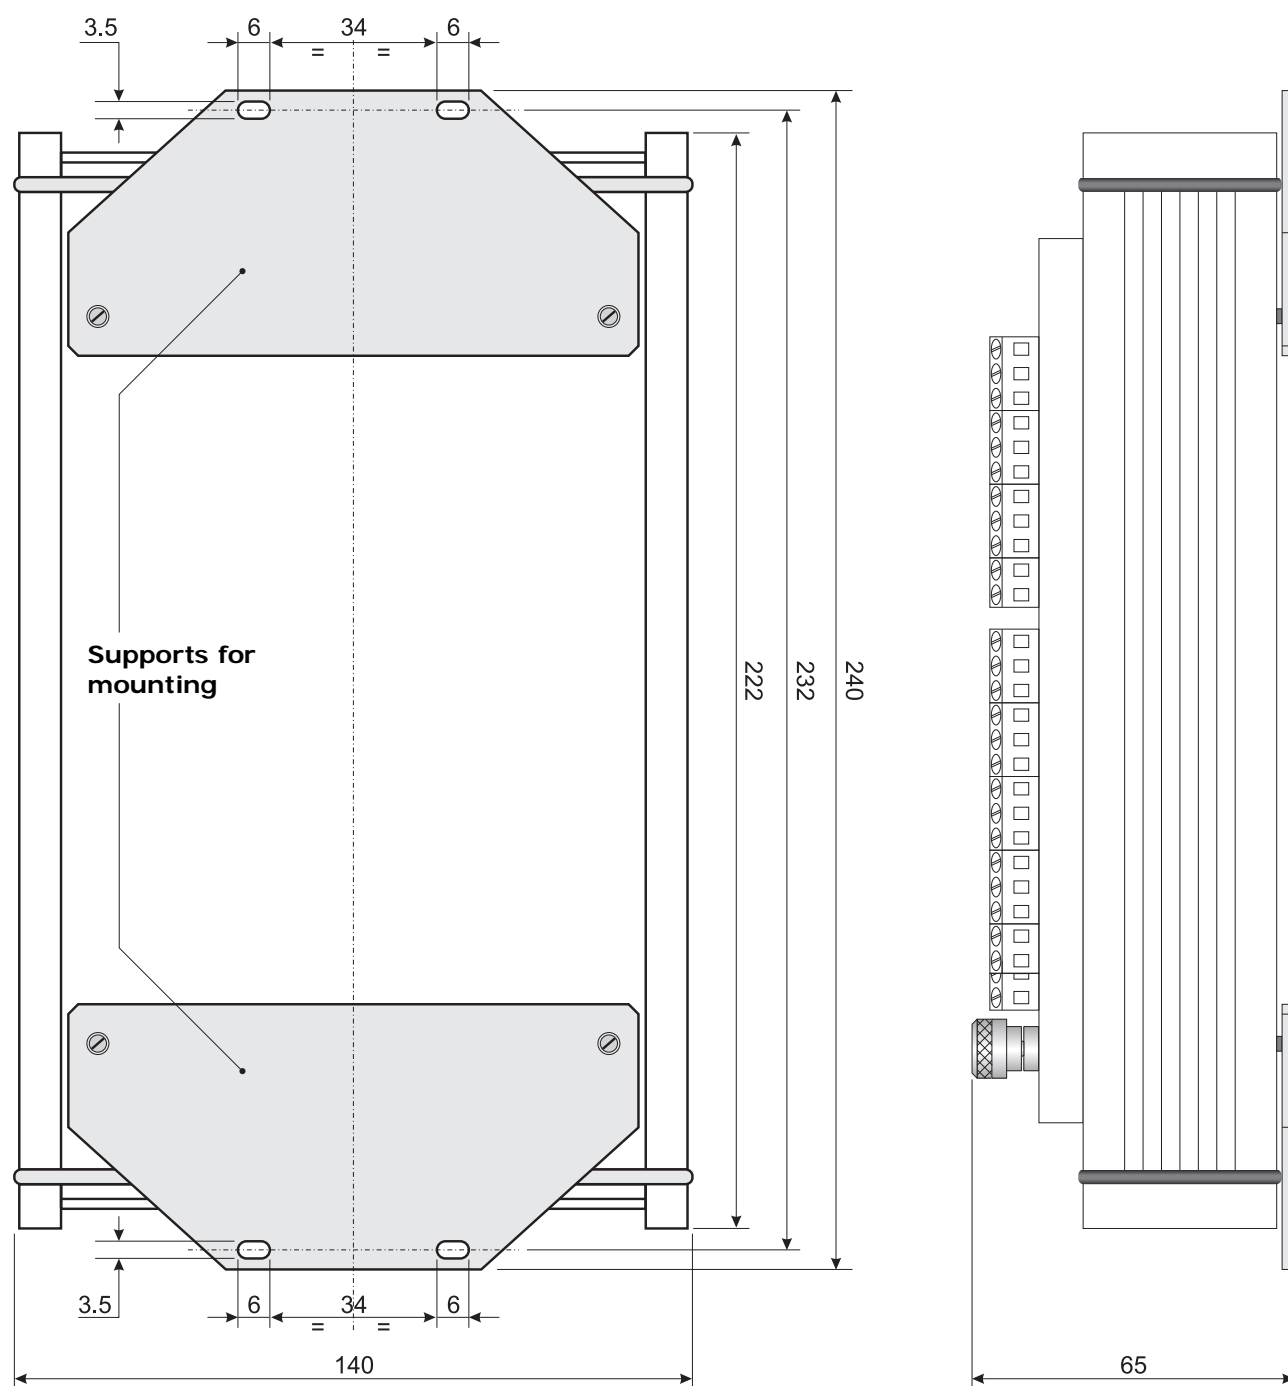

## 16 INSTRUMENT STORAGE

Instrument storage conditions:

- Temperature: -25...+65 °C.
- Humidity: less than 90% RH, without condensation.
- During storage avoid locations where:
  - humidity is high;
  - the instrument may be exposed to direct sunlight;
  - the instrument may be exposed to a high temperature source;
  - the instrument may be exposed to strong vibrations;
  - the instrument may be exposed to steam, salt or any corrosive gas.

## 17 SAFETY INSTRUCTIONS

### General safety instructions

This instrument has been manufactured and tested in compliance with safety standards EN61010-1 relating to electronic measuring instruments and left the factory in perfect technical condition of safety.

The regular functioning and operational safety of the instrument can only be guaranteed if all normal safety measures are observed as well as those specific described in this operating manual.

The regular functioning and operational safety of the instrument can only be guaranteed under the climatic conditions specified in the manual.

Do not use the instrument in places where they are present:

Quick environment temperature changes that could cause condensation.

Corrosive or inflammable gases.

Direct vibrations or shocks.

High intensity electromagnetic fields or static electricity.

If the instrument was transported from a cold to a warm place or vice versa, the formation of condensation can disturb its operation. In this case wait for the temperature of the instrument to reach room temperature before putting it into service.

### User obligations

The instrument user must ensure that the following standards and guidelines for treatment of hazardous materials are followed:

CEE directives on job safety

National laws on job safety

Accident prevention regulations



## 18 ORDER CODES

- HD32MT.1** Data logger supplied with: **HD32MTLogger** software for programming, data downloading, monitoring and data processing on a PC, operating manual.  
**The probes, the cables, the GSM module and the display must be ordered separately.**  
**The radio modem option should be requested at time of ordering, the radio modem modules with the antennas must be ordered separately.**

### ACCESSORIES

- HD32MTLogger** Further copy of CD-ROM with software HD32MTLogger for programming, data download, monitor and PC data management. For Windows® operating systems.
- 9CPRS232** Null modem cable with 9-pin Sub-D female connector on both sides for connection to the PC RS232C. Cable length 2 m.
- C205** Connection cable with USB connector on PC side and sub-D 9-pole female connector on instrument side. The cable has a built-in RS232/USB converter and connects the data logger directly to the USB port of the PC.
- C205M** Connection cable with USB connector on PC side and sub-D 9-pole male connector on Radio Modem side. The cable has a built-in RS232/USB converter and connects the Radio Modem directly to the USB port of the PC.
- HD32.35** Outdoor housing complete with acquisition system for weather stations.  
**Material: AISI 304 stainless steel.** Screen to protect the housing from solar radiation. Powder-coated white. Double locking one of which is a key. Dimensions 450 x 300 x 210 mm. Degree of protection IP66. Supplied with accessories for attachment to the pole diameter 36 ÷ 52 mm. **Provided for 100 ÷ 240Vac mains power supply**, includes: HD32MT.1 data logger, AC/DC power supply unit with integrated battery charger, 12V rechargeable backup battery, surge protectors, disconnectors, terminal block for power supply distribution and connectors for connecting the external sensors. **Wired and tested.**
- HD32.35FP** Outdoor housing complete with acquisition system for weather stations.  
**Material: AISI 304 stainless steel.** Screen to protect the housing from solar radiation. Powder-coated white. Double locking one of which is a key. Dimensions 450 x 300 x 210 mm. Degree of protection IP66. Supplied with accessories for attachment to the pole diameter 36 ÷ 52 mm. **Provided for power supply from solar panel**, includes: HD32MT.1 data logger, solar charge controller, terminal block for power supply distribution and connectors for connecting the external sensors. **Wired and tested.**
- HD32.36** Outdoor housing complete with acquisition system for weather stations.  
**Material: Polyester with fiberglass-reinforced hot-pressed.** Screen to protect the housing from solar radiation, powder-coated anodized aluminum. White. Key lock. Dimensions 415 x 310 x 170 mm. Degree of protection IP66. Supplied with accessories for attachment to the stainless steel pole diameter 36 ÷ 52 mm. **Provided for 100 ÷ 240Vac mains power supply**, includes: HD32MT.1 data logger, AC/DC power supply unit with integrated battery charger, 12V rechargeable backup battery, surge protectors, disconnectors, terminal block for power supply distribution and connectors for connecting the external sensors. **Wired and tested.**

**HD32.36FP**

Outdoor housing complete with acquisition system for weather stations. **Material: Polyester with fiberglass-reinforced hot-pressed.** Screen to protect the housing from solar radiation, powder-coated anodized aluminum. White. Key lock. Dimensions 415 x 310 x 170 mm. Degree of protection IP66. Supplied with accessories for attachment to the stainless steel pole diameter 36 ÷ 52 mm. **Provided for power supply from solar panel**, includes: HD32MT.1 data logger, solar charge controller, terminal block for power supply distribution and connectors for connecting the external sensors. **Wired and tested.**

**HD32.D**

LCD viewer designed for being fixed on outdoor housings HD32.35, HD32.35FP, HD32.36 and HD32.36FP.

**HD32.D.GPS**


LCD viewer designed for being fixed on outdoor housings HD32.35, HD32.35FP, HD32.36 and HD32.36FP. With GPS module for automatical time synchronization of the data logger.

**HD32MT.ALM**


Sensor that signals the opening of the housing door.

**TP32MT.1P.I**


4-wire 1/3 DIN Pt100 temperature probe, Ø 4 mm, L=150 mm, pointed, 5 m cable, isolated sensor. Temperature range -40...+100 °C.

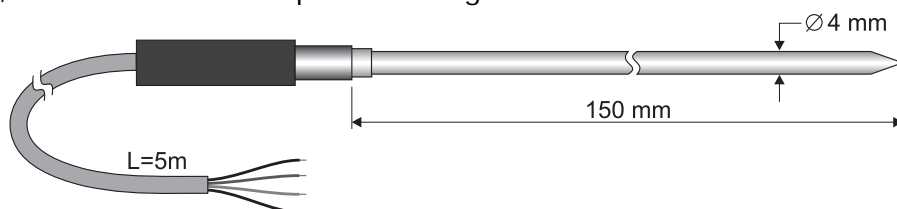**TP32MT.2.I**


4-wire 1/3 DIN Pt100 temperature probe, Ø 6 mm, L=150 mm, 5 m cable, isolated sensor. Temperature range -40...+100 °C.

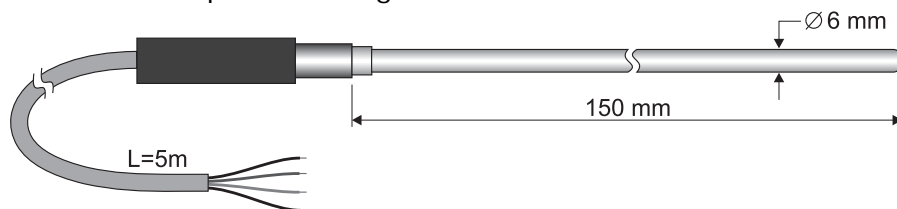**TP32MT.11P**


T type thermocouple temperature probe, Ø 4 mm, L=150 mm, pointed, 5 m cable, isolated. Temperature range -40...+100 °C.

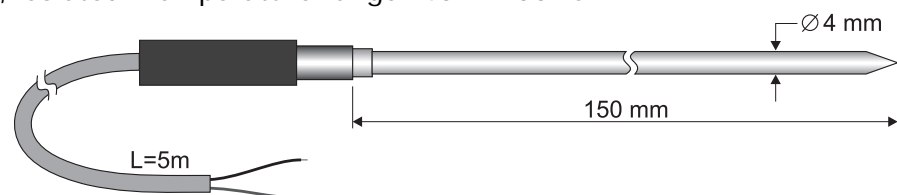**TP32MT.12**

T type thermocouple temperature probe, Ø 4 mm, L=300 mm, 5 m cable, isolated. Temperature range -40...+100 °C.

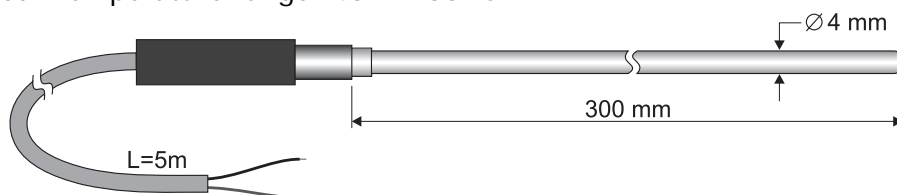

**TP878.1SS.O** Temperature contact probe for solar panels, 4-wire Pt100. Cable 5 m. Temperature range +4...+85 °C.

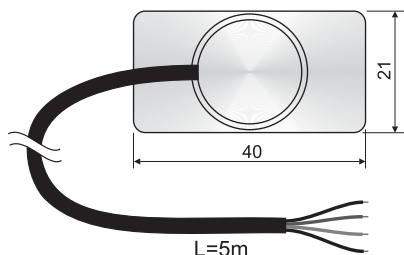

**HD4V8T Baro** Barometric transmitter with 0...1 Vdc output. Working range 600...1100 mbar. Power supply 10...40 Vdc. Temperature working range -30...+60 °C. Installation inside the outdoor housing HD32.35, HD32.35FP, HD32.36 and HD32.36FP.

**HD53GSM** Quad-band wireless GSM/GPRS module, including whip antenna and RS232 serial port.

**HDRMO169** VHF radio modem module pair, frequency 169 MHz, including whip antenna and RS232 serial port. Already configured for connection to the logger and the PC (the two modules are not interchangeable). The modules only work with the version of the data logger with radio modem option.

**HD2004.20** Tripod kit for installing anemometers on a flat base. Material: anodized aluminum. Height 3 m.

**HD2004.22** 1200 x 530 x 34 mm solar panel mounting kit to a Ø 40÷50 mm mast. AISI 304 stainless steel.


**HD2004.30** 80W monocrystalline solar panel. Dimensions 1200 x 530 x 34 mm.

For the full range of Delta Ohm sensors and probes, please visit website [www.deltaohm.com](http://www.deltaohm.com).


DELTA OHM metrology laboratories LAT N° 124 are accredited by ACCREDIA for Temperature, Humidity, Pressure, Photometry / Radiometry, Acoustics and Air Velocity. They can supply calibration certificates for the accredited quantities.

## 19 ELEMENTS FOR WEATHER STATION

### WEATHER STATION WITH TRIPOD AND MAINS POWER SUPPLY

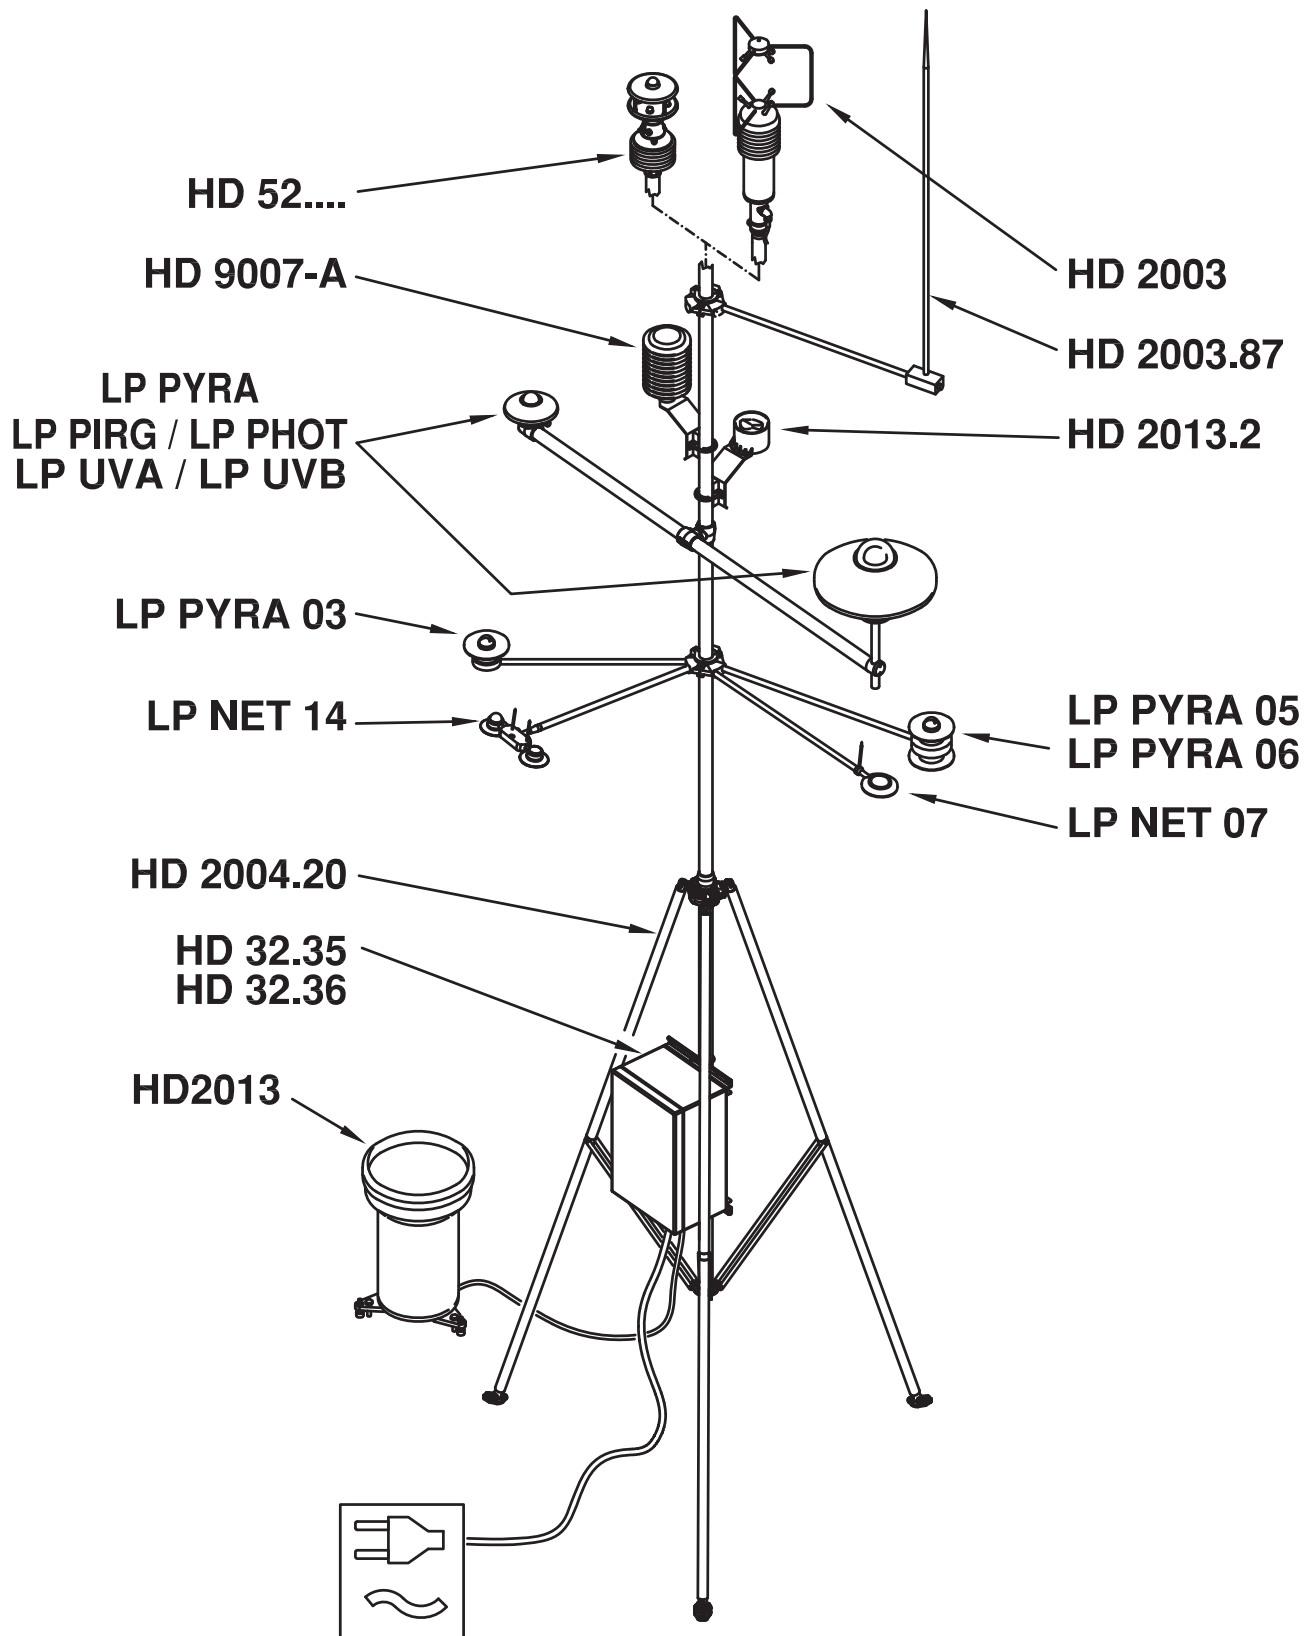


# WEATHER STATION WITH TRIPOD AND POWER SUPPLY FROM SOLAR PANEL




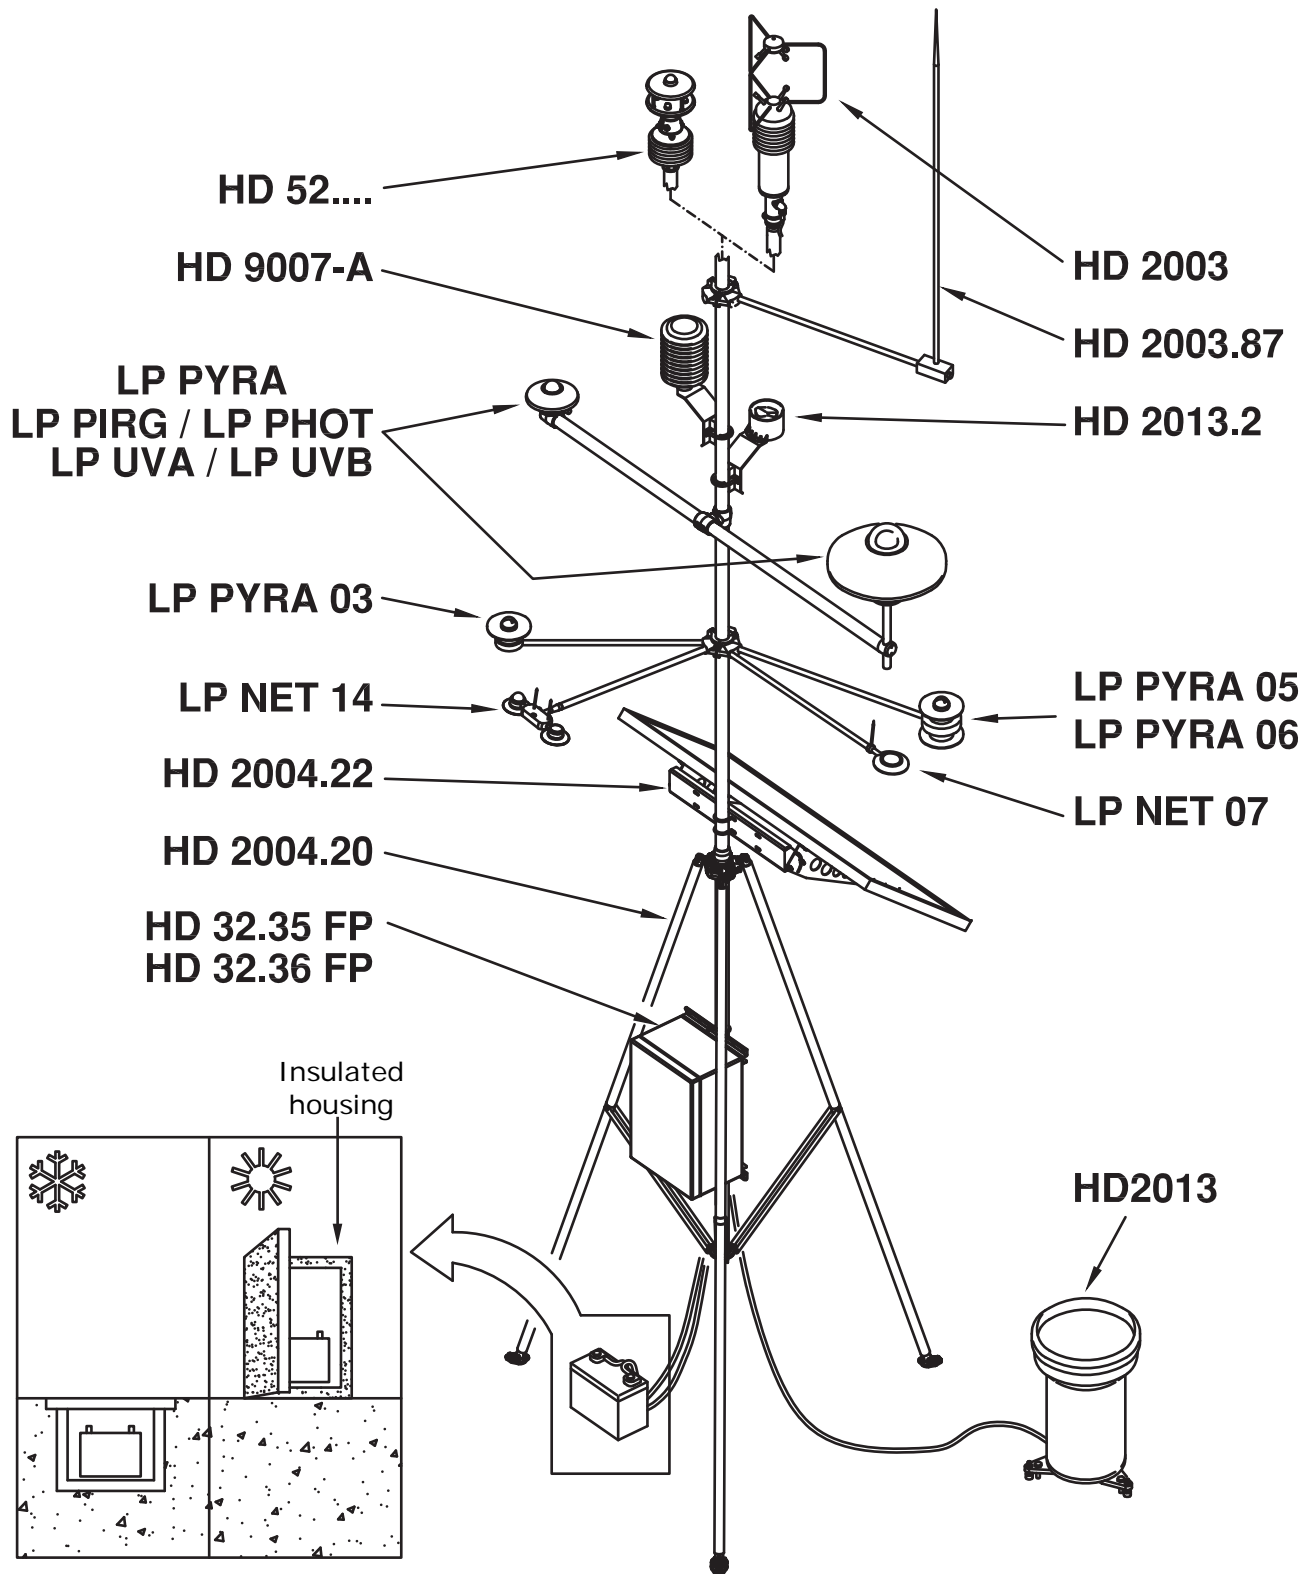




# WEATHER STATION FIXED TO GROUND AND POWER SUPPLY FROM SOLAR PANEL

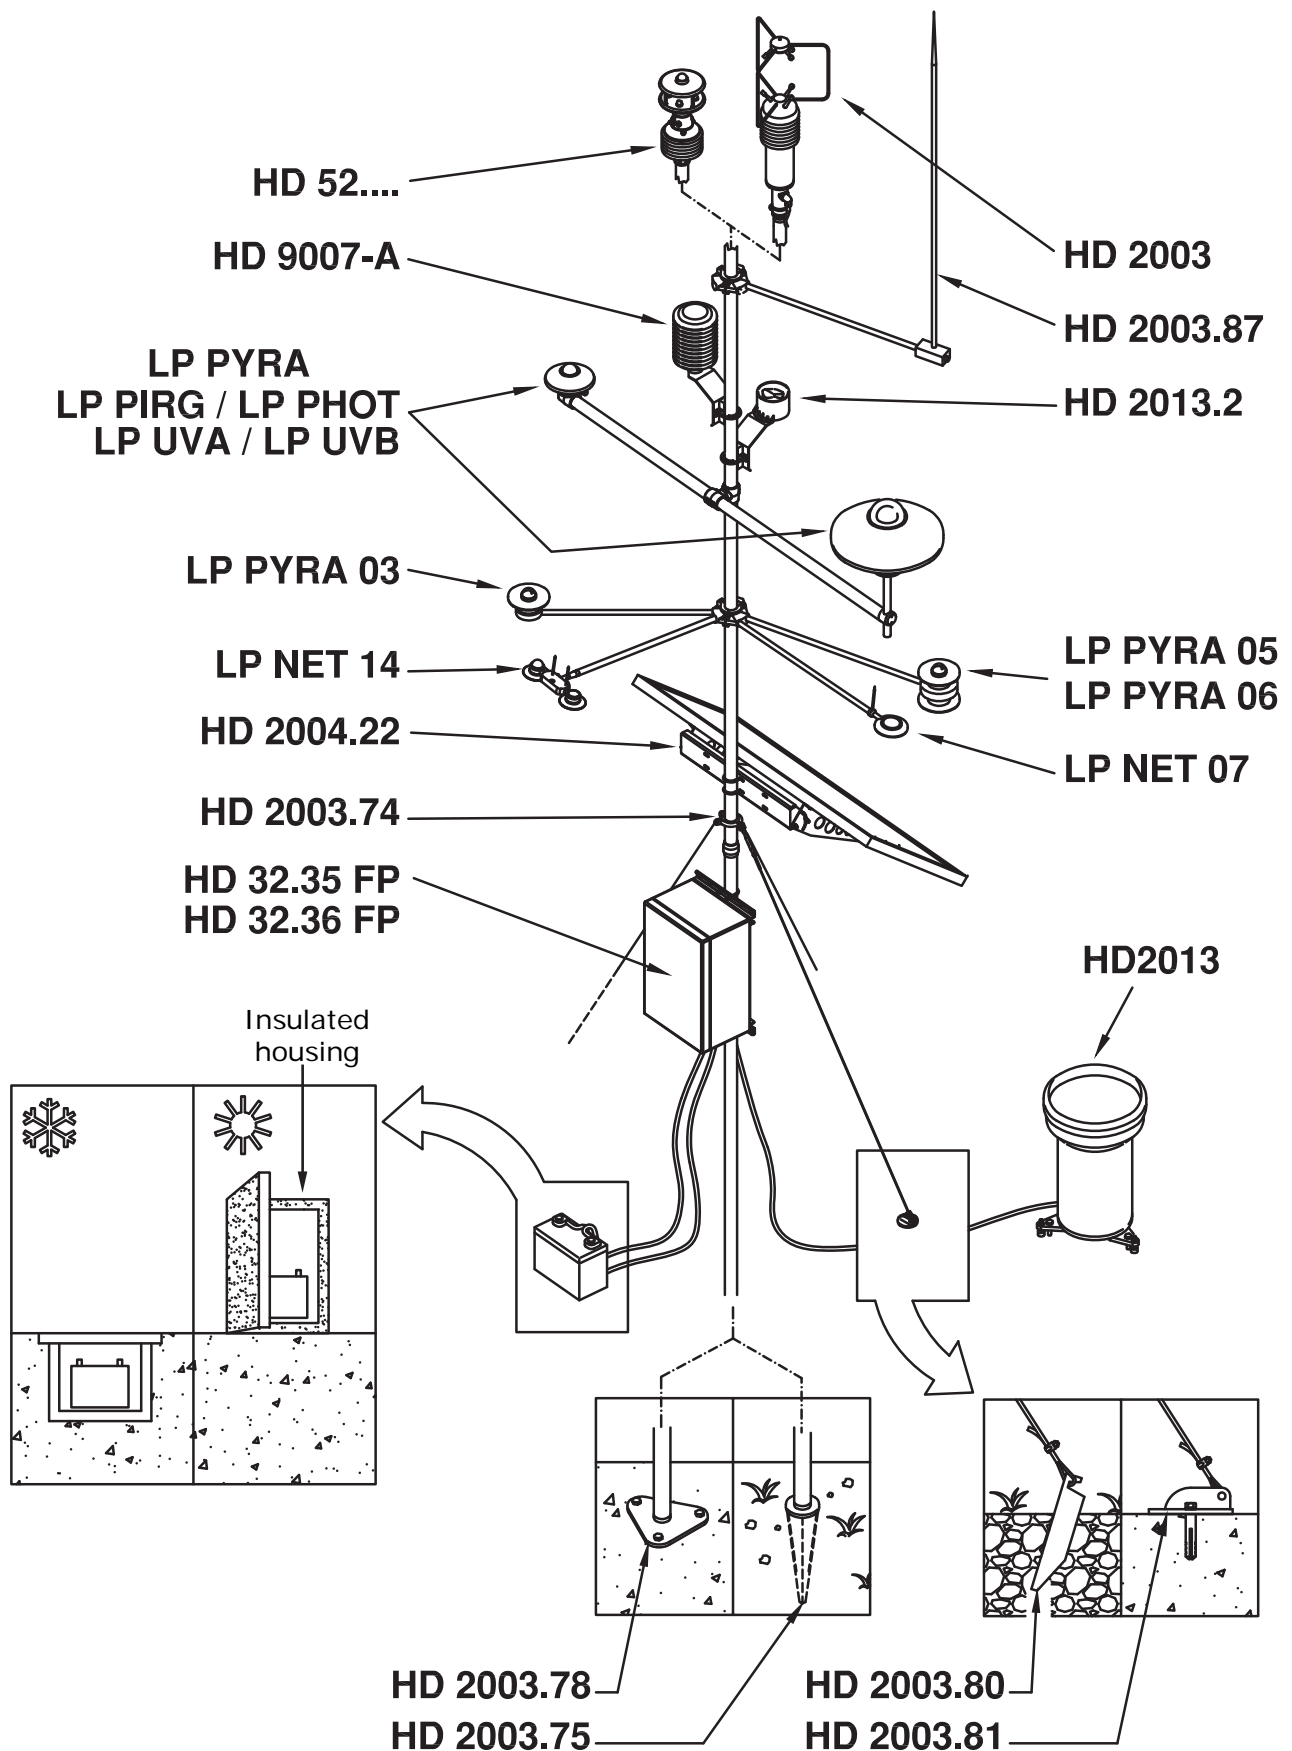

## HD32.35 OUTDOOR HOUSING

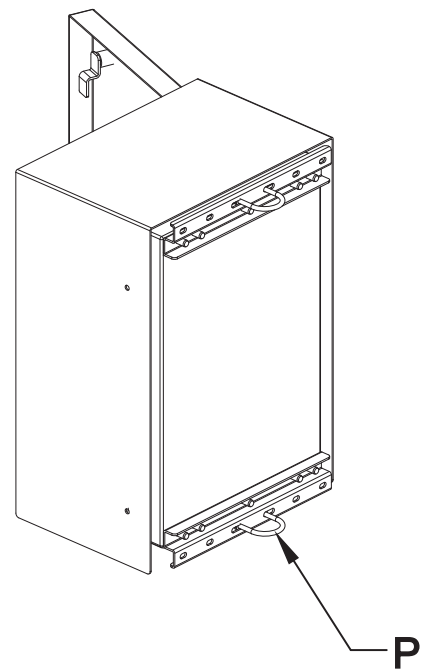
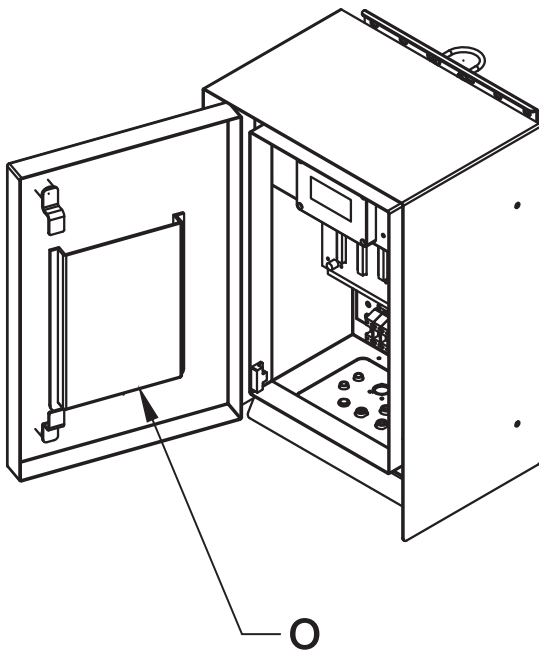
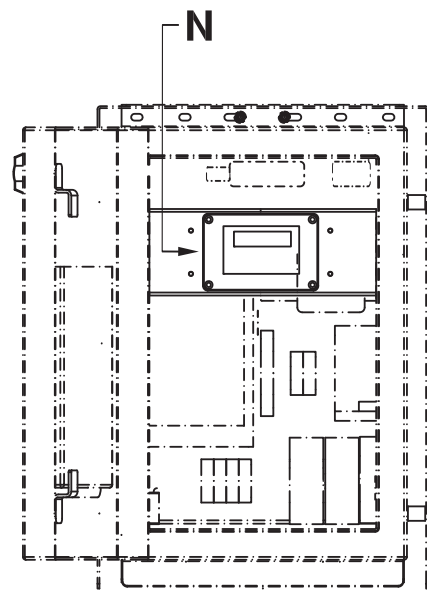
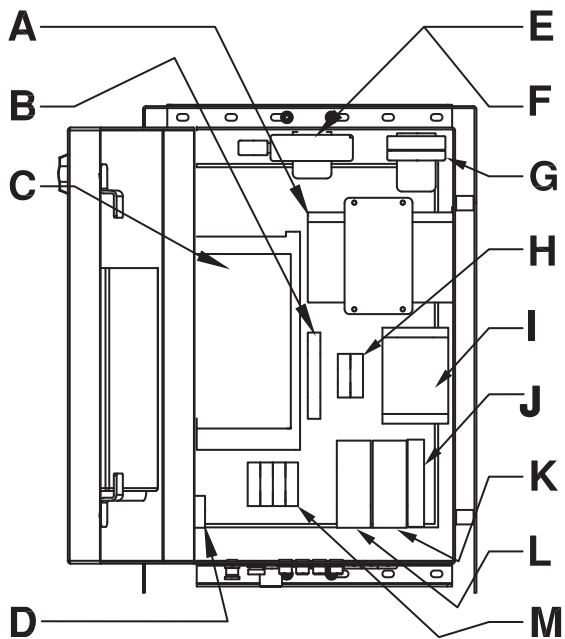


**A** = Backup battery  
**B** = RS485 surge protector  
**C** = HD32MT.1 Data Logger  
**D** = Door opening alarm (**optional**)  
**E** = GSM/GPRS module (**optional**)  
**F** = Radio Modem (**optional**)  
**G** = Barometric transmitter (**optional**)  
**H** = Terminal block

**I** = Power supply unit  
**J** = Fuse  
**K** = Disconnecter  
**L** = Power supply surge protector  
**M** = Terminal block  
**N** = Display (**optional**)  
**O** = Documentation holder  
**P** = Hook for attachment to the mast







## HD32.35FP OUTDOOR HOUSING

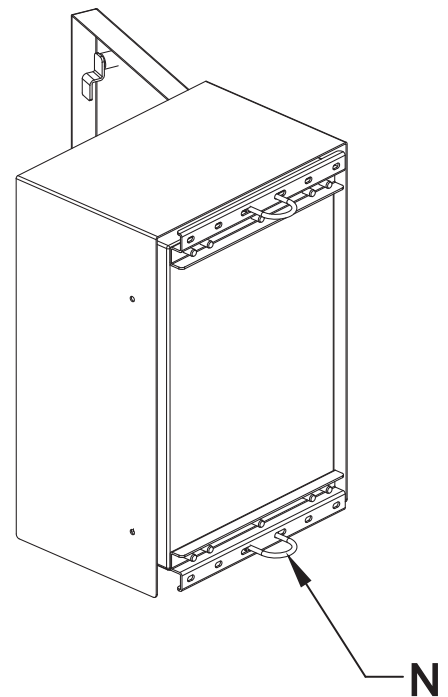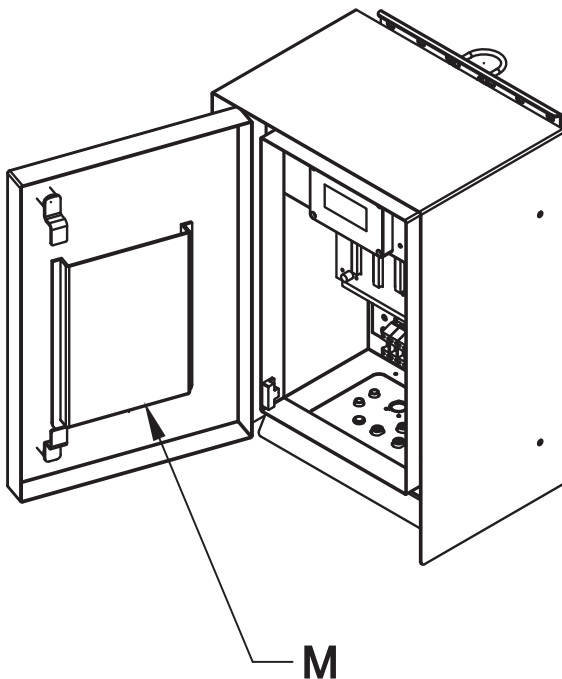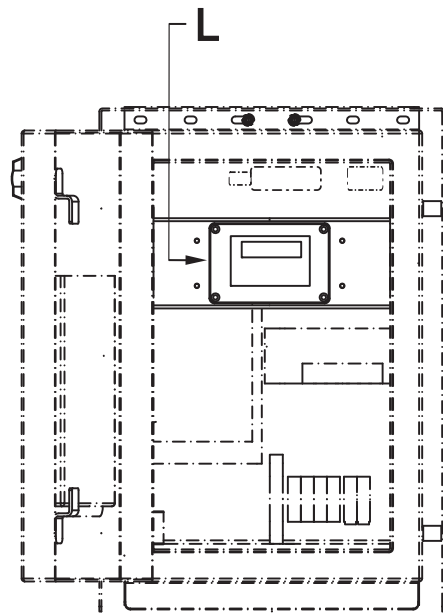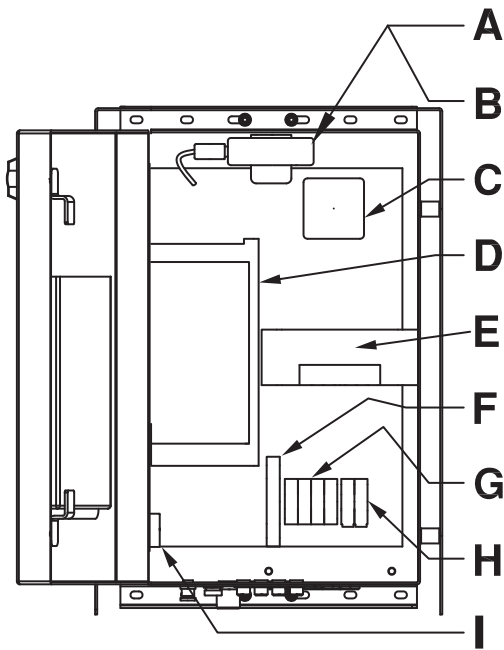

**A** = GSM/GPRS module (**optional**)  
**B** = Radio Modem (**optional**)  
**C** = Barometric transmitter (**optional**)  
**D** = HD32MT.1 Data Logger  
**E** = Charge controller  
**F** = RS485 surge protector

**G** = Terminal block  
**H** = Terminal block  
**I** = Door opening alarm (**optional**)  
**L** = Display (**optional**)  
**M** = Documentation holder  
**N** = Hook for attachment to the mast





## HD32.36 OUTDOOR HOUSING

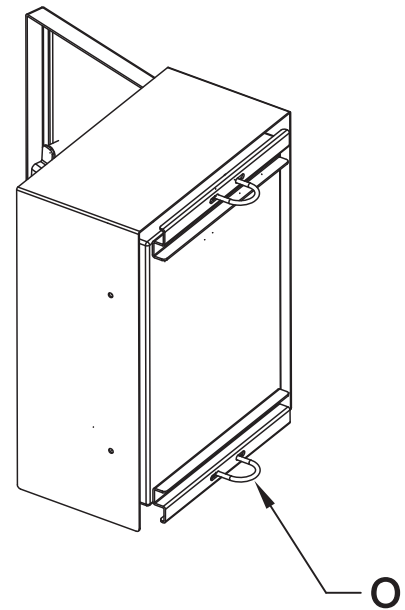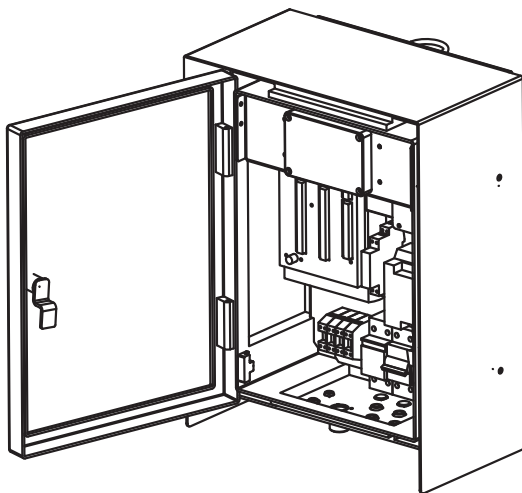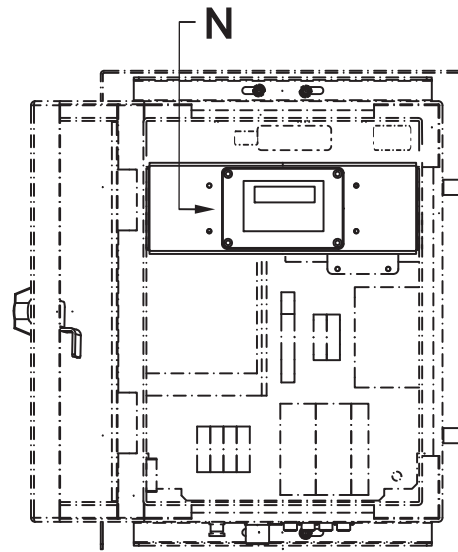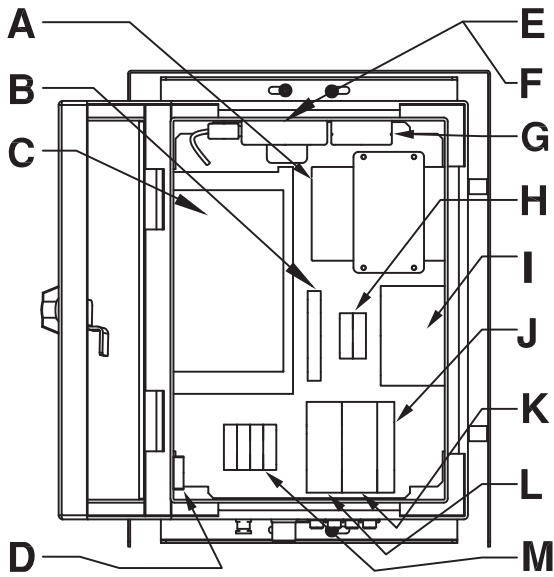

**A** = Backup battery  
**B** = RS485 surge protector  
**C** = HD32MT.1 Data Logger  
**D** = Door opening alarm (**optional**)  
**E** = GSM/GPRS module (**optional**)  
**F** = Radio Modem (**optional**)  
**G** = Barometric transmitter (**optional**)  
**H** = Terminal block

**I** = Power supply unit  
**J** = Fuse  
**K** = Disconnecter  
**L** = Power supply surge protector  
**M** = Terminal block  
**N** = Display (**optional**)  
**O** = Hook for attachment to the mast


## HD32.36FP OUTDOOR HOUSING

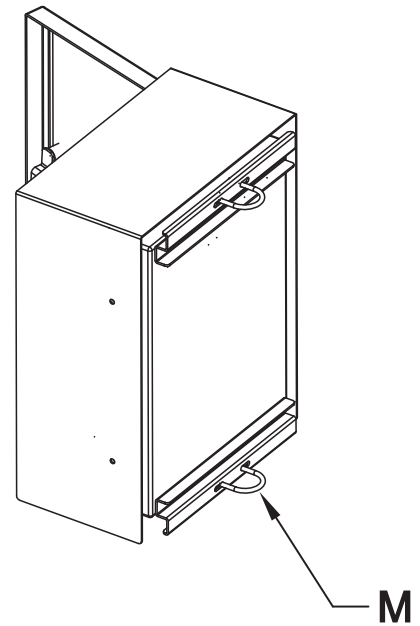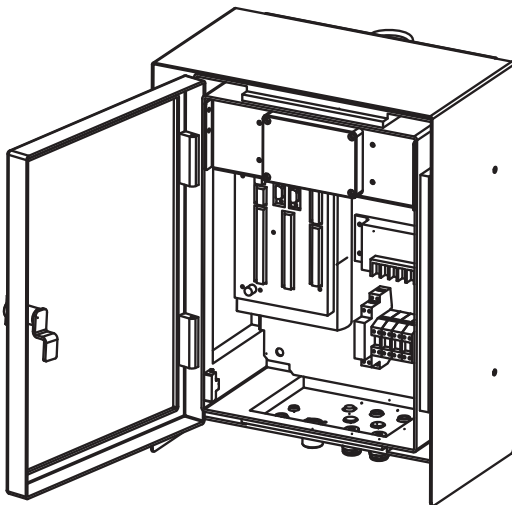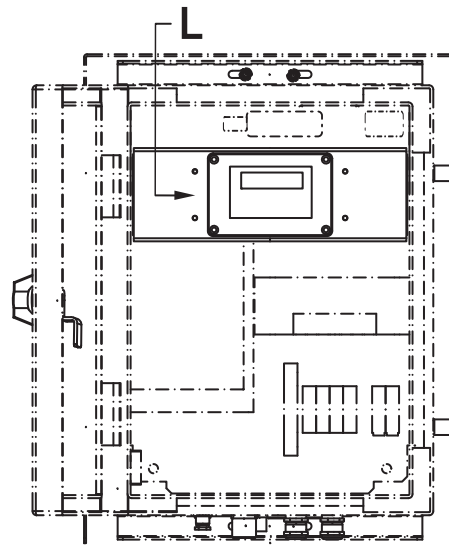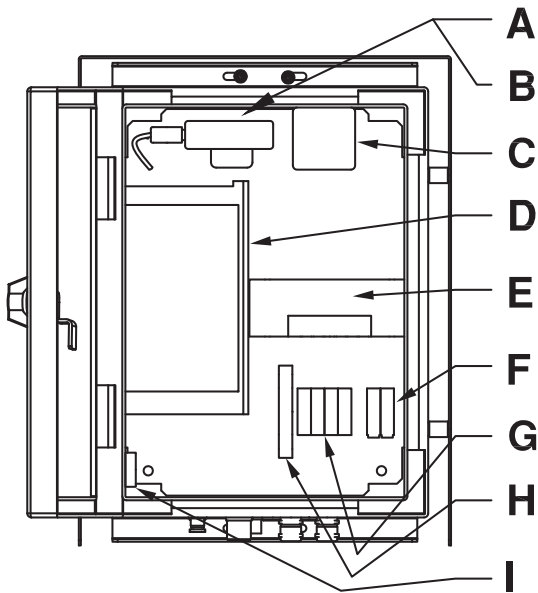


**A** = GSM/GPRS module (**optional**)  
**B** = Radio Modem (**optional**)  
**C** = Barometric transmitter (**optional**)  
**D** = HD32MT.1 Data Logger  
**E** = Charge controller  
**F** = Terminal block

**G** = Terminal block  
**H** = RS485 surge protector  
**I** = Door opening alarm (**optional**)  
**L** = Display (**optional**)  
**M** = Hook for attachment to the mast


## INSTALLATION OF HD32.3X OUTDOOR HOUSING

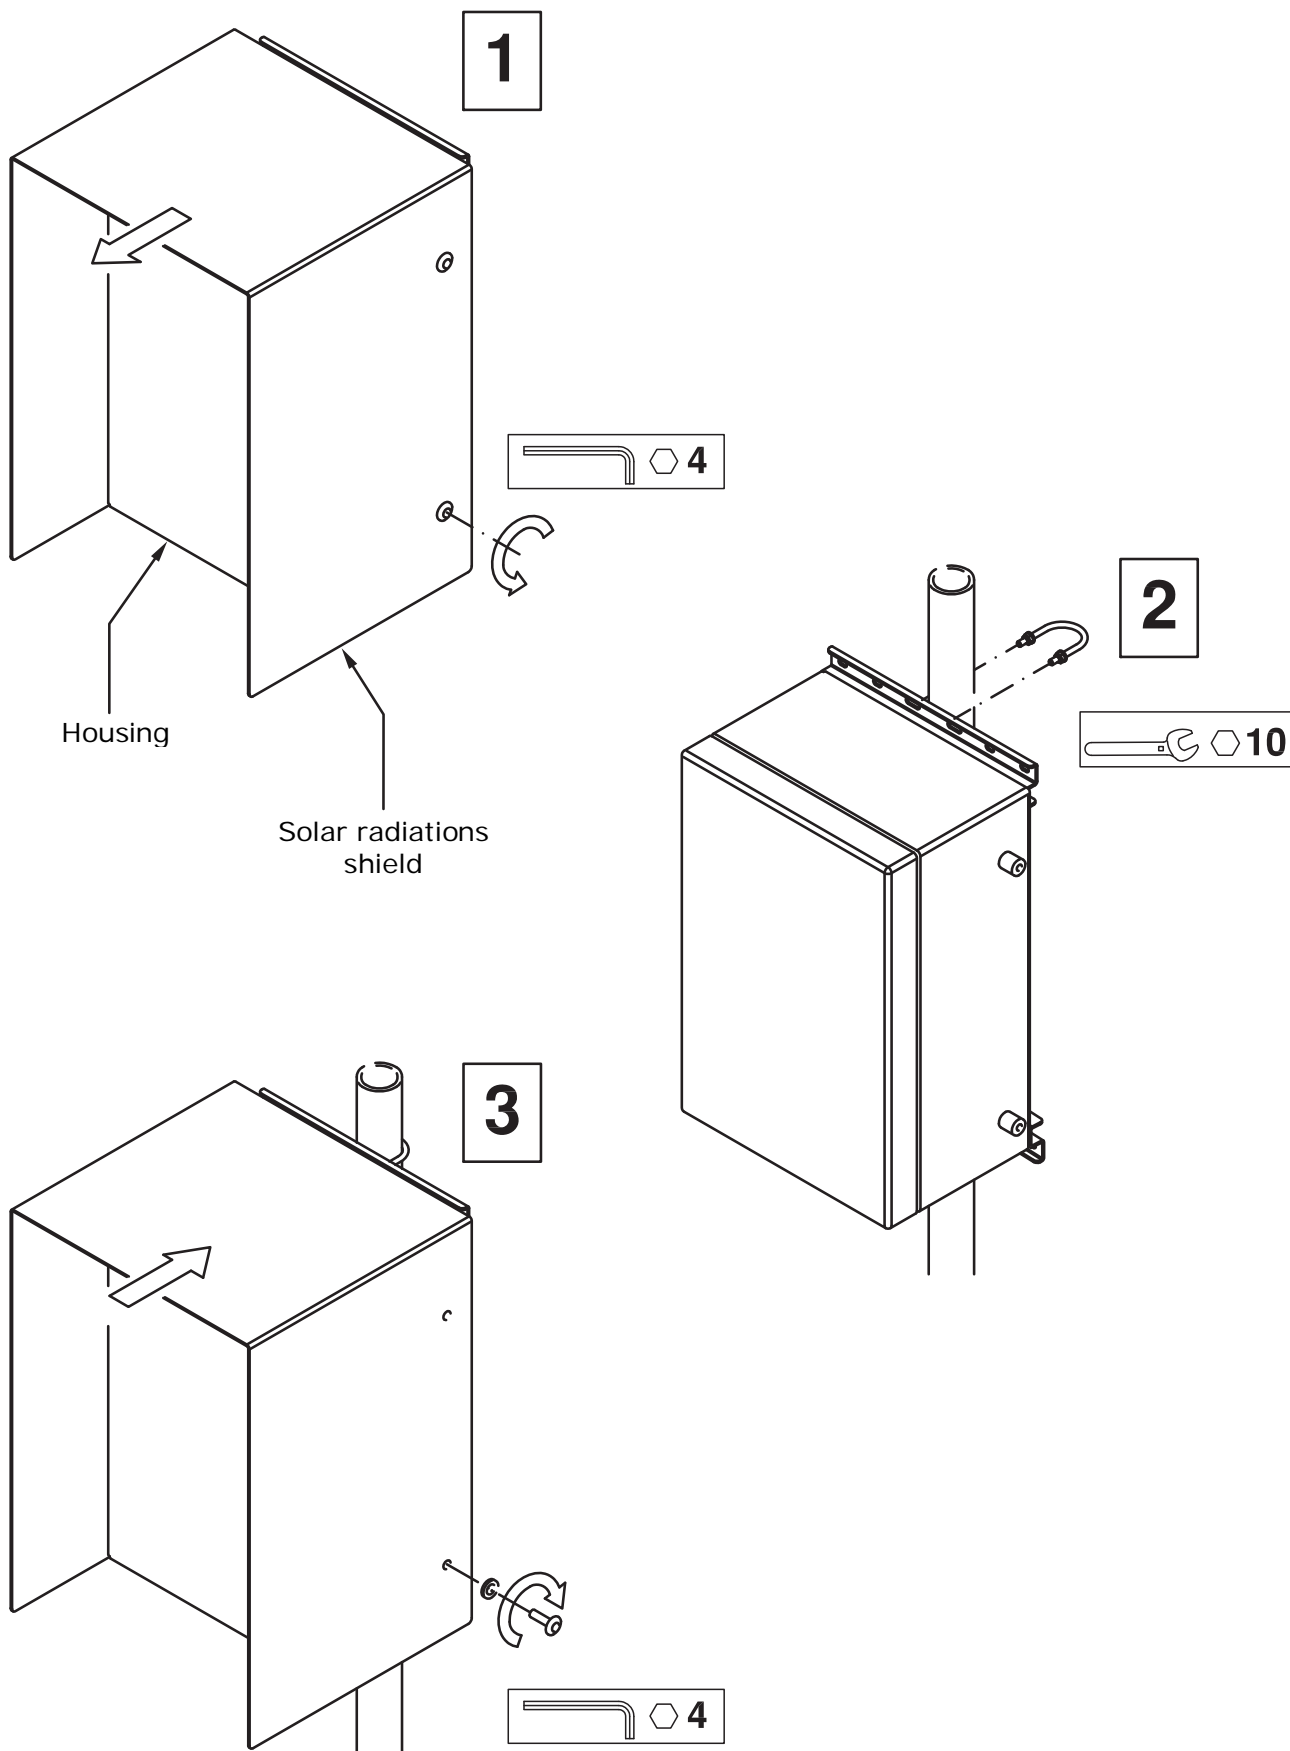


## INSTALLATION OF SOLAR PANEL

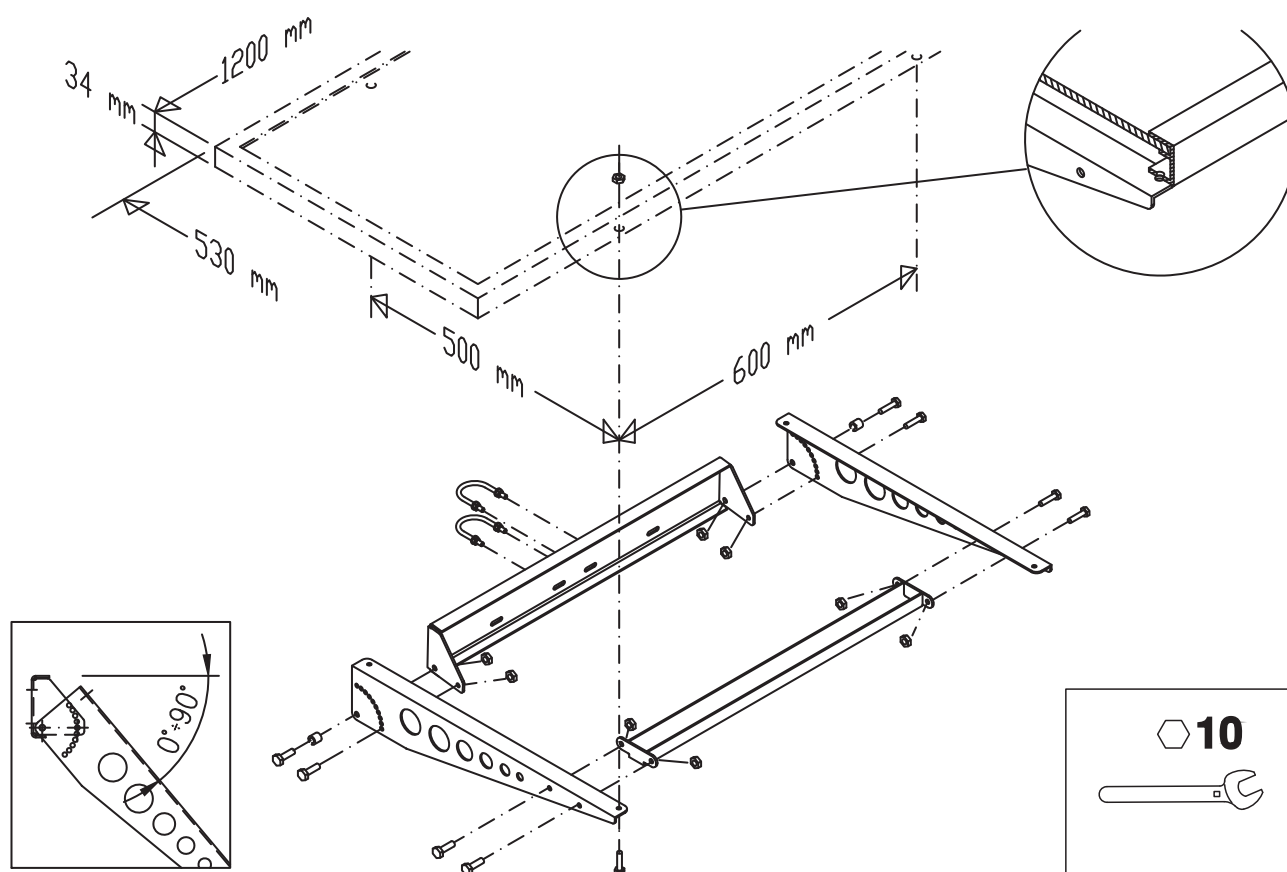


## INSTALLATION OF HD2003 AND HD2003.1 ANEMOMETERS

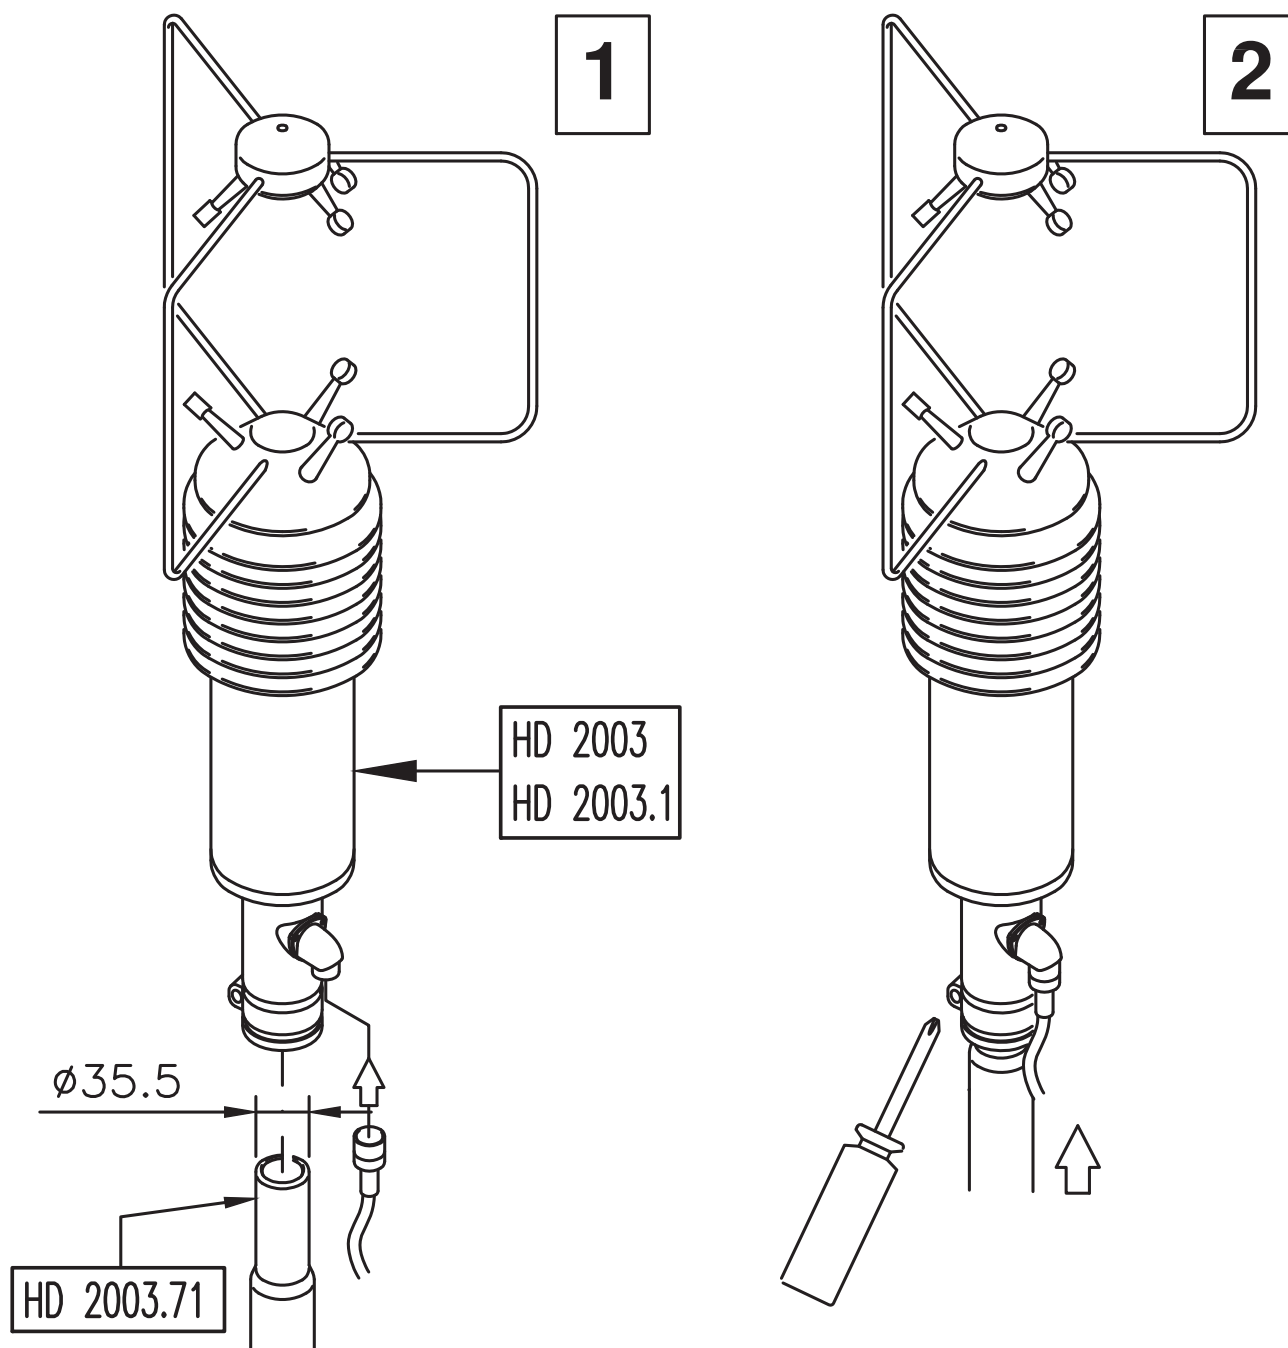

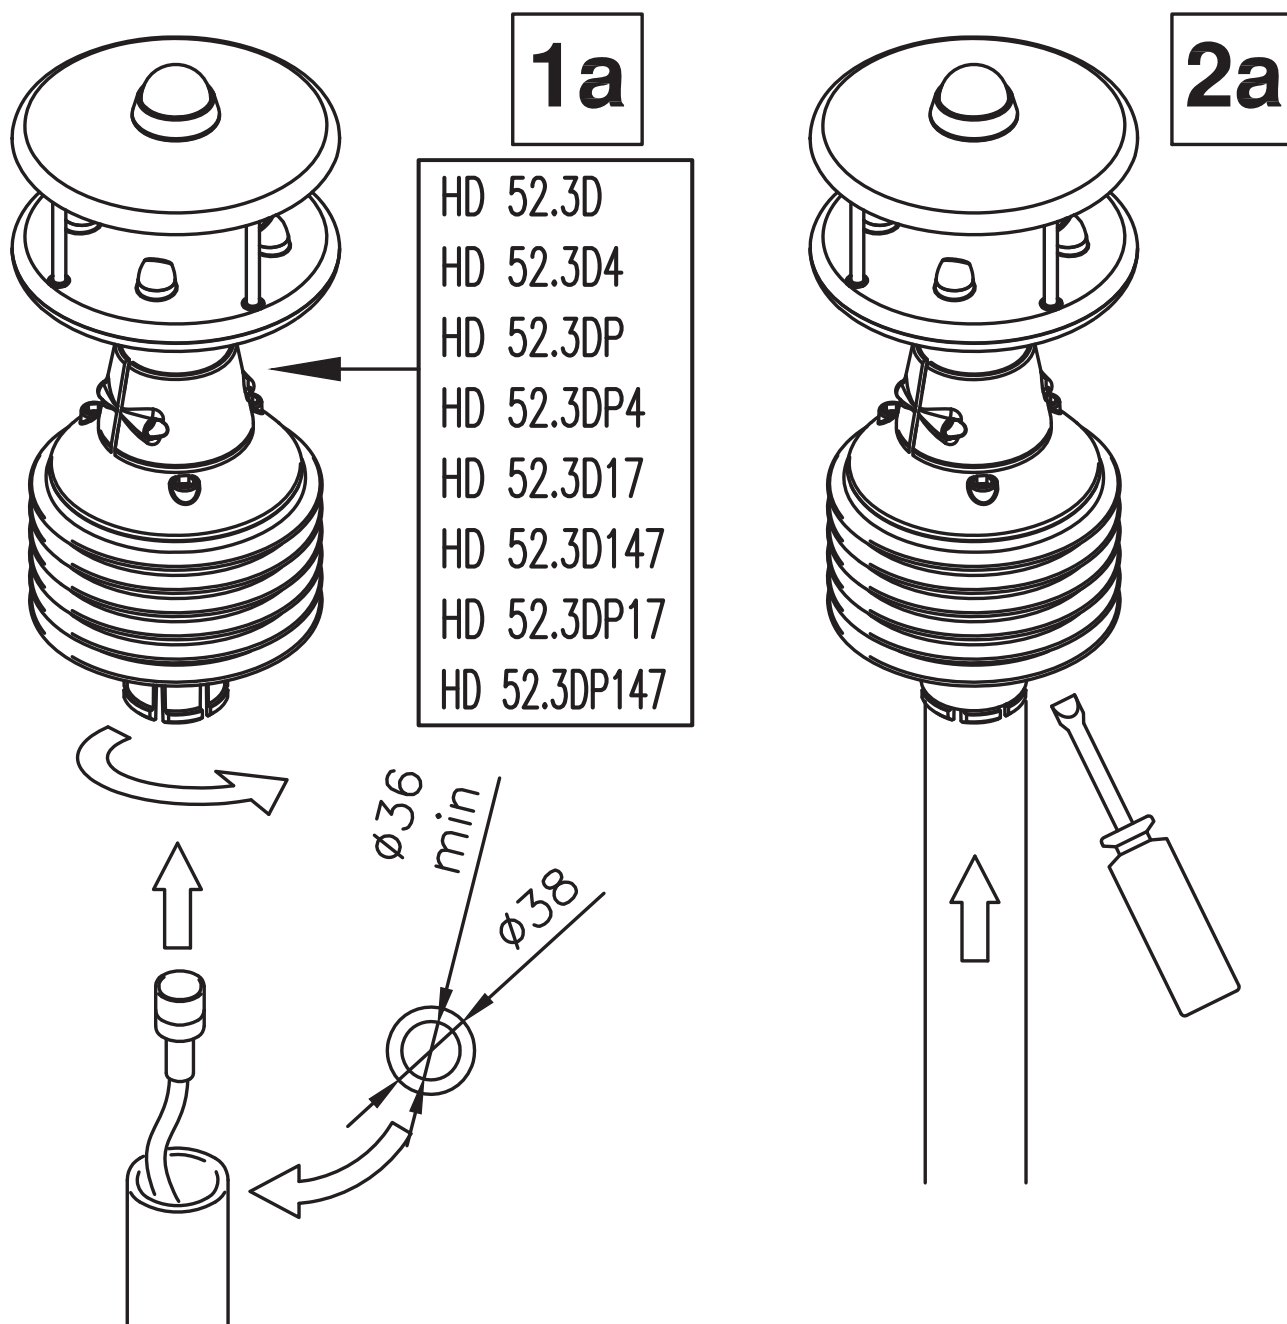


## INSTALLATION OF HUMIDITY AND TEMPERATURE TRANSMITTERS

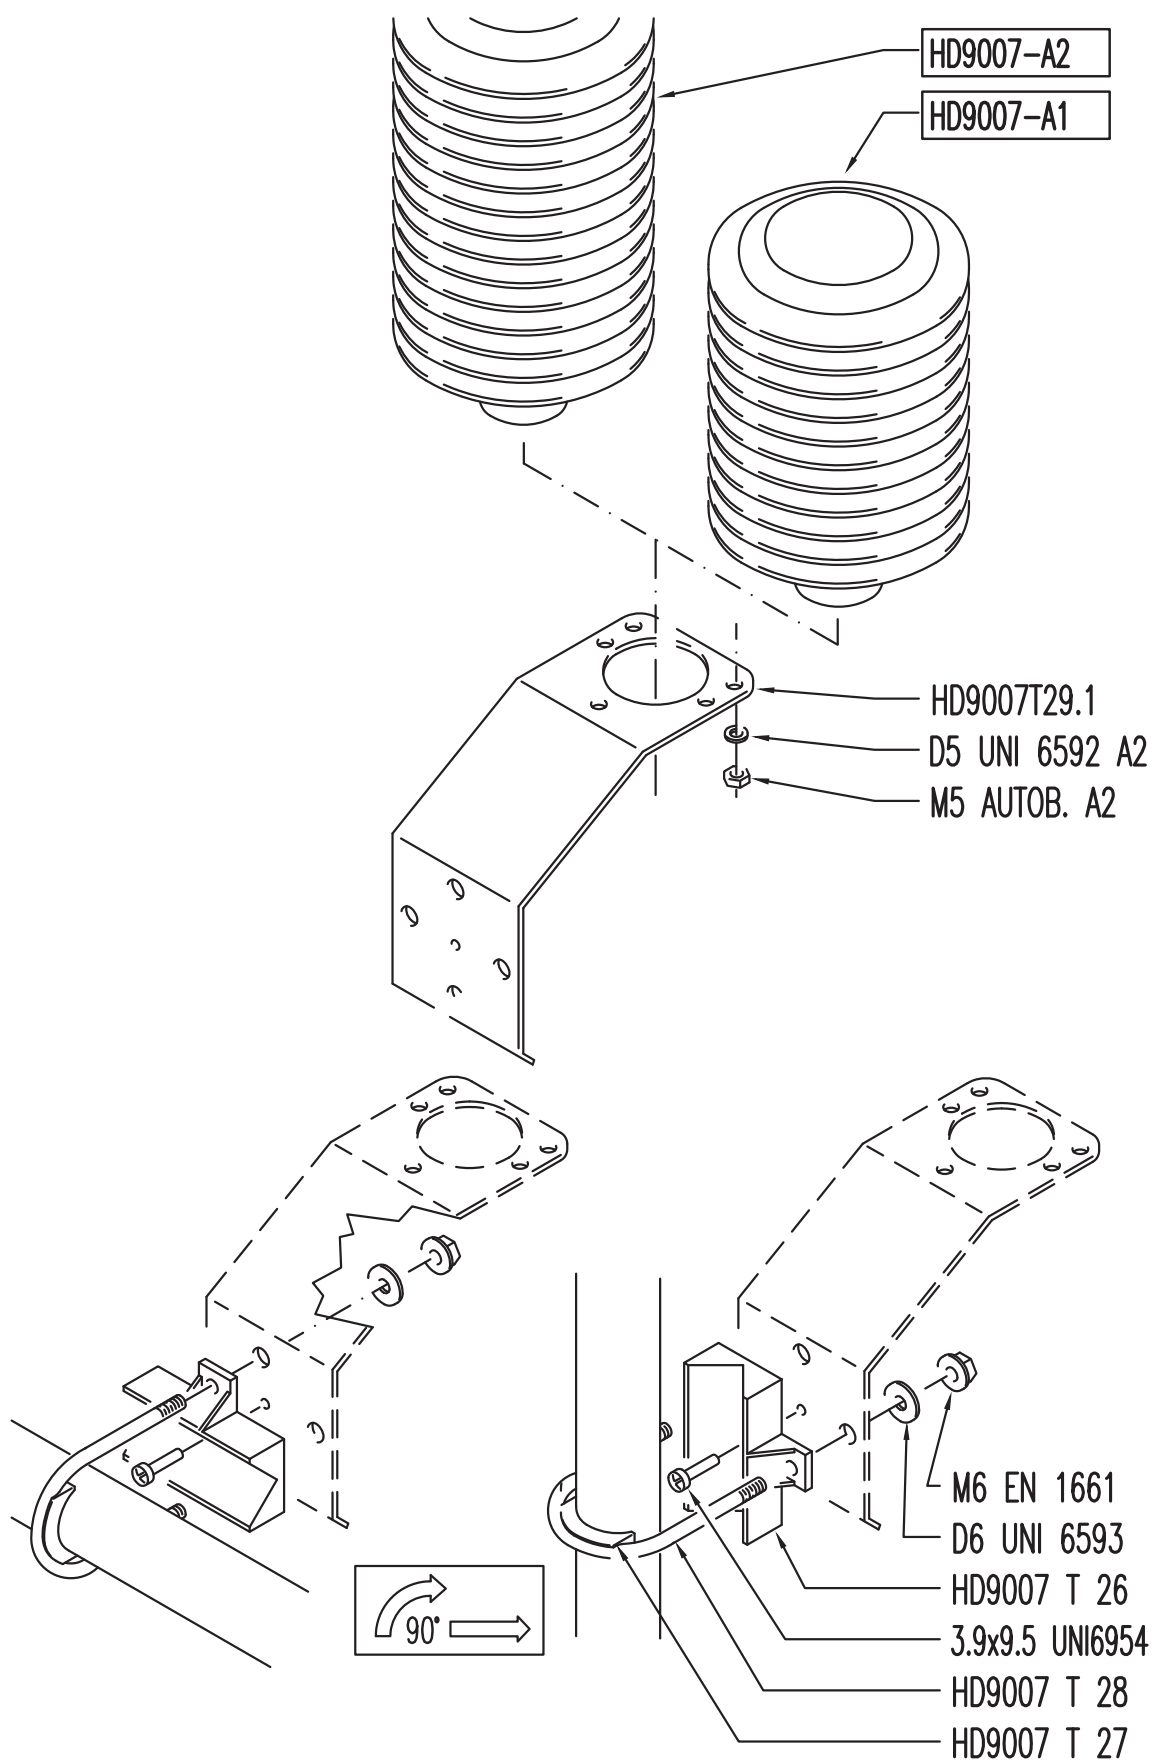





## INSTALLATION OF HD2013.2 RAIN DETECTOR

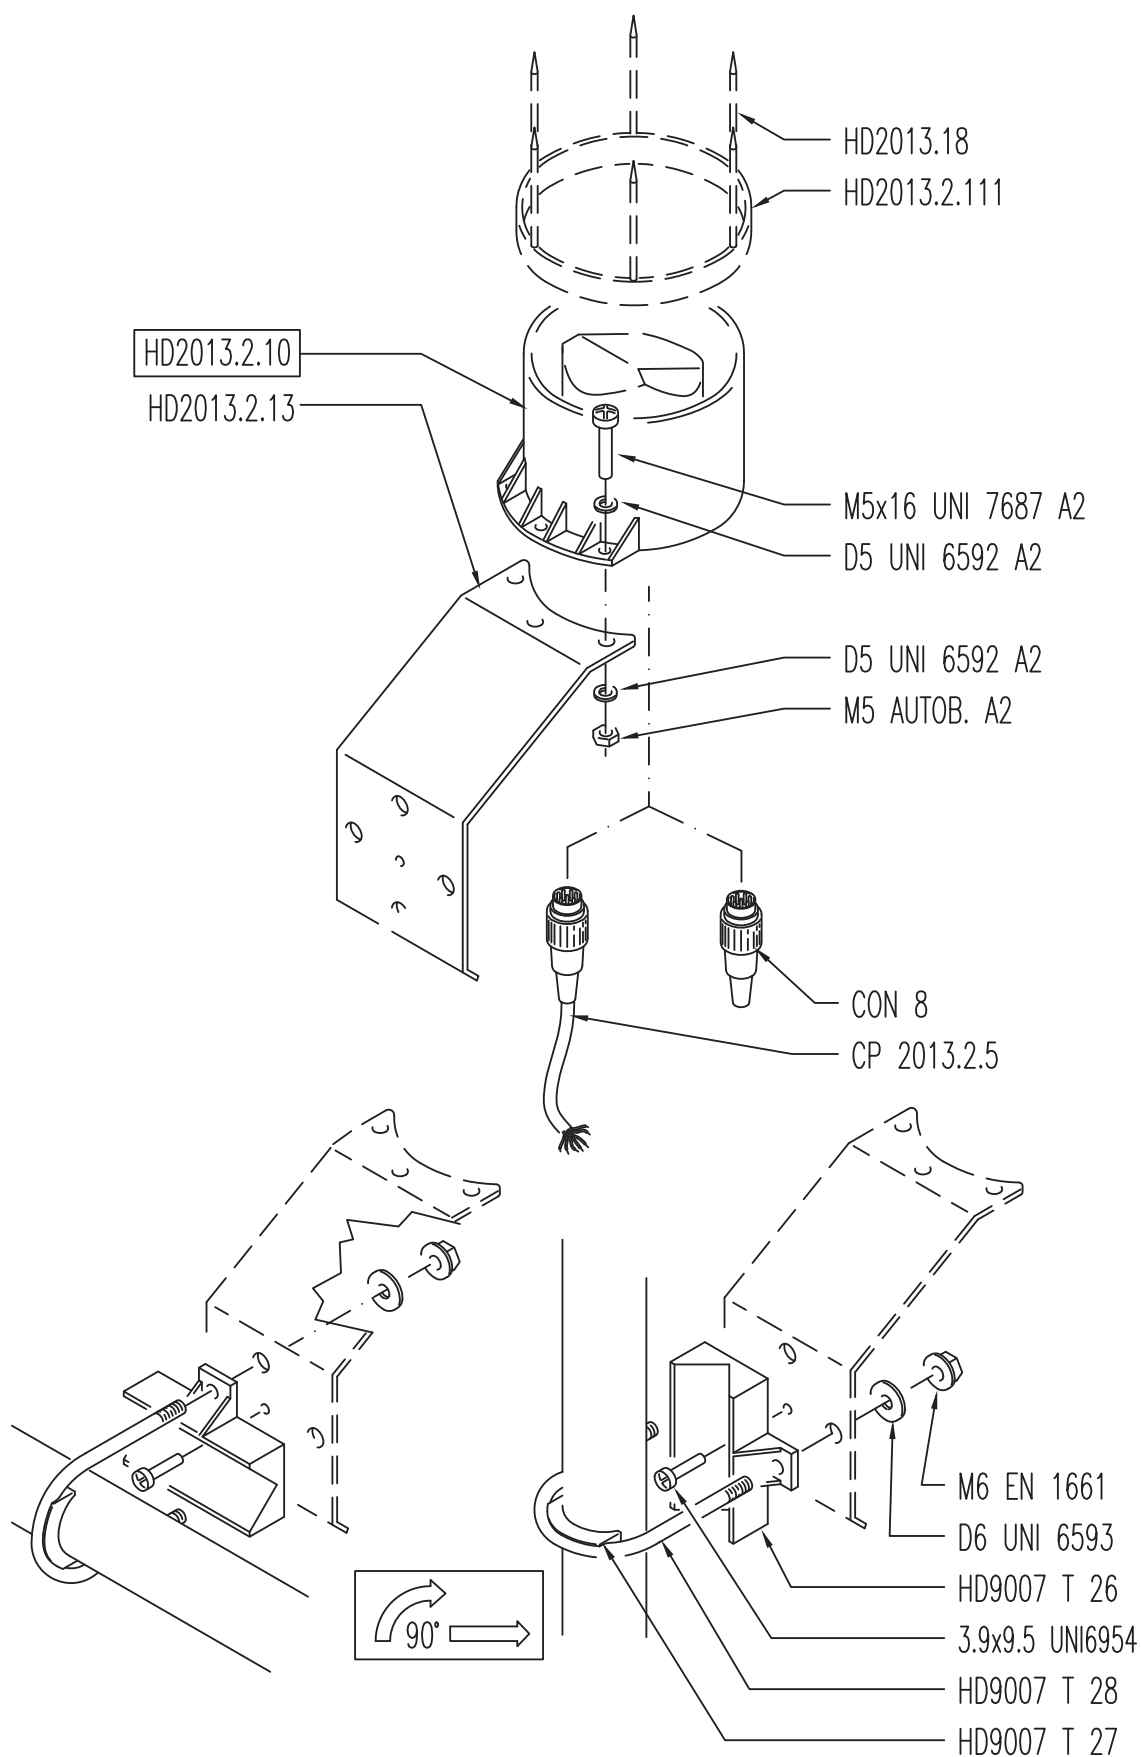


## INSTALLATION OF HD2013 BUCKET RAIN GAUGE TO GROUND

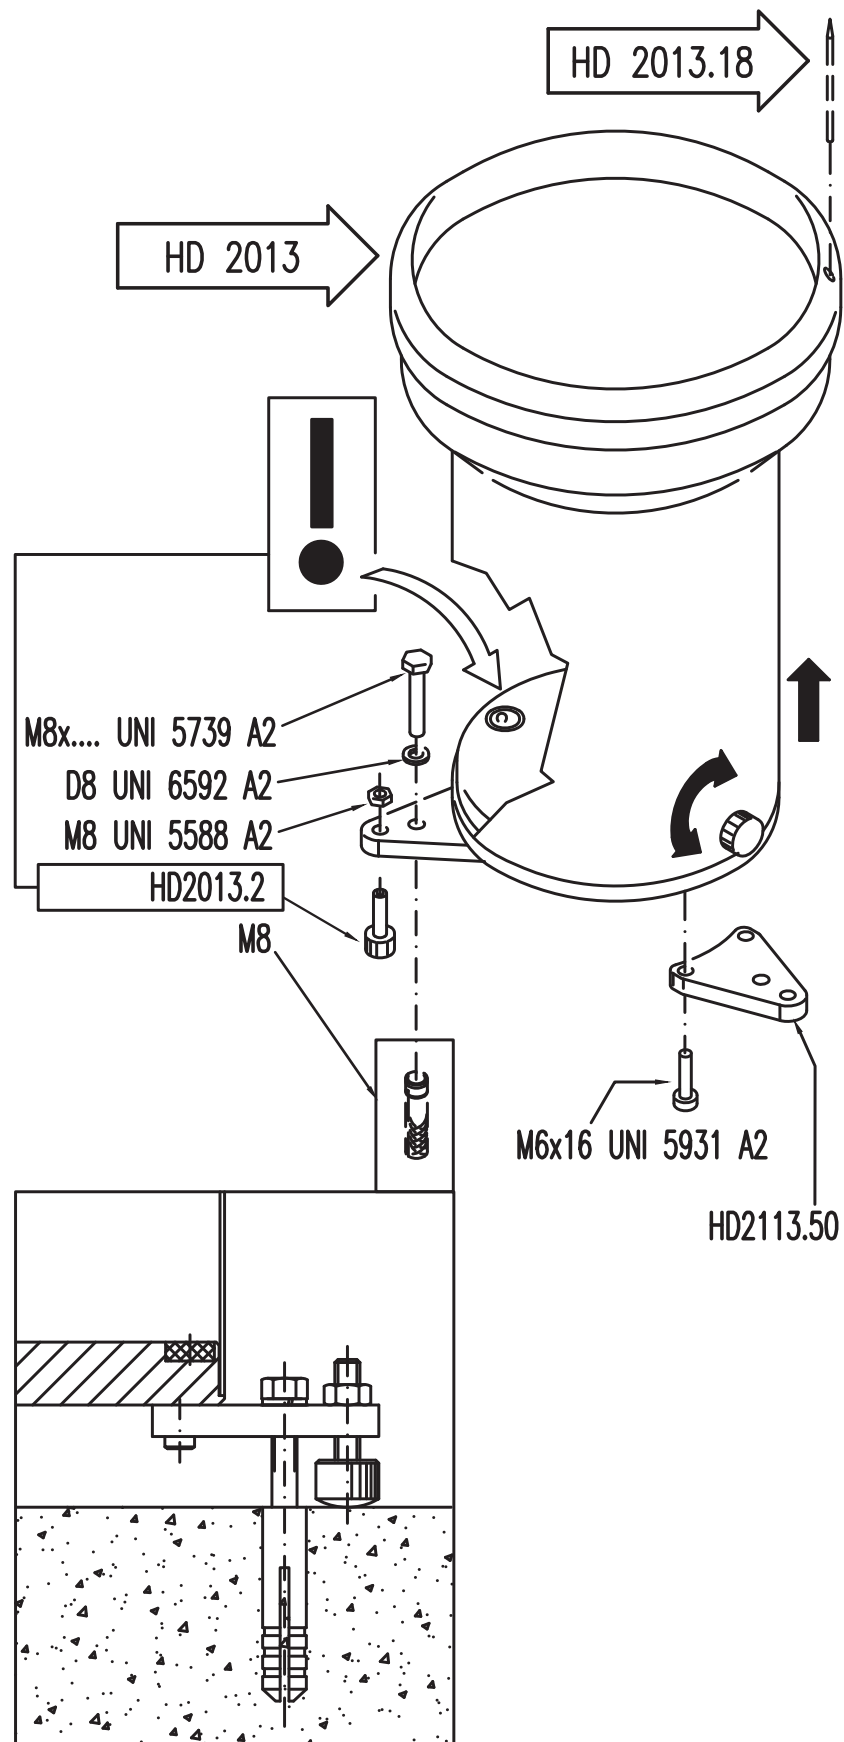


# INSTALLATION OF HD2013 BUCKET RAIN GAUGE RAISED FROM THE GROUND

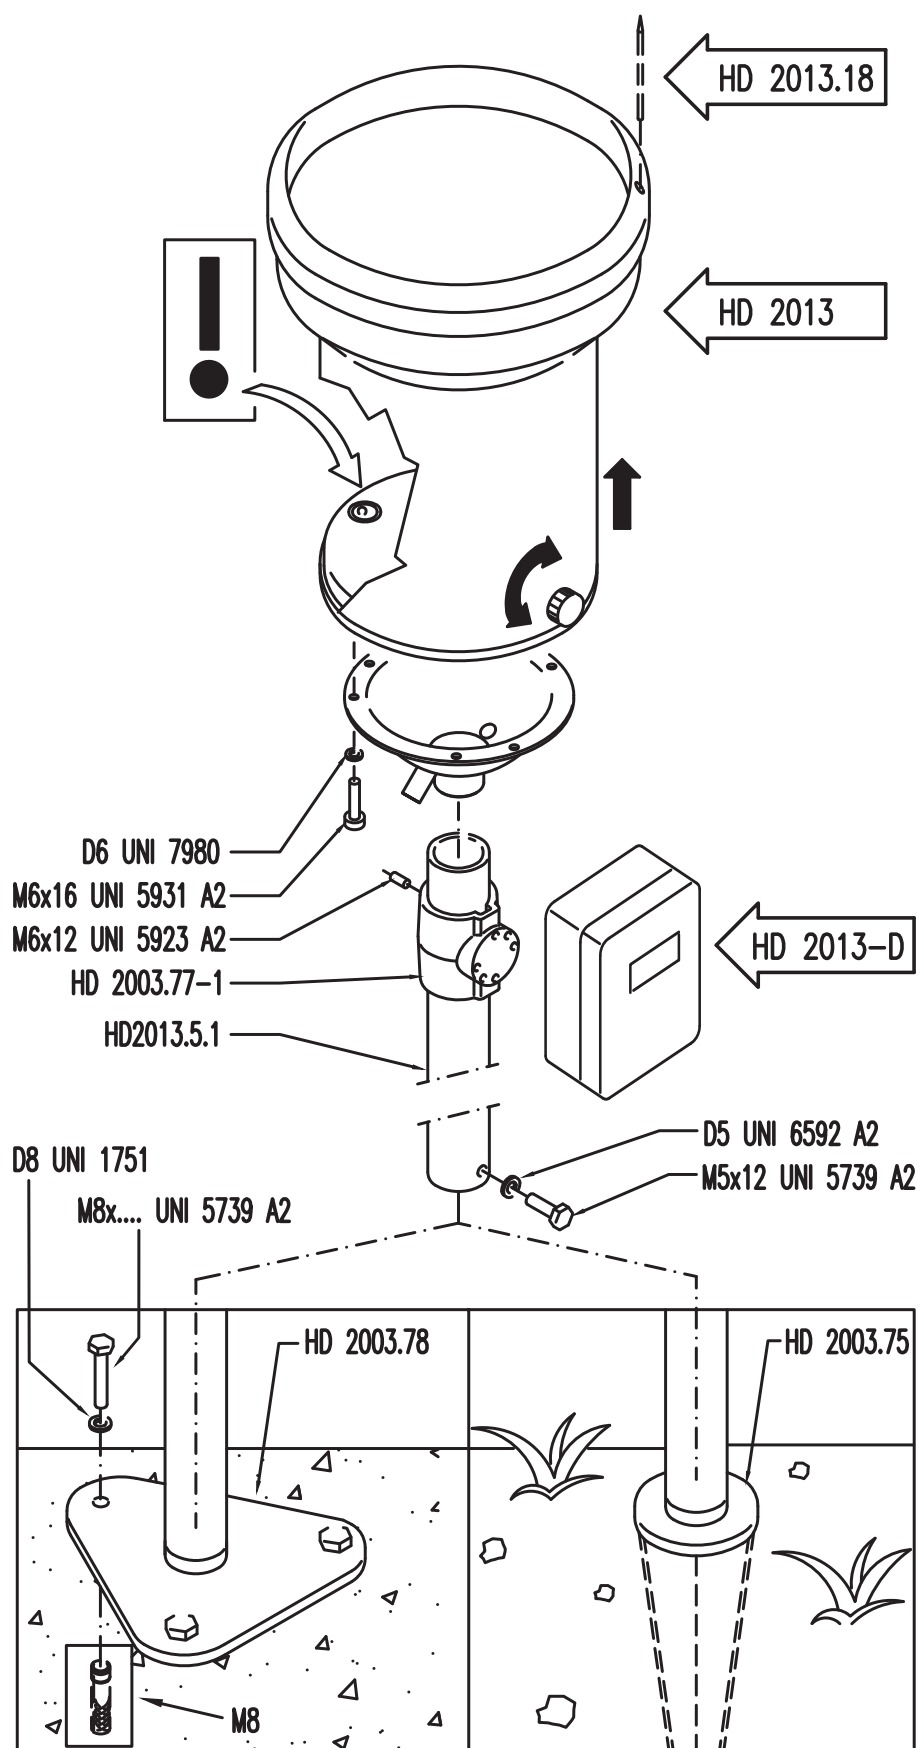



# INSTALLATION OF WEATHER SENSORS ON THE MAST Ø 40 mm

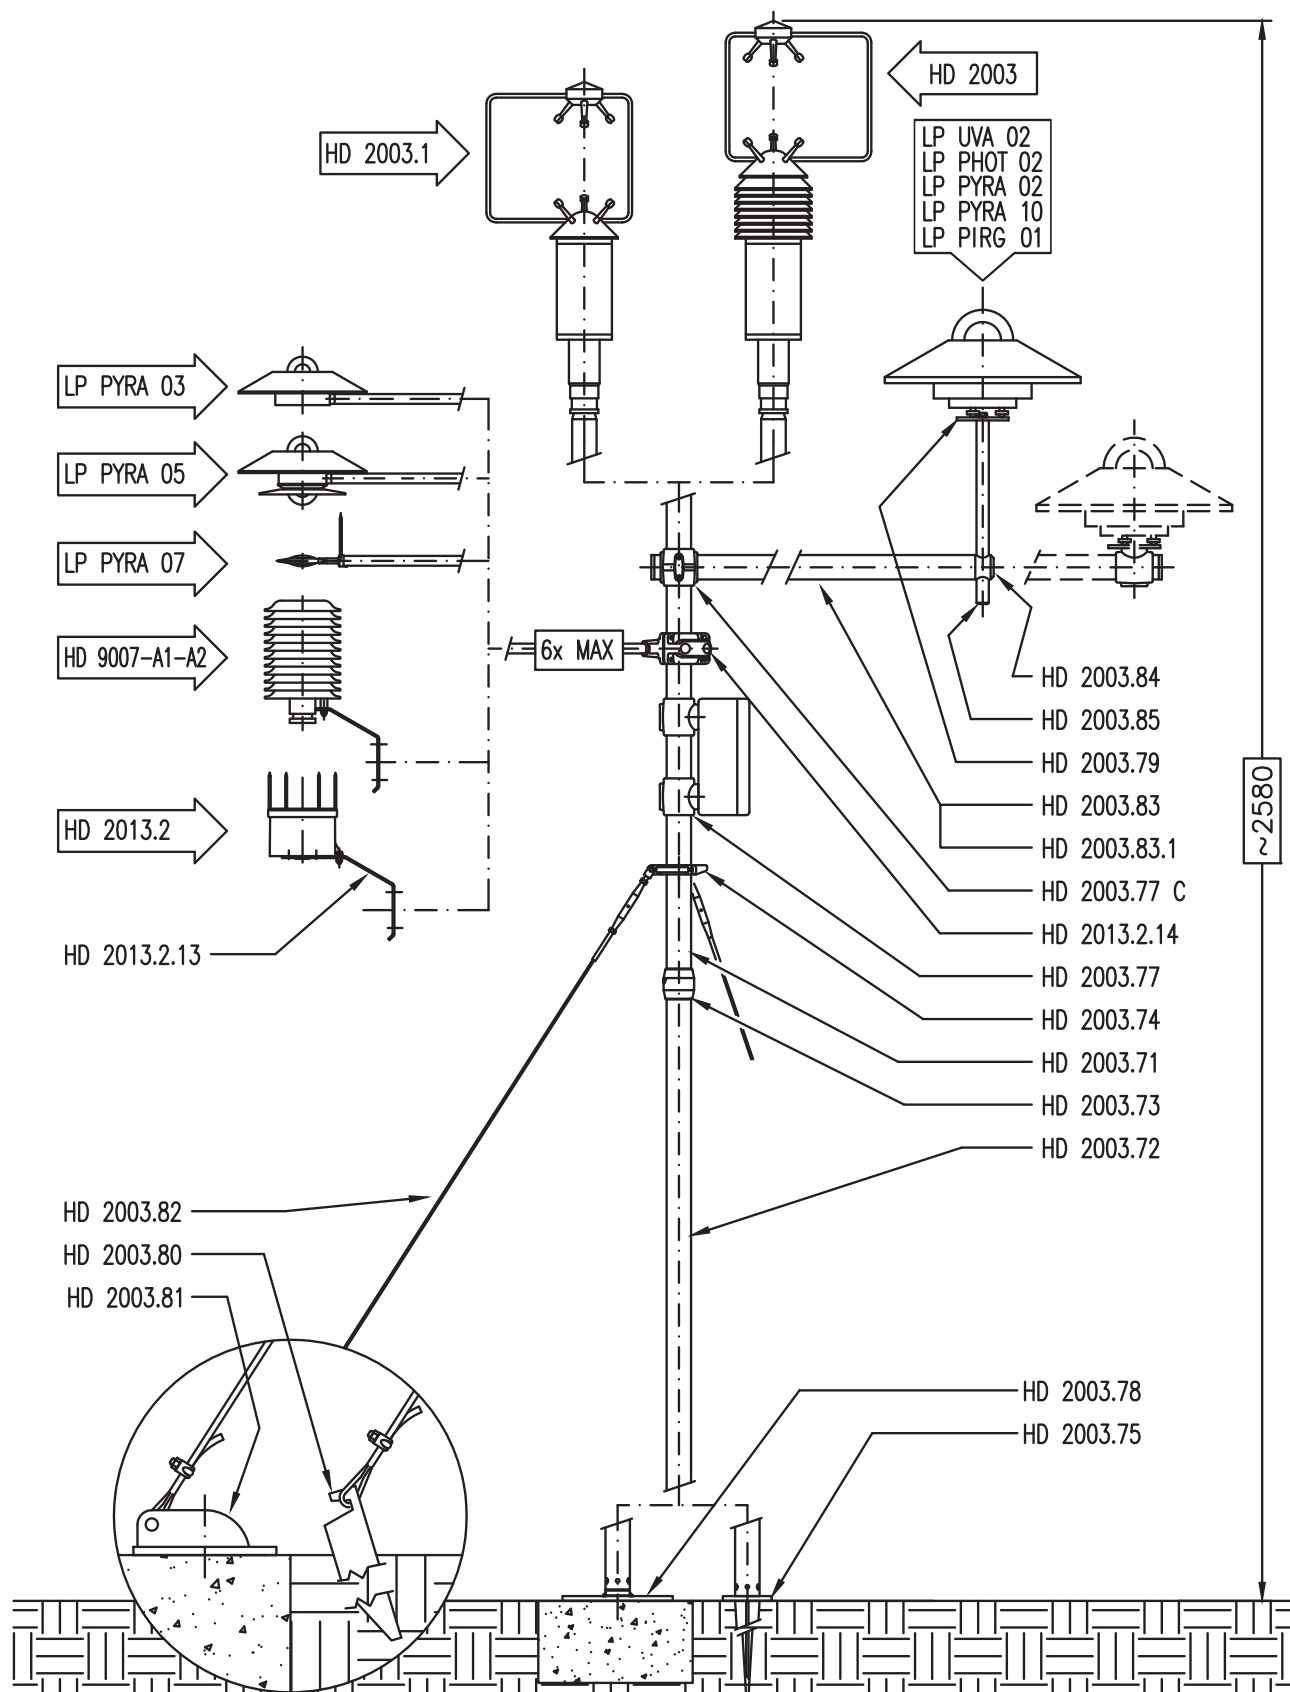




# FLANGE AND CLAMPINGS FOR MAST Ø 40 mm

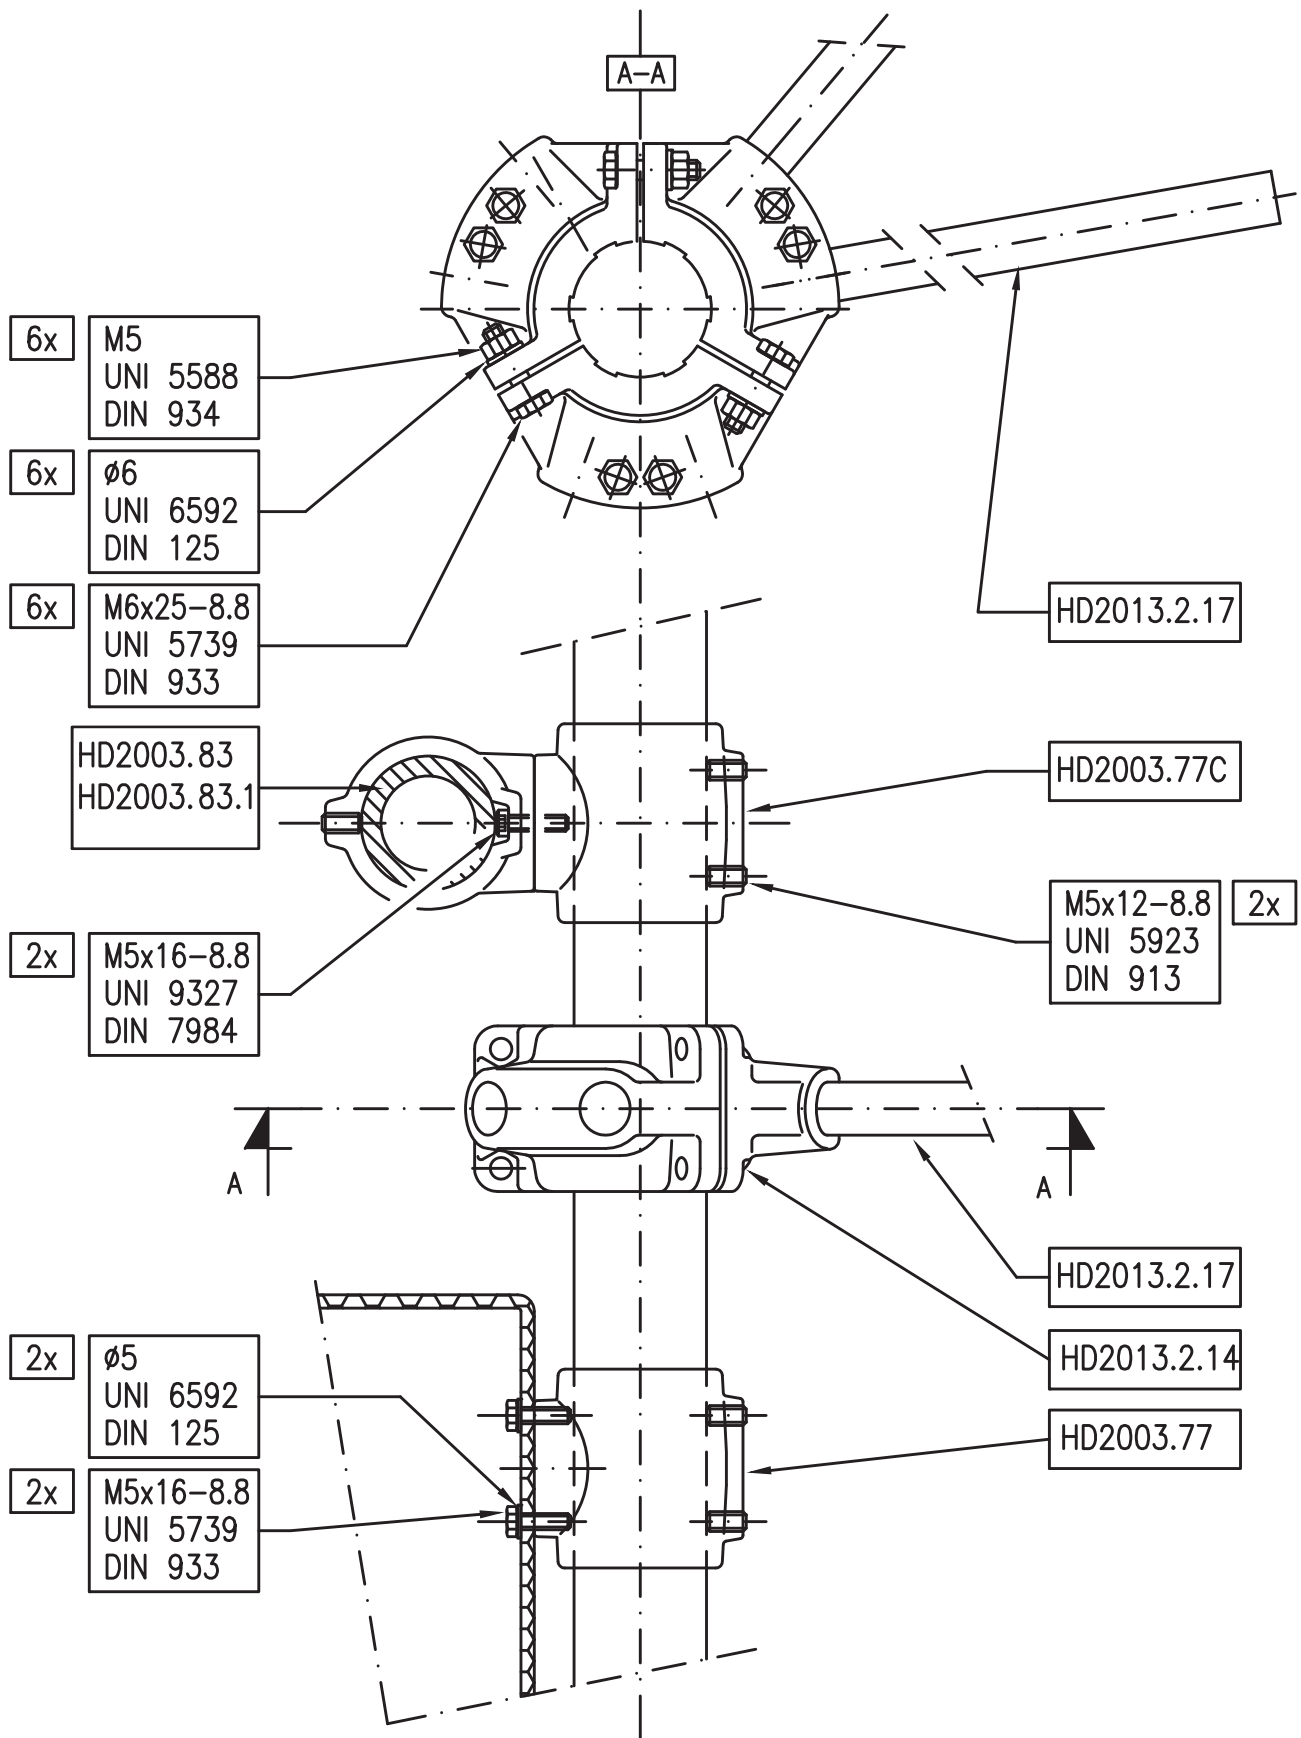

## INSTALLATION OF PHOTOMETERS – RADIOMETERS - PYRANOMETERS

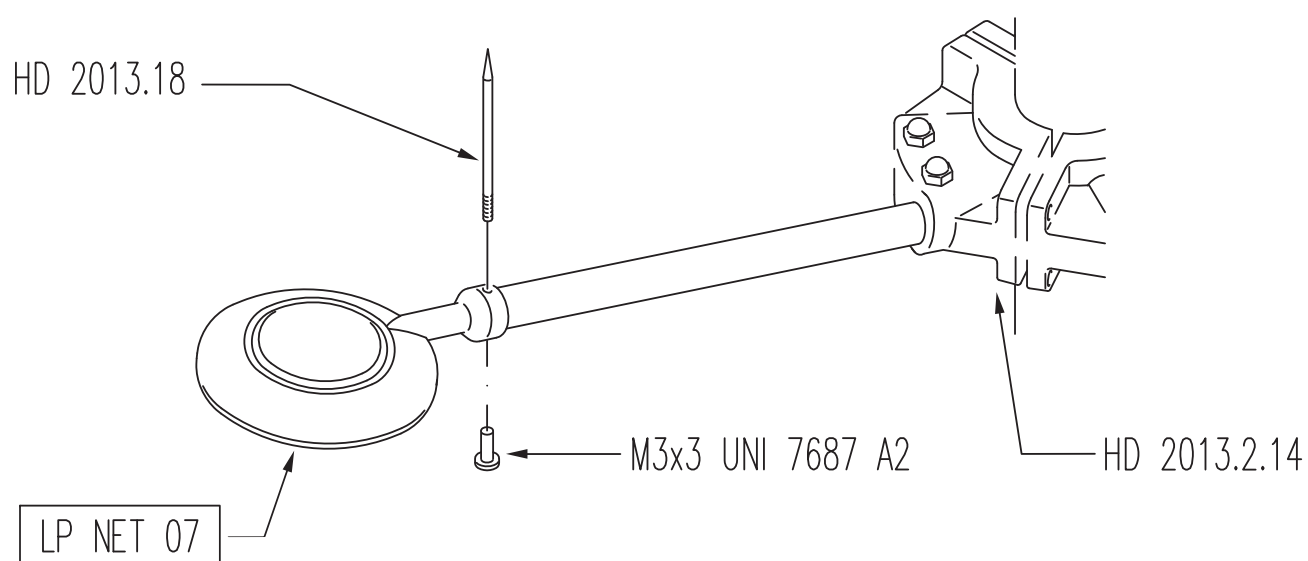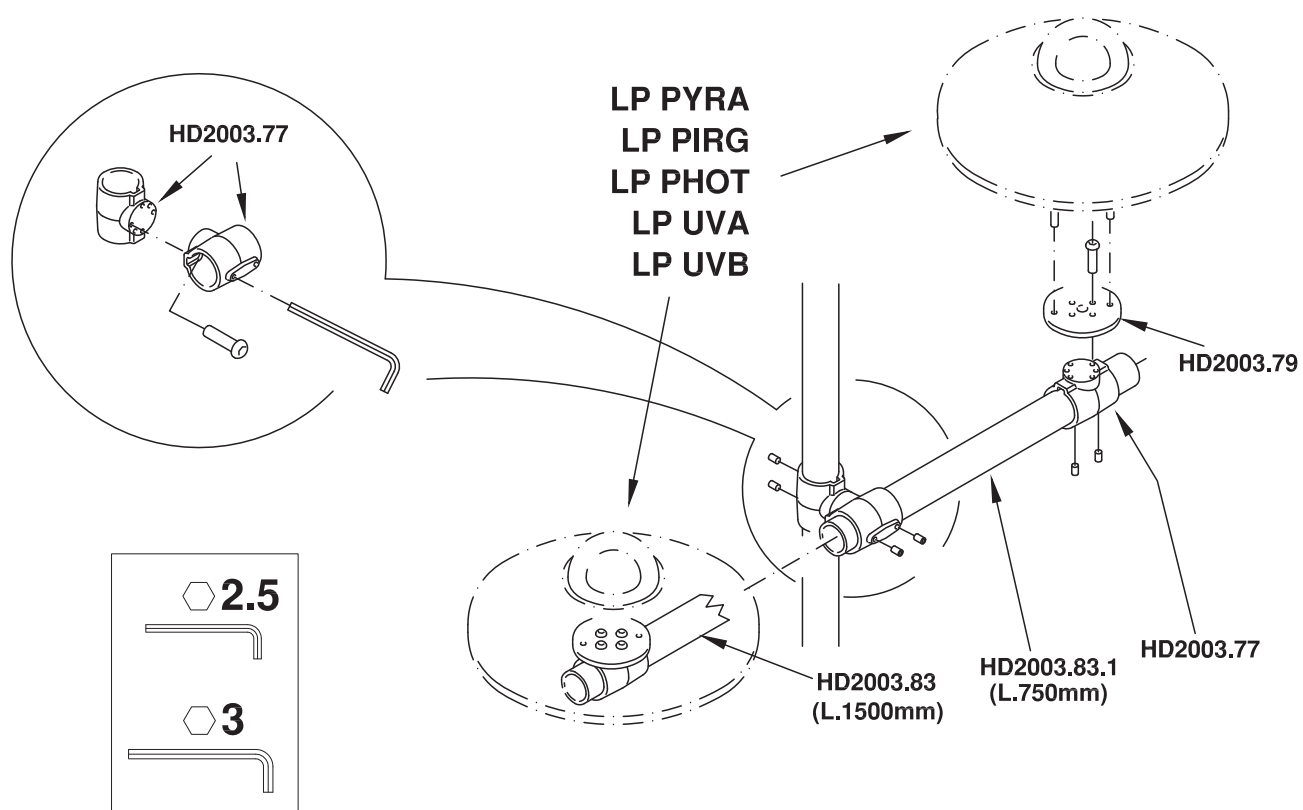

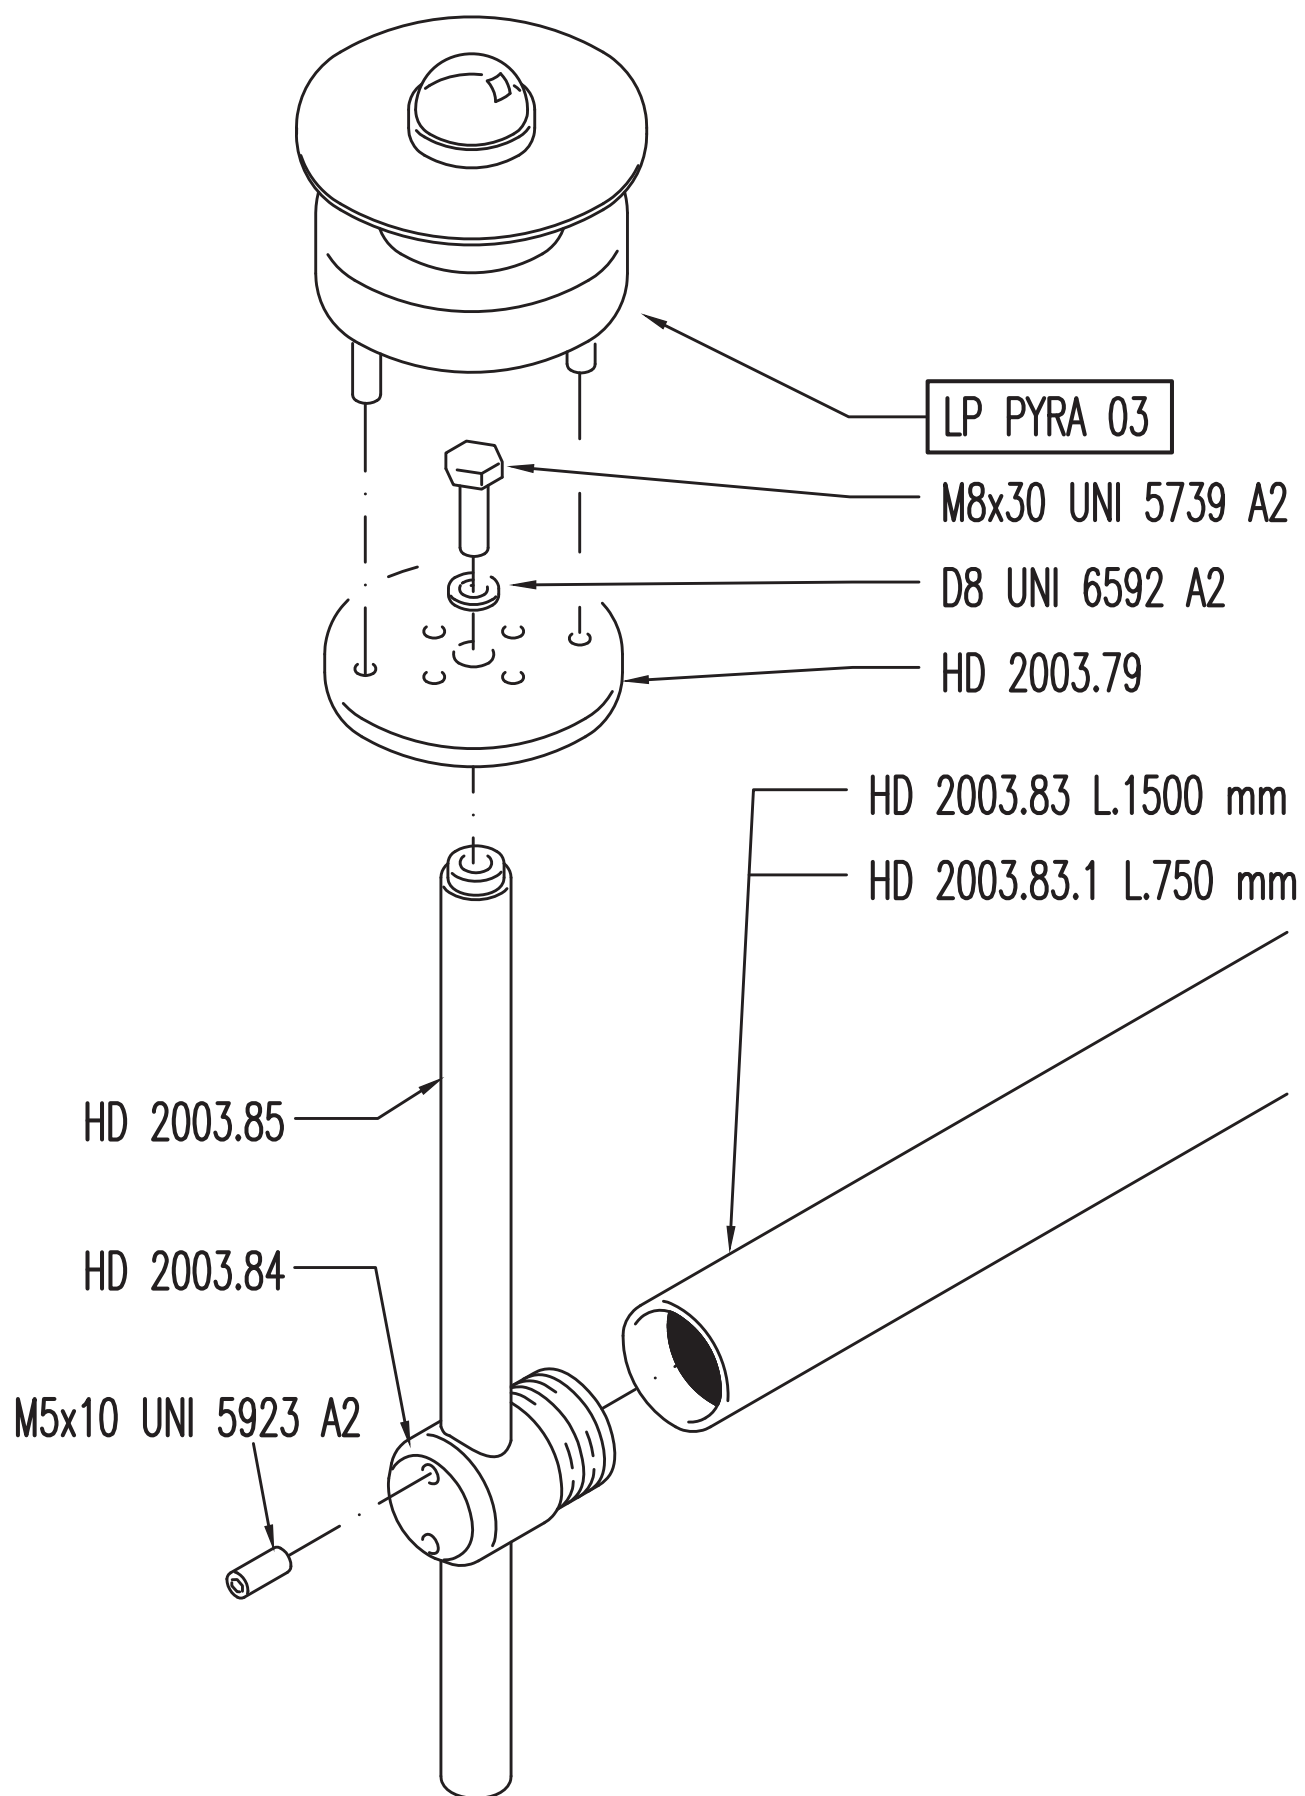

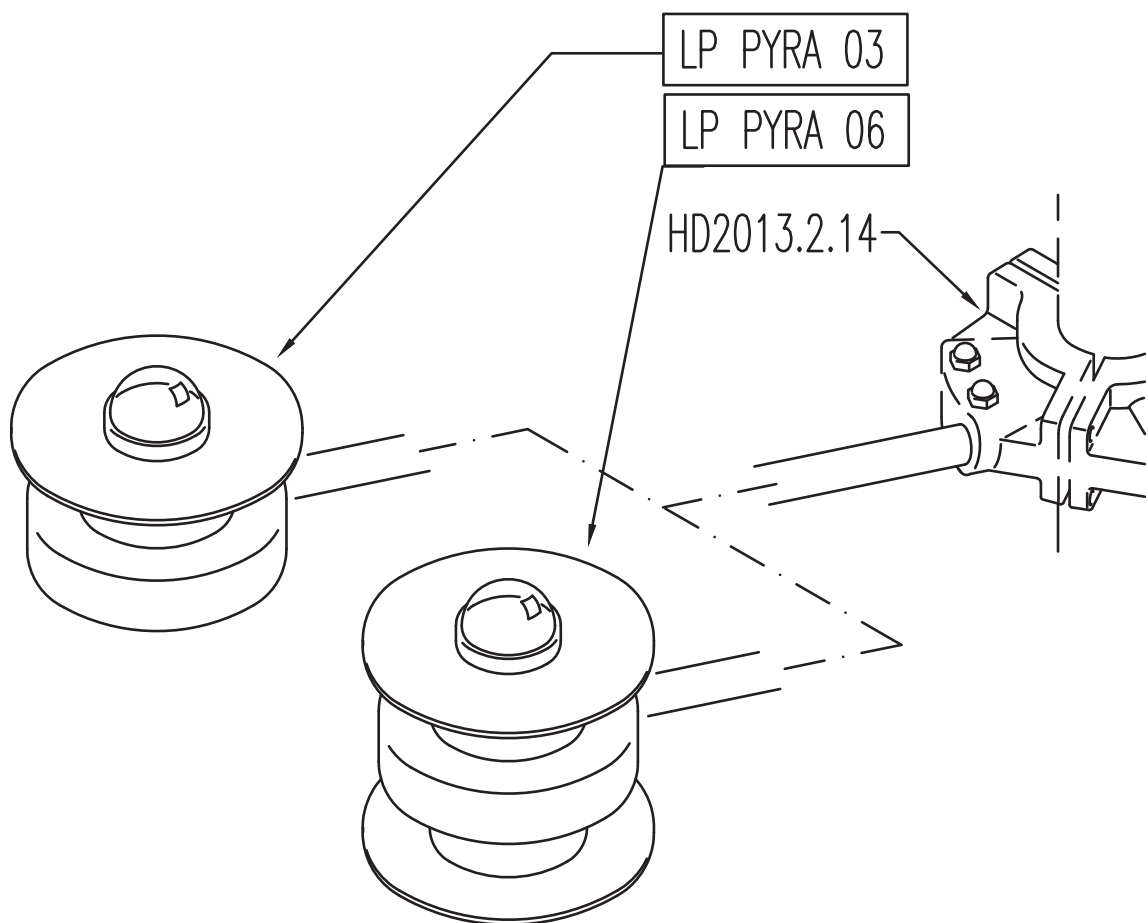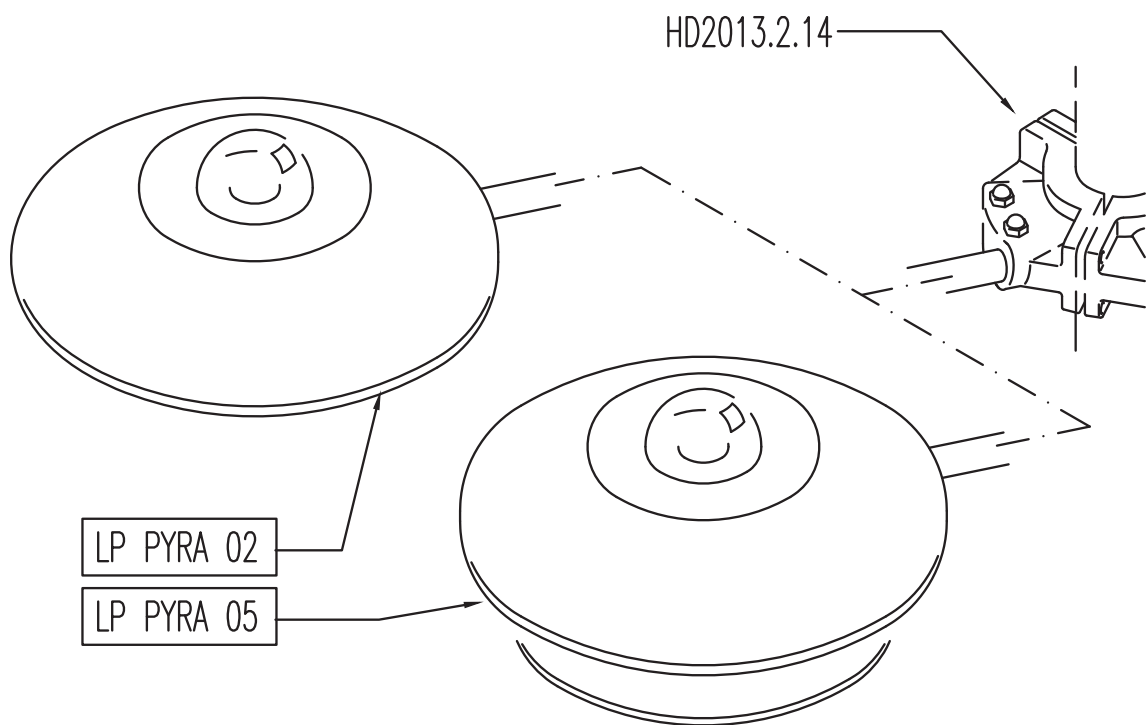



## NOTES

---

## NOTES

---

# CERTIFICATO DI CONFORMITÀ DEL COSTRUTTORE

MANUFACTURER'S CERTIFICATE OF CONFORMITY

rilasciato da

issued by

**DELTA OHM SRL** STRUMENTI DI MISURA/MEASURING INSTRUMENTS

**DATA**  
DATE

2011/05/16

Si certifica che gli strumenti sotto riportati hanno superato positivamente tutti i test di produzione e sono conformi alle specifiche, valide alla data del test, riportate nella documentazione tecnica.

*We certify that below mentioned instruments have been tested and passed all production tests, confirming compliance with the manufacturer's published specification at the date of the test.*

La riferibilità delle misure ai campioni internazionali e nazionali è garantita da una catena di riferibilità che ha origine dalla taratura dei campioni di prima linea dei laboratori accreditati di Delta OHM presso l'Istituto Primario Nazionale di Ricerca Metrologica.

*The traceability of measures assigned to international and national reference samples is guaranteed by a reference chain which source is the calibration of Delta OHM accredited laboratories reference samples at the Primary National Metrological Research Institute.*

**Tipo Prodotto:** Data logger programmabile


*Product Type:* **Programmable Data logger**

**Nome Prodotto:** HD32MT.1

*Product Name:*

**Responsabile Qualità**

Head of Quality

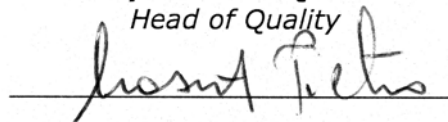

**DELTA OHM SRL**

**35030 Caselle di Selvazzano (PD) Italy**

**Via Marconi, 5**

Tel. +39.0498977150 r.a. - Fax +39.049635596

Cod. Fisc./P.Iva IT03363960281 - N.Mecc. PD044279

R.E.A. 306030 - ISC. Reg. Soc. 68037/1998

# GUARANTEE



## TERMS OF GUARANTEE

All DELTA OHM instruments are subject to accurate testing, and are guaranteed for 24 months from the date of purchase. DELTA OHM will repair or replace free of charge the parts that, within the warranty period, shall be deemed non efficient according to its own judgement. Complete replacement is excluded and no damage claims are accepted. The DELTA OHM guarantee only covers instrument repair. The guarantee is void in case of incidental breakage during transport, negligence, misuse, connection to a different voltage than that required for the appliance by the operator. Finally, a product repaired or tampered by unauthorized third parties is excluded from the guarantee. The instrument shall be returned FREE OF SHIPMENT CHARGES to your dealer. The Italia Law and the jurisdiction of Padua, Italy, applies in any dispute.



The electrical and electronic equipment marked with this symbol cannot be disposed of in public landfills. According to the UE Directive 2002/96/EC, the European users of electrical and electronic equipment can return it to the dealer or manufacturer upon purchase of a new one. The illegal disposal of electrical and electronic equipment is punished with an administrative fine.

This guarantee must be sent together with the instrument to our service centre.

IMPORTANT: Guarantee is valid only if coupon has been correctly filled in all details.

**Instrument Code**                      **HD32MT.1**

Serial Number \_\_\_\_\_

## RENEWALS

Date \_\_\_\_\_

Inspector \_\_\_\_\_

Date \_\_\_\_\_

Inspector \_\_\_\_\_

Date \_\_\_\_\_

Inspector \_\_\_\_\_

Date \_\_\_\_\_

Inspector \_\_\_\_\_

Date \_\_\_\_\_

Inspector \_\_\_\_\_

Date \_\_\_\_\_

Inspector \_\_\_\_\_



### CE CONFORMITY

The product complies with 2004/108/CE (EMC) and 2006/95/CE (low voltage) directives, and meets the requirements of the following technical standards:

Safety	EN61010-1
Electrostatic discharge immunity test	EN61000-4-2 Level 3
Radiated, radio-frequency, electromagnetic field immunity	EN61000-4-3 Level 3
Electrical fast transient/burst immunity	EN61000-4-4 Level 3
Immunity to conducted disturbances, induced by RF fields	EN61000-4-6
Voltage dips, short interruptions and voltage variations immunity	EN61000-4-11
Radio disturbance characteristics (conducted and radiated emissions)	EN55022:2007 class B