

TMI-Orion

CERAMICS

TILES

BRICKS

HIGH TECHNOLOGY


DATA LOGGING SOLUTIONS



www.tmi-orion.com

TMI-Orion

Ceramics Tiles Bricks

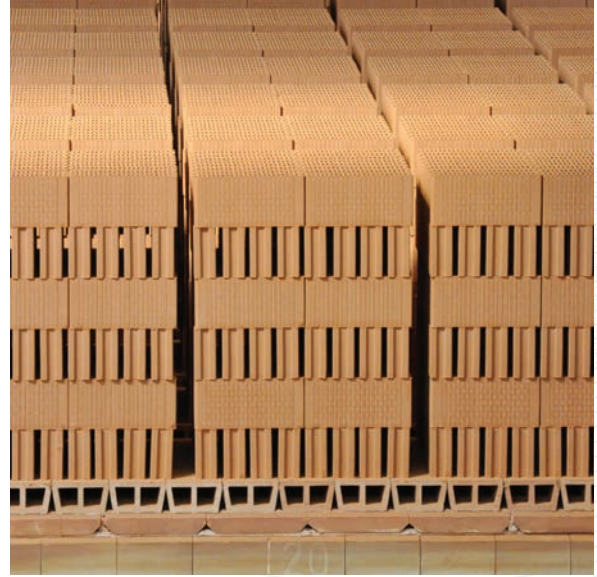

TMI-Orion presents a full range of high technology data loggers designed for ceramics, tile and brick industries, measuring temperature, humidity, air flow and shrinkage in harsh environments during curing and drying processes.

TMI-Orion data loggers work with a dedicated software allowing visualization and data management.


TMI-Orion data logging solutions for the ceramics, brick and tile industries combine performance, reliability and lasting quality.

THE COMPANY

TMI-Orion has been a world leader in the design and manufacture of high level solutions for measurement, validation, quality control and process control in harsh environments since 1994.

TMI-Orion offers a wide range of real time and wireless 2.4 GHz data loggers, and a software platform for the

management and visualization of process data. Thanks to its 20-year strategy of scientific research and industrial development, the company is able to create sophisticated solutions to meet technological challenges and to answer the needs of its customers demanding applications. Thanks to a high level of adaptability, TMI-Orion can also design customized solutions, in close cooperation with customers.

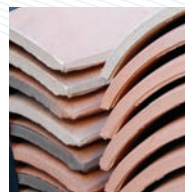

INDUSTRIAL PROCESSES OF CERAMICS, TILES AND BRICKS INDUSTRIES

After clay extraction, the paste is shaped or cast to create objects. TMI-Orion solutions are used to monitor and optimize processes during drying and curing phases.

DRYING

Drying is generally processed in a tunnel dryer or in chambers where the products are piled on carts and swept by hot air flow.

TMI-Orion solutions enable the manufacturer to operate the industrial drying process validation considering 2-level controls:

- Room: Air temperature, room humidity, air velocity


- Drying objects : dimensional variations (shrinkage percentage), internal temperature.

TMI-Orion solutions combine data loggers, a communication interface and Qlever software platform.

The loggers mentioned below can be combined together to manage the process parameters.

Air temperature, room humidity and product shrinkage

TMI-Orion solutions

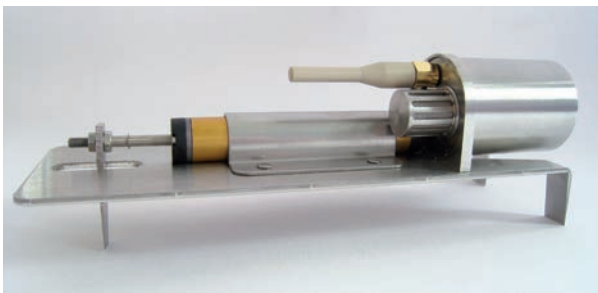

CeriDry FullRadio

Data logger

CeriDry
or High-T-Dry

Software

Qlever software platform
+ Qlever Ceramics module

Connectivity

Wired interface
or 2.4 GHz radio transceiver for real time transmission

Air velocity and product/air temperature

TMI-Orion solutions



NanoVACQ Ad

Data logger

NanoVACQ Ad or NanoVACQ Ad-Tc or NanoVACQ Ad-Td

Software

Qlever software platform
+ Qlever Ceramics module

Connectivity

Wired interface
or 2.4 GHz radio transceiver for real time transmission

Temperature mapping in various points of the dryer

TMI-Orion solutions



VACQ xFlat 2.8

Data logger

VACQ xFlat

Software

Qlever software platform
+ Qlever Ceramics module

Connectivity


Wired interface
or 2.4 GHz radio transceiver for real time transmission

CURING

After drying, the carts are sent to the tunnel kiln for curing and move through the kiln in successive pushes. During the curing phase and the progress of the carts, the temperature profile is carefully controlled.

The acquired time-stamped data must be related with the exact position of the controlled cart in the tunnel kiln.

The manufacturer then has to analyze the measured data and take corrective actions throughout the process to reach and maintain the expected quality.

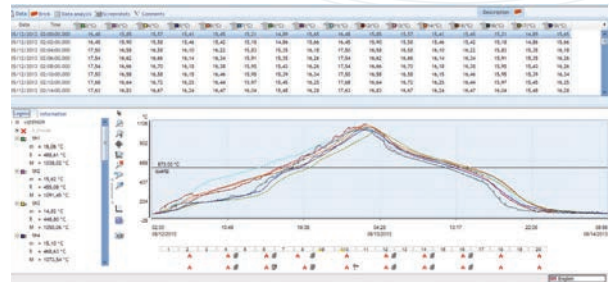

Curing thermal profile

Thermal profile mapping in various points of a cart load during the entire industrial curing cycle

Real time or after the process visualization of the data on the PC, with software description of the kiln and cart load configuration. 8 or 16 thermocouple probes are placed at different points of the cart while the VACQ III autonomous data logger, protected by a thermal shield, is fixed under the cart.

TMI-Orion solutions



Data logger

VACQ III or VACQ III FullRadio

Software

Qlever software platform
+ Qlever Ceramics module

Connectivity

Wired interface or 2.4 GHz radio transceiver

Software

Qlever is a software solution for the acquisition, analysis and visualization of data measured by TMI-Orion autonomous data loggers.

Qlever is the general platform of our software offering. It operates alone or in combination with one or several industry specific software modules.

- **Qlever:** Software platform dedicated to the management of one or several TMI-Orion data loggers. Set up and programming of TMI-Orion equipment, data collection, processing, analysis and display.

- **Qlever Lite:** Simplified software solution intended for managing a single wired TMI-Orion data logger. Cannot be combined with any of the software modules.


- **Ceramics module:**

Kiln description: Kiln length - number, length and duration of pushes

Load description: Positioning and 3D visualization of thermocouple probes

Kiln configuration: Position of burners, probes, fans...


Pushes and events management: Cart thermocouple probes temperature visualization according to cart localization inside the kiln.

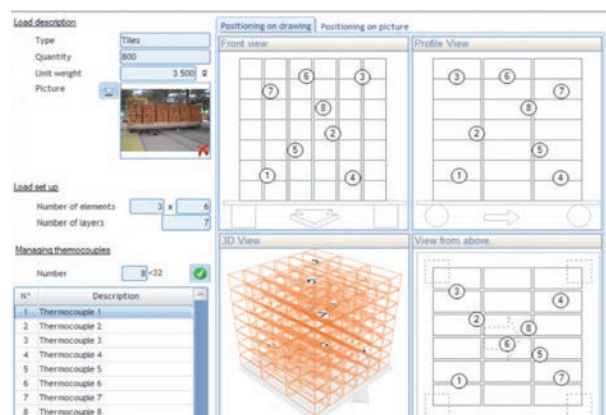

TMI-ORION PRODUCTS PORTFOLIO FOR CERAMICS INDUSTRY

You will find here a choice of data loggers for ceramics industry processes : temperature, relative humidity, air velocity, shrinkage.

- **CeriDry, CeriDry FullRadio** : Air temperature, air humidity and shrinkage.

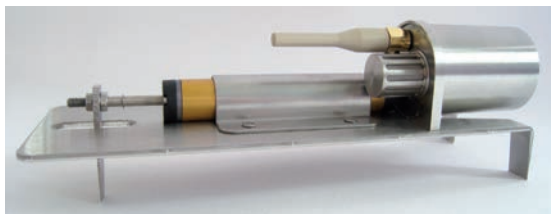

CeriDry FullRadio

- **CeriDry Split, CeriDry Split FullRadio** : CeriDry split in two parts, temperature and humidity data logger on one side, retractometer on the other side, for perfect flow of hot air.



CeriDry Split

- **NanoVACQ HT, NanoVACQ HT FullRadio** : Air temperature and air humidity



NanoVACQ HT

- **NanoVACQ Ad**: Remote anemometer
- **NanoVACQ Ad-Tc**: Air temperature + remote anemometer
- **NanoVACQ Ad-Td**: Air temperature with remote sensor + remote anemometer



NanoVACQ Ad

- **High-T-Dry, High-T-Dry FullRadio**: Air temperature with remote sensor (Max 250°C) + remote electronic retractometer placed inside a water thermal shield.



High-T-Dry

- **VACQ III, VACQ III FullRadio**: with 8 or 16 type K thermocouples connectors (Max 1300°C) placed inside a water thermal shield



VACQ III with interconnection box

- **VACQ xFlat, VACQ xFlat FullRadio**: with 16 type T or K thermocouples connectors.



VACQ xFlat 2.8 FullRadio

Connectivity and accessories

- USB wired interface (for connection to the PC)
- 2.4 GHz radio transceiver connected to the PC (for Radio and FullRadio loggers)
- User replaceable batteries or battery packs.

Services

- Calibration and adjustment of sensors: recommended every year
- After-sales services: metrology, repair, assistance, hotline
- Design of custom solutions (products and software)

Visit www.tmi-orion.com for information on other TMI-Orion products and list of business partners.

TMI-Orion CERAMICS TILES BRICKS



www.tmi-orion.com

Headquarters: TMI-Orion S.A.
Parc Bellegarde - Bâtiment A
1, chemin de Borie
34170 Castelnau-le-Lez - France
T.: +33 (0)4 99 52 67 10 – F.: +33 (0)4 99 52 67 11

USA : TMI-USA, Inc.
11491 Sunset Hills Road, Suite 310
Reston, VA 20190 - USA
T : +1 703 668 0114 – F : +1 703 668 0118

www.tmi-orion.com

© 2017 TMI-Orion. All rights reserved. VACQ and NanoVACQ are registered trademarks of TMI-Orion. Qlever and FullRadio are registered trademarks of TMI-USA. Windows is a registered trademark of Microsoft Corporation.

This document is not contractual. Our products and solutions are often updated, please contact our Sales department. Photo credit : ©Fotolia / TMI-Orion